


# Portable Speaker

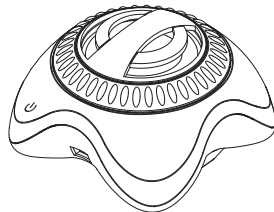

## User Manual

Please read this manual carefully before operating the speaker system

Copyright©2011  
All Rights Reserved.  
Manual Edition 1.1, July.2011  
Printed in CHINA

 
Product Made in China

## Opening The Packing

Please check the speaker Model number marked on the packing carton. Please contact the seller as soon as possible if you find the speaker is the incorrect model or has sustained shipping damage.

### Packing list:

- 1 x Stereo Speaker
- 1 x User Manual
- 1 x USB connector




⚠ This cable is not compatible for data connectivity with other devices. It is intended for this product only.



### Warning!


This device contains an internal power supply. Please read the manual carefully before usage.

## Charging

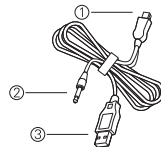

### Charging Instructions

 - ①. USB c charge/audio input
- ②. 3.5mm audio plug.
- ③. Standard USB connector.



1. Connect the USB connector (①) to the speaker and connect the USB end (③) to a computer to charge.
2. A red light on the speaker indicates that the speaker is charging. When the light turns blue, the speaker is fully charged. A full charge will take approximately 2 hours.




This cable is not compatible for data connectivity with other devices. It is intended for this product only.


## Diagram and Function Description

This speaker allows you to coil the 3.5mm audio plug and cord around the base of the speaker for convenient storage.

### ①. Bottom of the speaker

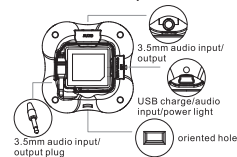

### ②. Face of the speaker

 

### ③. Close the resonator

 


### ④. Open the resonator




## Single Play

1. A single speaker may be used:




2. Multiple speaker units may be connected together.  
(Patented Technology)

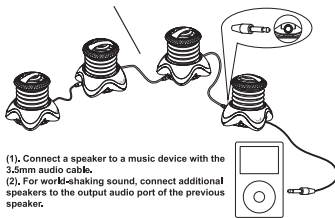

- (1). Connect a speaker to a music device with the 3.5mm audio cable.
- (2). For world-shaking sound, connect additional speakers to the output audio port of the previous speaker.

## Patented Technology

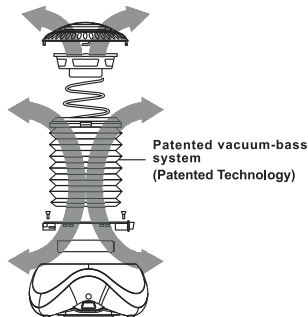

## How to open/close the speaker resonator



**Step 1**  
Hold speaker firmly by its base and top cap.



**Step 2**  
Turn top cap counter-clockwise (5mm).



**Step 3**  
Loosen the cap, and it will spring up to expand the resonator.



**Step 4**  
Hold speaker firmly by its base & press top cap toward speaker base.



**Step 5**  
Turn top cap clockwise (5mm).

## Specifications

### MODEL:C1

Dimension:(L)68.5MMX(W)68.5MMX(H)42MM  
(Closed Mode)

Net Weight:96g

Speaker:  $\phi$  40MM

Input:L/R360mV

Power Output:3W

S/N: $\geq$ 80dB

AMP Freq Range:180Hz-16KHz

Charge Voltage:5V $\pm$ 0.5V

Suitable Temperature:0 $^{\circ}$ C-40 $^{\circ}$ C

Charging Time: 2hours



Caution: Do not pull the extendable resonator forcibly, this may cause damage to the unit!

