

**Music Mode·Video Mode**

@+A is for Music Mode. The volume is controlled with the rocker in standard mode A for pause or play, C/D for volume up/down. Some brands of mobile phones support video playing in music mode. A for play, pause and touch hold for fast forward.

**Game Mode (Landscape)**

@+B is for landscape gamepad game mode. The direction is controlled by the rocker, D for shooting, A for taking off. It depends on keyboard of different brands of mobile phone.

**VR Mode Self-timer Mode·Video Mode**

@+C switches to VR Mode. When playing game, the direction is controlled by rocker, the front side key for shooting and taking

@+C switches to Self-timer Mode. Some brands of mobile phone possibly do not support self-timer. Mouse mode self-timer is advised by @+D.

@+C switches to Video Mode when the rocker control is fast-forward-fast-backward. Some brands of mobile phone possibly

do not support volume control.

**Mouse Mode·Self-timer Mode**

@+D switches to Mouse Mode when the rocker controls mouse. D for volume and A/B for confirm and quit.


When some brands of mobile phone are not to be used under self-timer mode, the mouse mode is suggested.

**Apple IOS System**

needs to switch the side key to IOS direction to realize mobile connection due to the unopened IOS system. The C key is for self-timer and C/B for the volume up and down, A for mute.


**Simple operation instruction please open battery cover**

Click up bottom of battery cover by Phone Touch to see simple operation operation.

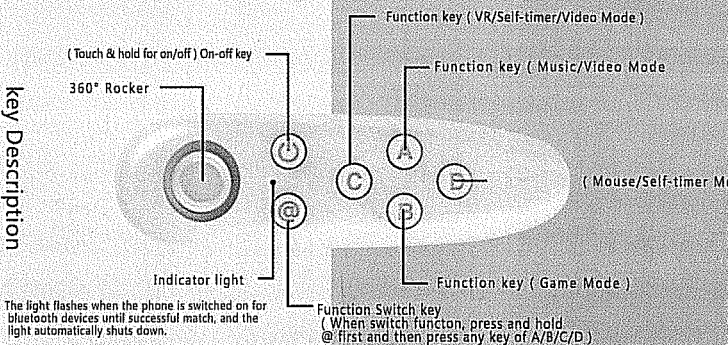

**key Description**

The light flashes when the phone is switched on for bluetooth devices until successful match, and the light automatically shuts down.

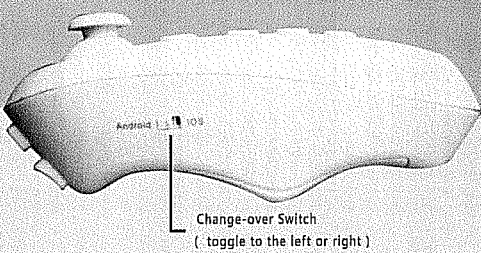

**Change-over Switch**  
( toggle to the left or right )

**Change-over switch for Android apple.**

Product model:	VR-PARK
Size:	118*33*42MM
Wireless Protocol :	Bluetooth 3.0 compliant
Support System :	Android/IOS/PC
Support Game :	Android/PC ( GAMEPAD )
NES/GB/SMDSX/GB/C/N/64/MAME; AndroidAPK	
Game Apple/IOS:cade Game	
CPU:	ARM968E-S Coer
Battery:	two 7th batteries of RC3 1.5 v
Working Current:	0.5-8Ma Standby Current 0.5-1mA
Shutdown Current :	0
Continuous Game Time:	about 40-120 hours

**FAQ:**

- 1.Low battery may cause the rocker not sensitive. Please replace the battery.
- 2.When it fails in connection with the bluetooth pairing, please restart your call phone to connect again
- 3.Using the WIFI will affect the bluetooth connection.
- 4.Some brands of mobile phone keyboard settings may be non-standard Android keyboard, when this bluetooth gamepad is designed for the standard Android system which may not perform well or mismatch after connection. Please select @ + any key of A, B, C, D to test the match.
- 5.If there is a crash, please unplug battery and put it on.
- 6.Applied for games such as Angry Robot, Hatsune Miku, the PC version of Eternity Warriors, and so on.
- 7.When there is any problem in using bluetooth devices, please scan the QR code below to enter our company's public Wechat platform, and put forward your valuable advice. We will continue to improve the applicability of the bluetooth device.