

Operation Instruction Of All-purpose Air-conditioner Remote Control

Default Function






Once powered, this product is able to be used to control: products of such brands as Gree, Midea.

Settings Of The Remote Control

A > Point-to-point topspeed searching of brands

1. Manually turn on the air-conditioner, and point the remote control towards the reception window of the air-conditioner.
2. Press on the "code" key corresponding to your air-conditioner brand until the air-conditioner automatically activates with a "beep" sound.

Brand Code Button Table

1 FAST HEAT CHIGO / TCL	2 Fast Cool MIDEA / CHANGHONG	3 TIME ON	4 TIME OFF
5 E. A. HEATING FRESTECH / YAIR	6 LIGHT	7	8
9	0 C/F	 Temp+ LG / SAMSUNG	 Temp- SHINCO / AUCMA
 Fan DAIKIN / CARRIER	MODE MODE GREE / HUALING	 Manual Wind HITACHI / PANASONIC	 Auto Wind SHARP / SANYO

B > Fully-automatic search applicable model

1. Manually switch on the power supply of the air conditioner and point the remote control to the receiving window of the air conditioner.
2. Keep pressing the "Set" button for about 6 seconds. Carefully observe the status of the air conditioner when the model code " --- " flickers in the window. Do not immediately loosen the button until the air conditioner starts automatically.
3. Check whether the button function is correct. If yes, the code would be valid. If not, please repeat the step 2-3.

C > Method of inputting code by digit

1. Manually switch on the power supply of the air conditioner, find the model corresponding to the air conditioner you are to control remotely in "Code List" and find the first group of codes.
2. Firstly keep pressing "Set" button and then press "Power" button at the same time. Don't loosen the two buttons until the model code flickers in the window.
3. Directly input the first group of 3-digit code you have found.
4. Check whether the function of various buttons is correct. If yes, the setting is finished. If not, please repeat step 2-3 and input other group of codes the brand corresponds to.

D > Manual code inputting method

1. Manually switch on the power supply of the air conditioner, find the model corresponding to the air conditioner you are to control remotely in "Code List" and find the first group of codes.
2. Firstly keep pressing "Set" button and press "Power" button at the same time. Do not loosen the two buttons until the model code flickers in the window. Then press "TEMP ▲" button until the code needed is shown in the window and flickers. The air conditioner will automatically start if the code is correct.
3. Check whether the function of various buttons is correct. If yes, the setting is finished. If not, please repeat step 2-3.

E > Manual code searching method

1. Manually switch on the power supply of the air conditioner and point the remote control to the receiving window of the air conditioner.
2. Firstly keep pressing "Set" button and press "Power" button at the same time. Do not loosen them when the model code flickers in the window. Then press "TEMP ▲" button and carefully observe the status of your air conditioner. Press "Set" button for exit when the air conditioner automatically starts.

Reset to Default

Restore factory settings: synchronously press "Set" + "WIND" button for 3 seconds and then factory settings restoring is done.

Some Remote Control Has the Following Functions (Referring to the Remote Control Panel)

1. Rapid cooling and rapid heating button

Press "COOL" (Fast Cool) button to automatically set the cooling mode: 21℃, strong breeze, automatic wind.

Press "HEAT" (Fast Heat) button to automatically set the heating mode: 27℃, strong breeze, automatic wind.

* Under the heating mode, press "HEATING" (Electric Auxiliary Heating) button to start the electric heating function. This function is applicable to some models.

2. Timing on and off function

Equipped with the timing function of original remote control; after pressing "TIME ON" or "TIME OFF" button, the timing indicator of the air conditioner will be lighted up, indicating that it has entered timing status.

3. Child-lock function setting

Locking: press "Set" button and "Automatic Wind" button synchronously and the display screen will display "Child-lock" icon.

Unlocking: press "Set" button and "Automatic Wind" button synchronously and the "child-lock" icon on the display screen will disappear.

4. Clock function setting

1. Keep pressing the "Set" button and "Mode" button synchronously. When the corresponding digit begins to flicker, it means it has entered clock setting.

2. Press Temp ▲ (or Temp ▼) button for 1 hour increasing (decreasing). You can keep pressing for 2 seconds for continuous increase or decrease.

3. Press "Set" button for hour-setting completion.

4. At this point, the digit the minute corresponds to begins to flicker. You may use Temp ▲ (or Temp ▼) button for minute setting.

5. After minute setting, press "Set" button to exit the clock setting.

5. Temperature measurement

Indoor temperature will be displayed after battery is fixed in; range of temperature measurement: 0~35 degree.

6. Fahrenheit function "C/F"

Press key "C/F" to switch between "Celsius" and "Fahrenheit".