


C1060 instructions




Secure wire hook to speaker hanging frame & terminate in/out speaker connections to plug.

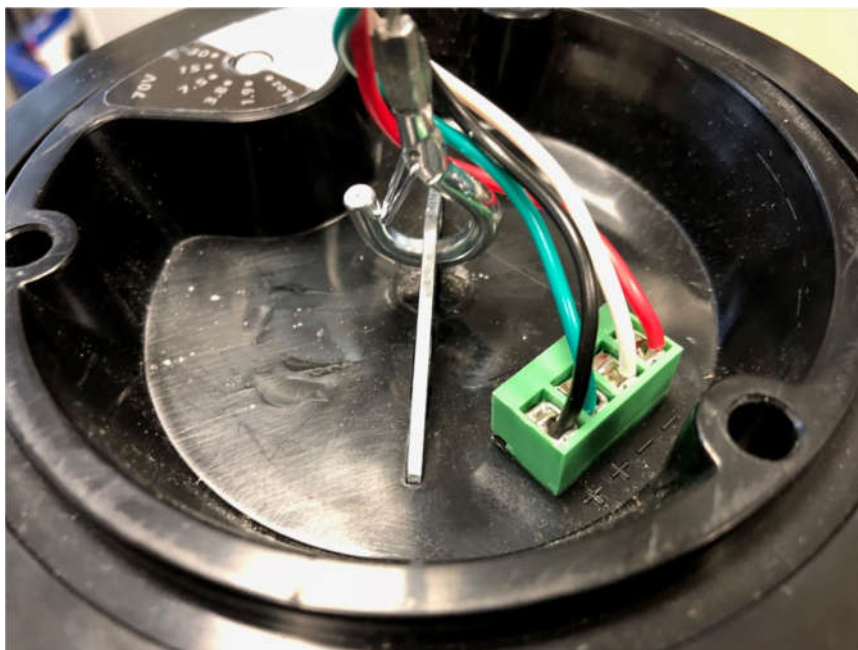

Thread cable through speaker cap & secure cap to speaker.



Thread cable though ceiling rose cover.

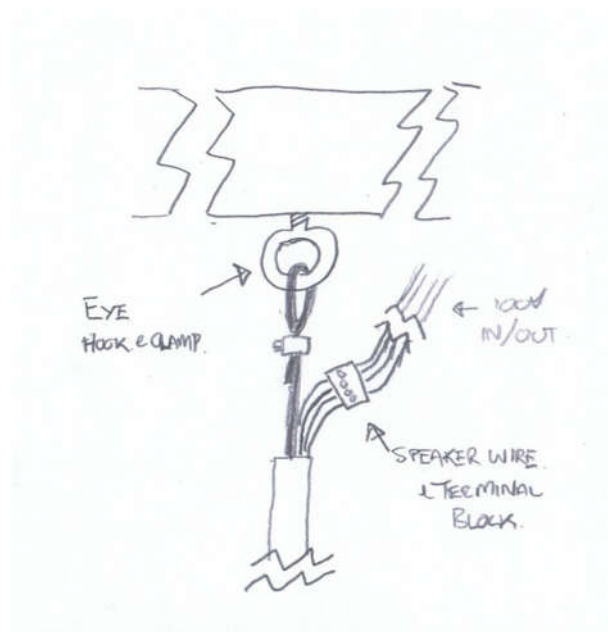

Use an eye bolt and wire clamp or similar (not supplied)

& secure the cable to the ceiling (use appropriate fixing, subject to the surface you are mounting to.)



Push ceiling rose cover over the ceiling mount and tape in place using insulation tape.