 


*Opus One*

**C 5064**

**Bookshelf Bluetooth 50W Speaker Pair**

**USER MANUAL**

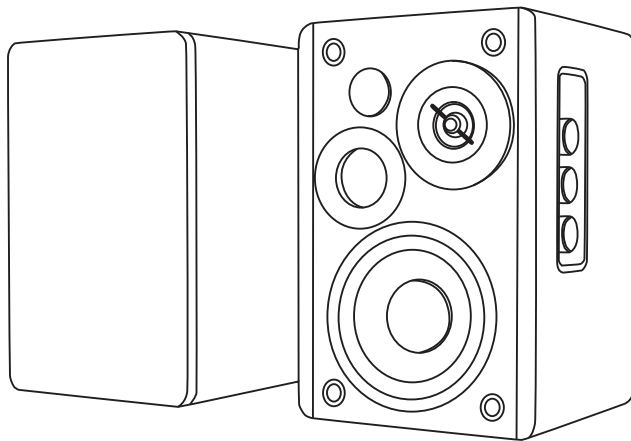

**Introduction**

This Opus One Bookshelf Speaker Pair will enhance your experience of TV, movies and games. The speakers are equipped with digital signal processing (DSP) and dynamic range control (DRC) to prevent distortion. Featuring solid MDF construction with a stylish wood finish, the trapezoidal enclosure and front facing bass reflex port helps to direct sound outward from its 116mm (4") bass driver and 13mm silk dome. Fitted with RCA stereo inputs allowing connection to analog audio sources. USB Connection provided for playback or MP3 files from a USB drive/memory stick. Alternatively, users can pair their compatible smart devices through with Bluetooth connection for instant audio streaming. Side mount level, bass and treble controls make adjustments easy.

The speakers feature optical input for digital audio. Sold in pairs.

**Features**

- Stylish MDF Construction
- Compact Sleek Design
- USB Connection
- Combined power of 50W
- Digital Signal Processing
- 10m Bluetooth distance

**Box Contents**

- 1x Active Speaker
- 1x Passive Speaker
- 1x Remote control
- 1x Dual RCA to dual RCA audio Cable
- 1 x 3.5mm to dual RCA audio connecting cable
- 1 x Optical Cable
- 1 x Speaker Connecting Manual
- 1x AC adaptor
- 1x User Manual

 
**Specifications**

Size:	14.6 x 16.4 x 240 cm
Channel:	2.0
Power Output:	L/R: 25W+25W
Signal to noise ratio:	L/R: ≥85dB (A)
Input:	Bluetooth, RCA, Optical, USB
Input Sensitivity:	LINE IN1: R/L: 500±50mV
	LINE IN2: R/L: 700±50mV
	OPT: R/L: 500±50mFFS
	Bluetooth: R/L: 700±50mFFS
Noise Level:	≤25dB (A)
Adapter Power:	19V DC / 1.89A (Adapter)
DSP:	Movie / Music / News Audio Mode
Material:	MDF/ABS + Fabric cloth
Frequency Response:	40HZ-20KHZ
Bass Unit:	4 inch (116mm)
Tweeter Unit:	Φ13mm silk dome tweeter


## Box Contents Diagram




Speaker connecting cable (2. 5M / 8.2ft)



 
3.5mm-RCA audio cable (1.5M / 5ft)




RCA to RCA audio cable (1.5M / 5ft)

 

Fiber optic input cable (1. 5M / 5ft)

 

Power adapter

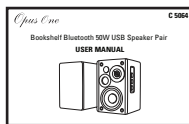 


User manual

 Remote control






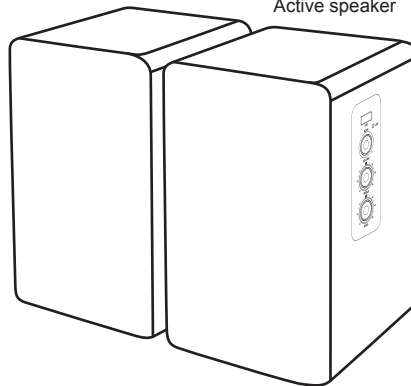


Passive speaker

 
Active speaker

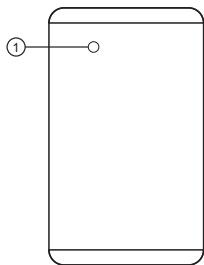


## Speaker Controls



 - 1. Infrared receiver
- 2. USB input port
- 3. LED indicator
-  Light Blue: Line in 1
-  Orange: Line in 2
-  Blue: Bluetooth
-  White: Optical
-  Purple: USB

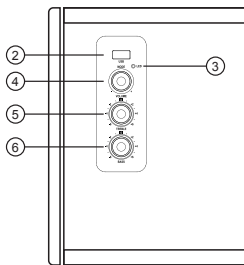


 - 4. Master volume control / input selection  
Press in to navigate between audio sources:  
Line in 1 -> Line in 2 -> Optical -> Bluetooth -> USB
- 5. Treble dial
- 6. Bass dial
- 7. Line in 1 input port

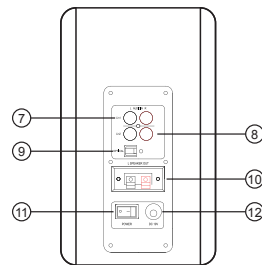

- 8. Line in 2 input port
- 9. Optical input port
- 10. Speaker output
- 11. Power switch
- 12. Power cord

## Remote Control



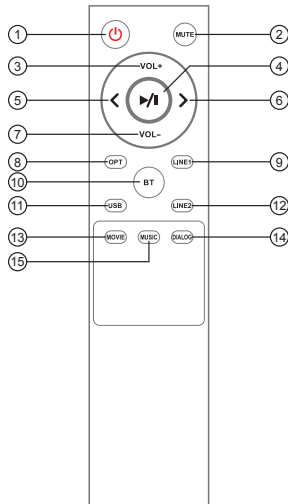 


1. Power ON/OFF
2. Mute/Unmute
3. Volume increase
4. Pause and play
5. Previous track
6. Next track
7. Volume decrease
8. Optical mode
9. Line in 1 mode
10. Bluetooth input (Press and hold to disconnect Bluetooth devices)
11. USB mode
12. Line in 2 mode
13. Recommended audio mode-MOVIE
14. Recommended audio mode-DIALOG
15. Recommended audio mode-MUSIC

### Note:

   
1. Previous Track & Next Track only works under Bluetooth or USB mode.
2. Insert 2 x AAA batteries before using.

## Connections

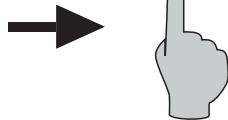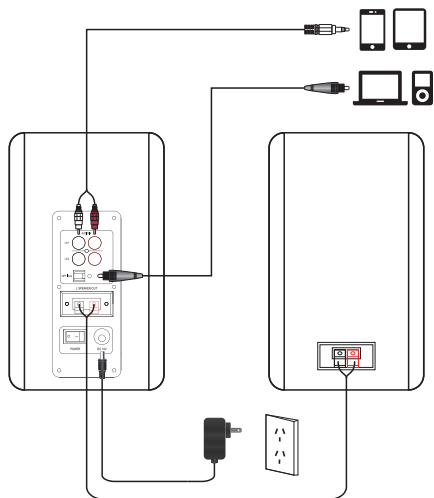


1. Connect the speakers with the included speaker connecting cable.
2. Connect to power source, power on the speaker, then the indicator is lit.

## Line in Input

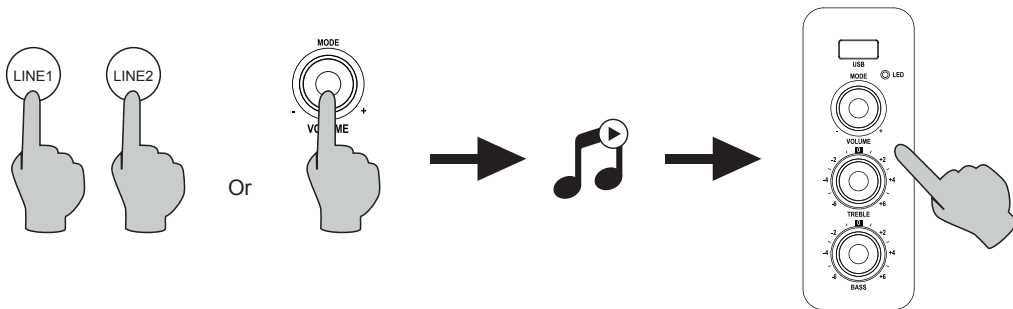 

1. Press the master volume control on the active speaker or press the "LINE 1/LINE2" button on the remote control to select LINE IN input. The indicator turns to Light Blue(Line in 1) or Orange (Line in 2).
2. Using audio cable to connect audio source to the speaker.
3. Play from your device and adjust the volume accordingly.


## Optical Input

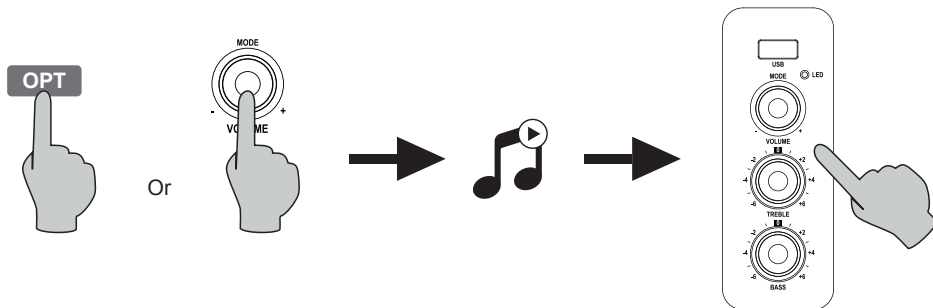 

1. Press the master volume control on the active speaker or press the "OPT" button on the remote control to select the optical input. The indicator turns to White(Optical).
2. Sing optical cable (optical cable included) to connect audio sources to your speaker.
3. Play from your devices and adjust the volume accordingly.



## Bluetooth Input

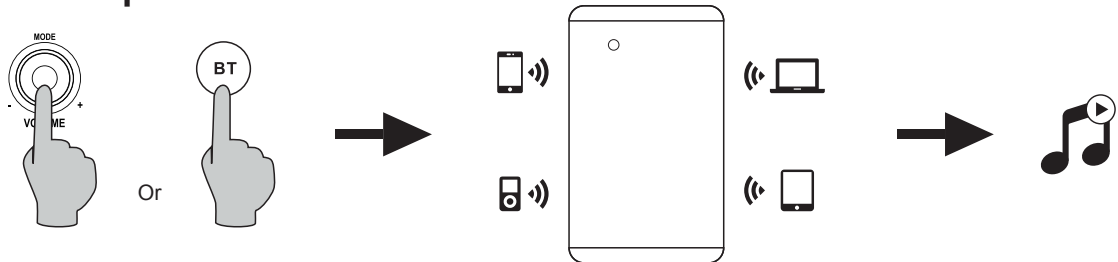 

### Pairing:

1. Turn on speaker and switch to Bluetooth mode by pressing the Bluetooth button on the remote control or press the master volume control on back panel of the active speaker, The indicator turns to blue.
2. Go to setup section on your source devices (mobile phones, tablets, etc )and search for nearby Bluetooth devices, you will find "C5064" in the list.
3. Pair your device with "C5064".
4. Play audio tracks on your device and adjust the volume to a desired level.
5. To disconnect Bluetooth, press and hold the master volume control for about 2 seconds.

### Note:

1. Bluetooth connectivity and compatibility may be different among different source devices, depending on the software versions of source devices.
2. To enjoy the full Bluetooth functions of this product, please ensure your mobile device supports A2DP and AVRCP profile.
3. PIN code for connection is "0000" if needed.

## Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenient receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the



apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Special note: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

### FCC Warnings

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in

accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Additional Warnings

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

Battery shall not be exposed to excessive heat such as sunshine, fire or the light.

Caution marking is located at the rear or bottom of the apparatus.

he marking information is located at the rear or bottom of apparatus.



This symbol indicates that this product incorporates double insulation between hazardous main voltage and user accessible parts.

## Troubleshooting

<b>Problem</b>	<b>Solution</b>
No sound	• Check if the power indicator light is ON.
	• Try to turn up the volume using either the master volume control or remote control.
	• Ensure the audio cables are firmly connected and the input is set correctly on the speakers.
	• Check if there is signal output from the audio source.
Cannot connect via Bluetooth	• Make sure the speaker is switched to Bluetooth input, in other audio input mode Bluetooth can not be paired or connected. Disconnect from any Bluetooth device by press and hold the volume dial in Bluetooth mode, then try again.
	• Effective Bluetooth transmission range is 10 meters, please make sure operation is within the range.
	• Try another Bluetooth device for connection.
The SR01 Bookshelf Speaker does not turn on	• Check if mains power is connected. or if the wall outlet is switched on.

Altronic Distributors warrants this product for 12 months from date of purchase from Altronic or its resellers to the consumer. If this item is part of an installation or another product, please contact the installer or supplier for your warranty.

During the warranty period, we undertake to repair or replace your product at no charge if found to be defective due to a manufacturing fault. The warranty excludes damage by misuse or incorrect installation (i.e. failure to install and operate device according to specifications in the supplied instruction manual), neglect, shipping accident, or no fault found, nor by use in a way or manner not intended by the supplier.

For repair or service please contact your PLACE OF PURCHASE.

If this item was purchased directly from Altronic please make a warranty claim by:

1. FOR MAIL ORDER CUSTOMERS (includes school and trade orders),
  - a) Ringing us on 1300 797 007 and quoting your Tax invoice number.
  - b) Upon contacting Altronic, we will issue an R.A. (Return Authorisation). As Altronic have a number of service agents throughout Australia, a copy of the R.A. will be emailed, faxed or mailed to you with full instructions of how and where to send the goods. The freight for shipping goods back to Altronic for all repairs is at the customers expense.
  - c) A copy of the R.A. form, (or at the very minimum, the R.A. number) must accompany the goods to effect the repair.
  - d) Altronic will pay the return freight to the customer where the warranty claim has been accepted.
  - e) Please quote the R.A. number in any correspondence to us.
  
2. FOR OVER THE COUNTER PURCHASES; to make a warranty claim, please return the goods to us in any of our stores, with a copy of your proof of purchase (tax invoice).
  - a) Upon leaving the goods at one of our stores, an R.A. (return authorisation) number will be issued to you.
  - b) Once repaired, you will be contacted, advising that the goods are ready to be collected from the store.

It is at Altronic discretion as to whether the goods will be repaired or replaced (whilst under warranty); and as to whether identical goods will be used to replace the item due to changes of models / products.

Note: Under no circumstances should you attempt to repair the device yourself or via a non-authorized Altronic service centre, as this will invalidate the warranty!

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NOT FIELD SERVICEABLE.

Distributed by Altronic Distributors Pty. Ltd. Perth. Western Australia.

Phone: 08 9428 2199

Internet: [www.altronic.com.au](http://www.altronic.com.au)