


D 2039

**Portable Rechargeable IP67
Waterproof Speaker with
Bluetooth and FM Tuner**

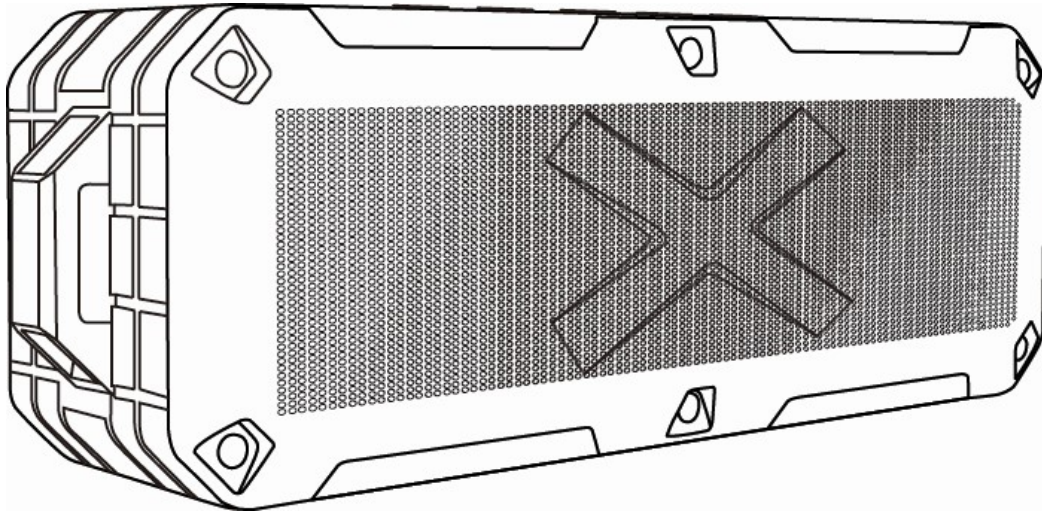

Waterproof & Floatable Speaker

Precaution:

In order to ensure proper and safe operation along with the highest level of performance, please note the following:


- Do not subject the device to severe impact or shock.
- Avoid bringing the device into contact with solvents such as benzene, alcohol, thinner or other chemicals.
- Avoid direct exposure direct sunlight or heat.
- Do not attempt to open, repair, or modify the device.
- Avoid listening at full volume as hearing damage may occur.
- Dispose of the device in accordance with local regulations for lithium batteries and electronics.
- The waterproof speakers are water ingress rated to IP67. It can play while immersed in the water for up to 3 hours. The unit also floats.

ACCESSORIES

1PCS USB Cord

1PCS Instruction Book

FUNCTIONS DIAGRAM:

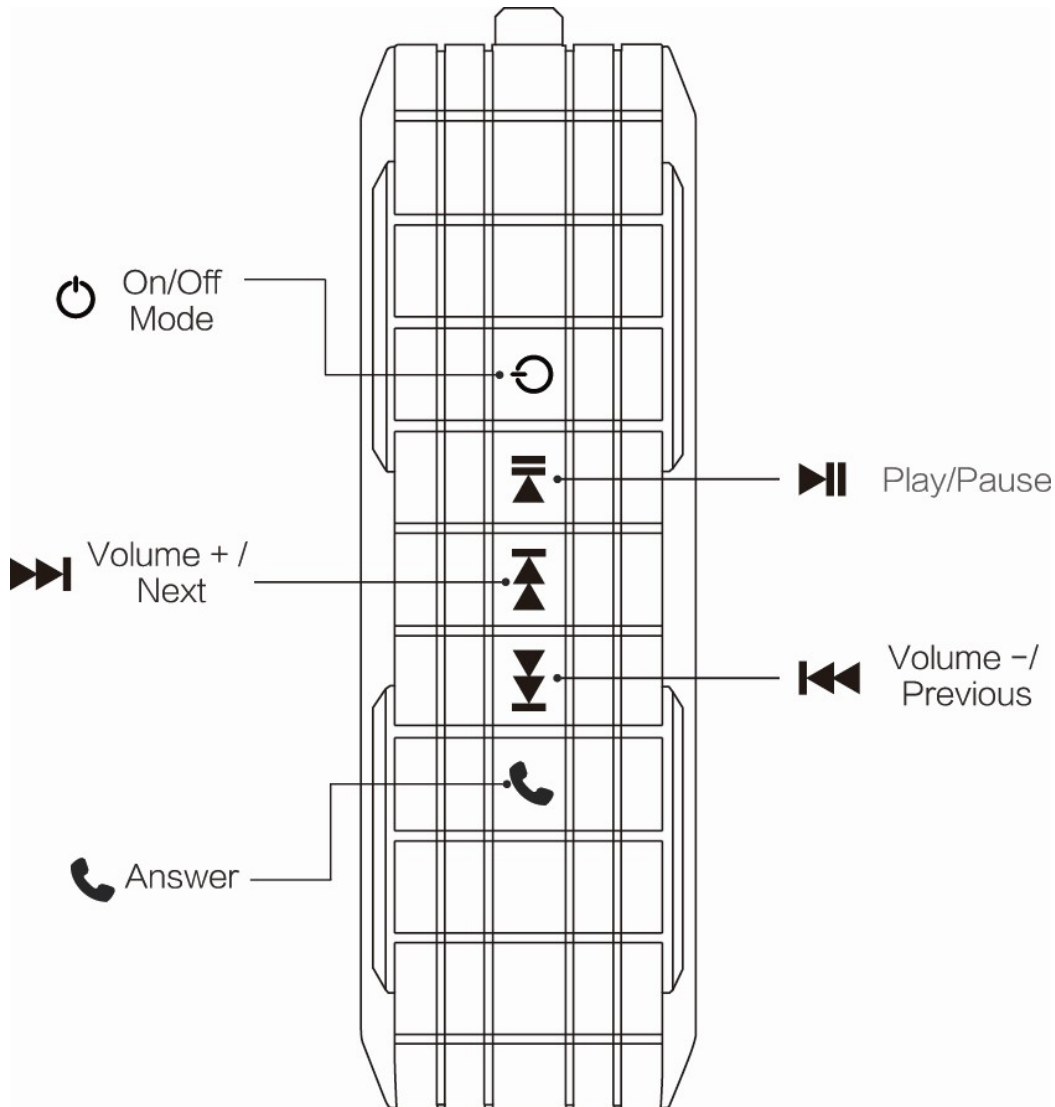

Modes: Bluetooth and FM Tuner. Long press is ON and OFF. Short press to switch modes.

Play/Pause: Long press, also search function for finding and storing FM radio frequencies.

>>| and |<< : Also Control the FM station tuning after first scanning for local stations.

Playback Functions

1. The “▶||”PLAY / PAUSE button is used to control music playback and FM Tuning. During music playback, short press the button to pause music or mute FM. In FM mode, a short press of this button will initiate a scan of frequencies. The strongest captured stations will be stored in memory.
2. Long press the “▶▶”button to increase the volume, and short press the button to play the next song <SKIP>. It also skips to the next stored FM station.
3. Long press the “◀◀”button to decrease the volume, short press the button to play the previous song. It also skips to the previous FM station frequency.
4. Press the “📞” button to answer the incoming call and long press the button to refuse the incoming calls. After answering the incoming call, click this button again to hang up the call. Also click the button twice to automatically redial the last telephone number. When there is an incoming call, the Speaker will automatically stop playing music (or radio) and play a phone ring tone.

Specifications

Wireless: 2.1+EDR

Output Power: 10W+10W

THD+N≤10%

Dustproof/Waterproof: IP67

Playtime: ≥5 hr on a full charge

Built-in Microphone: Yes

Polymer battery: 4000mAh, 3.7V

S/N: ≥80DB

Frequency Response: 80Hz-20KHz


FM Tuning: 87.6 – 108MHz

Dimensions: 268x70x100 mm

Net Weight: 836g

Operating Instructions

Pair Speakers with your Device – BT mode:

1. Press the POWER  button for a few seconds to turn the speaker on or off from any mode. The LED indicator light will flash at the same time as voice prompts "Bluetooth device is ready to pair".
2. In BT mode, turn on the BT function of your Smartphone.
3. Search for the devices and select "X2" from the list.
4. Click it and pair the speaker with your Smartphone.
5. Enter the code "0000" if needed.
6. After successfully pairing, the speaker can play music.
7. For future usage, BT pairing will be automatic at power on since the device remembers the previous device with which it was paired.

FM Mode:

1. Short press the POWER button again and the device will switch into FM mode and radio will become active. Press again to switch back to BT Mode.
2. See Playback Functions to understand FM tuning control.

USB Charging:

Connect the speaker to a computer or mobile phone via the USB charging cable. The red led light means the speaker is charging. When indicator LED goes off, speaker is fully charged. It takes about 5-6 hours to complete a full charge. A mobile power adapter (5V 1A) will be faster, taking 3-4 hours.

Speaker can be operated during charging.

Product Overview:

1. The classically designed waterproof speaker offers the potential for enhanced listening enjoyment, in stereo, whether it is being used indoors or outdoors, hiking or swimming.
2. Its wireless function makes it available to connect to your devices wirelessly. You'll never need stereo AUX cables again!
3. It has a built-in Mic speaker and a hands-free function, so you can conveniently answer a call while in a car, bathroom, swimming pool, at home or in your office, or anywhere when it is connected to your mobile phone.
4. You can hang the speaker on a cord from a hiking knapsack, or hook it to a bicycle.
5. The speaker will power down automatically if it is unused for 15 minutes.

