



Fixed Installation of TV Wall Bracket

Installation and Operation Instructions

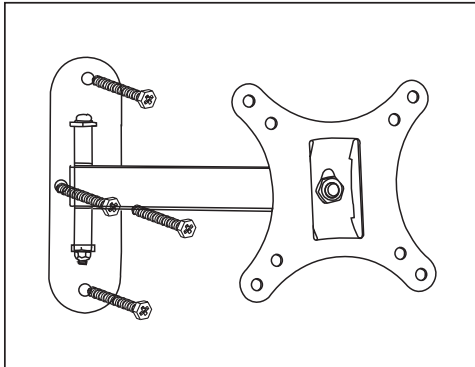


Step 1:

Position the wall plate at a desired position on the wall and level using a spirit level. Use the wall plate as the template to mark points. Drill holes at each point and insert the wall plug into the wall. Loosely fasten the bracket to the wall using lag bolts and washers. Tighten the screws on the wall plate.

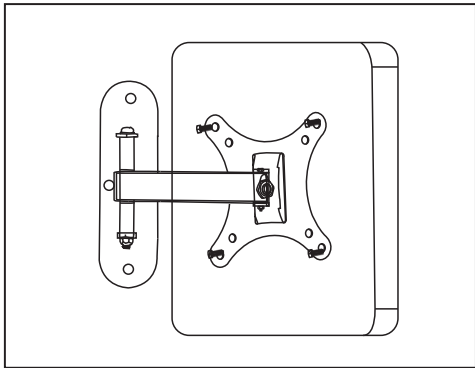

Step 2:


Firstly loosen the centre lock nut to adjust the screen tilt angle up or down. Re-tighten the lock nut and then proceed to fasten the screen to the bracket using either M4 or M5 hardware provided. Tighten the screws with washers and ensure the TV is level.

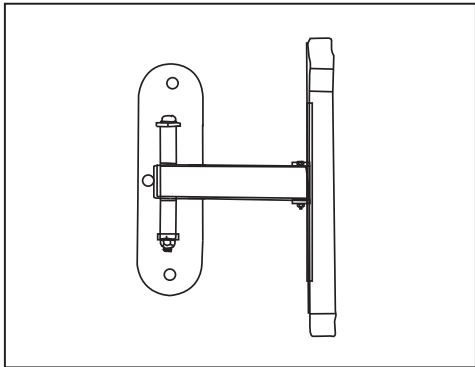

Step 3:

To adjust simply swivel the TV with your hands.

 Screws List:



Lag Bolt (4)



Wall Plug (4)



M6 Washer (4)



M5x16 (4)



M4x12 (4)



M5 Washer (4)