

# ERRATA

Dynalink remote control supplied with the kit has TV code "170 "and the "-/--" key is used to set the automatic triggering as described on pages 8 and 9, or the key with the box that has three horizontal lines in it (third last row, left side).

"-/--" key replaces the "1-" key as described on page 9 in the instructions