see anywhere

USER MANUAL

HD WiFi Inspection Camera



Version 3.1 Please read this user manual carefully before using this product. Failure to understand operation proced

GENERAL SAFETY INFORMATION

WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire and or serious personal injury.

SAVE THESE INSTRUCTIONS!

- Prevent object and liquid form entering. Never spill any kind of liquid on the video display unit. Liquid increases the risk of electrical shock and damage to the product.
- **The unit is not shock-resistant. Do not use explorer as a hammer and avoid high impact resultant from things such as dropping the unit from height.
- If immersing camera in water, please install waterproof device. Avoid moisture and store product in a dry place. Such measures reduce the risk of electric shook and damage. The lens and the tube are water resistant when the unit is fully assembled, but the wireless transmitter is not.
- ※ Do not use the camera if condensation forms inside the lens. Let the water evaporate before using again.
- % Turn off the system if it is not in use.
- ※ Attention should be given to the environmental aspects of battery disposal.
- % Please charging with 5V.
- ※ Properly dispose of batteries, Exposure to high temperatures can cause batteries to explode, so do not dispose of in a fire.

* Some countries have regulations concernning battery disposal. Please follow all applicable regulations.

WELCOME

Welcome to buy this product. Before use, please read the instrucions carefully.

This product is a utility class equipment with the function of real-time video viewing, video recording and picture capturing etc..which is suitable for usage in narrow area and the area which cannot be observed by sight, such as: vehicle repair. sewer inspection/ maintenance, etc.

FFATURES

Real-time video viewing, video recording and picture capturing;

Mini 8mm waterproof LED lens:

Waterproofing grade Ip68; 8 LED lights brightness is adjustable and lighting lamps are added;

Portable . soft extension tube which is easy to use.

PACKING LIST

Standard configuration



wireless transmitter



endoscope



charging cable



Accessories

Structure Introduction





Operating Instruction

Basic operation

 Turn the power switch, indicator on the wifi device lights up. This rotary switch is similar with a light modulator, turning it can also adjust the brightness of lens LED light.



2. When it is used in darker environment, the illuminating light can be turned on to increase the brightness.



3. This flexible tube can be bent into any shape which will be convenient for entering into any zones to check for you.

Three kinds of attachments (hook ,mirror and magnet) can help you to find out any small objects, such as ring or small screws.



Applicable scenarios







Instruction: The client-side supports Android /iOS/ Windows/MAC systems.

Version requirement: support Android 4.2 and higher. iOS supports 9.0 and higher Factory defaults of device end: SSID: inskam_***

APP DOWNLOADING

C. iOS:

Search for "inskam" in App Store to download and install, then use the product

Android (International):

Search for "inskam" on Google Play or follow the link below

(www.inskam.com/download/inskam1.apk) for download and installation



Android (China):

Use the mobile browser to scan the following QR code to download and install



OPERATION GUIDE

- 1. Long press the button 3 seconds to turn on the dental camear.
- Click on the setting icon the main interface of the smartphone, and click on "WLAN/WiFi" of your smartphone.

 The name of WIFI is "inskam***-xxx". Click it to connect the dental camera.



(Notice! If you don' t find the" inskam***-xxx"wifi.)

- A. Please check the battery level.
- B. Reboot the power of the dental camera.



4. After the connection is successful, click on "inskam"icon to view the real-time video



Notice:

a.If you find the notice, please select"Decline"



b. If you can't review pictures or videos on your phone albums,please enter mobile"settings"allow"inskam"app to access the phone albums. c.No image!

- Make sure your phone has connected the "inskam***-xxx"wifi
- (2). Close the app"inskam" and open it again.
- (3). Check the battery level
- (4). Enter mobile" settings"allow"inskam***-xxx"app to access the phone "WLAN" or"WLAN & Cellular data"



(5).Turn off the mobile phone data, reconnect to use.

APP OPERATION

Video	O Take a photo	Save document	Ö Setting	Compared
		Zoom in and ou	ut	e e e e e e e e e e e e e e e e e e e

Importance notices:

- 1.When the battery needs recharging, the blue light flashes.
- 2.charging the device with the power of the 5V/2A/1A/ 500ma.red lighted when charging ,and goes out when fully charged.lt takes 1 hour to be full of electricity, and can be used 90 minutes (480P) / 80 minutes (720P)/70 minutes (1600P)
- 3. Featuring IP68 waterproof camera probe and cable allows it to work in multiple environment, but please install waterproof device.

waterproof device





How to use it on Windows PC:

- Please download the software by the link <u>www.kkmoom.com/camera.rar</u>, and then install the software.
- Plug in the usb endoscope camera, and open the software. You can take pictures, videos.

How to use it on MAC:

MacBook OS, please use "Photo Booth" "QuickTime Player" "VLC(VideoLan Client)" soft

Tenhnical Parameters

Model	YPC110	
Imaging sensor	CMOS	
Camera resolution	1600 x 1200	
Horizontal view angle	72 degrees	
Transmitting frequency	2412-2612MHZ	
Minimum illumination	0 Lux	
Power Supply	3.7V 600mah lithium battery	
Unobstructed effective range	5-10m	
Waterproofing grade	IP68(for lens/tube only)	
Diameter of flexible tube	5.5mm/8.0mm	
Charging voltage and current	5V- 2A/1A/500mA	
Focal Distance	1.2Inch-3.2Inch	
Full Charging time	1 hour	
length	2/3.5/5/10M available	

Should any smaller changes in figures contained in the user manual be made without notice.

EU Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Troubleshootin

- · No Image or defects, noise In the image
- * Check the Wi-Fi setting on your smartphone, make sure it has connected to the device.

Check the USB camera, make sure It's connected to the * device correctly and tightly.

- * Disconnect and reconnect the camera.
- * Close the app and open it again.

* Check the battery level, recharge the battery If the power blue indicator flashing fast.