说明书尺寸:105x148.5MM

说明书材质: 双面黑白印刷 80g 书写纸

料号: 483-KU366300-R33

DYNALINK

S 8866

23.6" 12V Digital Television

Operating Instructions



Features • HDMI input

- AV input
- 1080p HD tuner
- 1080p HD resolution 23.6" LED panel 3.5mm headphone output
- USB PVR recording support
- IR Remote control
- Ideal for 4WD's caravans, boats and camper vans 240V AC (plugpack) or 12V DC operation

This 23.6" widescreen TV is designed for 12V vehicles, 4WDs, caravans and campers. It is easily wall mountable with VESA 75x75mm mounting points. The LCD panel offers 1080p resolution with in-built HD DVBT tuner. Antenna input, HDMI/AV inputs, 3.5mm audio, plus USB (for PVR recording) are available on the rear. Includes magnetic base antenna with booster, mains power supply and remote control.

Caution


- Please read the user manual carefully before using this product.
- If problems arise, do not try and repair this product yourself, see the last page for details.

 3. Please check the rating label on back of screen to ensure you're using the
- Do not place the unit directly in sunlight, also avoid dropping or hitting the
- 5. Instead of using chemical detergents, use a soft cloth to clean the unit.6. Avoid using the unit during thunderstorms.

Specifications

Display:	23.6" Color Screen
Peak brightness:	250cd/m2
Contrast ratio:	
Response time:	20ms
Power consumption:	
Media formats support:	avi, mpeg, mkv, mov, mp3 etc
Audio:	2x1W
Power supply:	12V DC 2.5A
Screen Dimensions:	23.6"
Dimensions (WxHxD):	550x333x47mm
·	

Product Overview

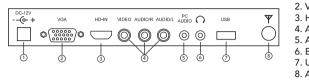

5. Audio Input 6. Earphone 7. USB

Power Supply Options

- AC Adapter: Use the included 100V-240V adapter with this unit to supply power.
- Car Charger: Use a car adapter with 12V DC power output.

External Signal Input/Output Functions

- DTV: Connect an external antenna cable to the unit. Press the input button, the signal is connected when the unit displays TV channels. If you use the unit for the first time to watch TV, search the channels in the menu.

 • AV In: Connect AV line with AV input jack, then press the
- "INPUT" Button and select "AV" mode.
- USB/SD Card: Put the USB or card into the machine and select the USB/Card mode to play the contents on them. The SD card needs to be inserted into the
- ATV: Connect the antenna. It will search local TV programs automatically. • VGA: Video Graphics Array is a graphics standard for personal computers and

2

HDMI In: HDMI input such as bluray DVD or game console.
FM Radio: Connect the antenna and turn to "FM Radio" mode to receive radio.

Selecting Input Source

- Press "INPUT" to show input source list. Press the up and down arrows to select the input source
- you want and press ENTER to confirm.

 The TV will go into the source you have selected in step 2

Remote Control

Button Overview

2. VGA 3. HD-IN 4. AV-IN

2 3

7 8 9 0

4 P H4 P

VOL+ VOL-Volume decrea CH+ Next Channel MENII MENU setup/Return butto INPLIT Switch Mode **A** / **K** Up/Previous Down/Next ∇ / D Left/Rewind **4/ ⋘ >** / **>>** Right/Fast Forward return to USB menu/Quit set up ENTER Confirm Power ON/OFF POWER Press this button to mute the sound. press again or press volume increase decrease to resume the sound Press to start recording program onto a USB device SUB Press to display/hide subtitles Shows the EPG guide TXT/CC Photo and Text TV FΔV Favourite Channel AUDIO Change audio channel RED/GREEN/

Function keys according to MENU

- When using the remote, aim the remote control at the receiver IR.

 Avoid dropping, disassembling or getting the remote control wet.

 Avoid pressing the buttons continously and quickly. Wait at least 2 seconds between two ope

YELLOW/BLUE

Main Menu Operation

System menu setup

- Press MENU to enter System Setup.
- Press the direction keys to select each section
- Press ENTER to go into the sub menu and select items from the menu.

 Choose the item you want and press ENTER to confirm.
- Press MENU to return to the upper menu Press RETURN to exit the system setup.

Channel Menu

- Scanning Channels

 Select to DTV/ATV mode.
 Press the MENU button, select "Auto Search" or "DTV Manual Search" or "ATV Manual Search" to search through the programs. Select auto search, then select search
- type and choose between DTV+ATV/DT-V/ATV. Then select the country you live in, press OK and start auto search After Auto Scanning, press the CH+/CH-
- to choose the program you want. Channel Edit: Set DTV/ATV channel info
- Signal Information: Check TV signal info

Attention: If any words appear in grey (shown in image on the right) this means it cannot be adjusted in the current menu.

Picture Menu

Press MENU to display the main menu and press the up and down arrows to select the picture menu

Picture Mode: Personal/Dynamic/Stand-

- ard/Mild Colour Temperature: Personal/Cold/Nor-

- Noise Reduction: Low/Middle/High/Off.

 
4

Sound Menu

press the up and down arrows to select the

- ie/Sports/Personal.
- from the left and right speakers.
- Auto Volume: When set on, quick volume
- change will be smoothed.

 Surround Sound: Surround/Off/SRS

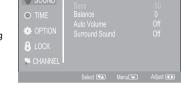

Time Menu

- Clock: (Adjust time in clock section) Date/Month/Year/Hour/Minute.
- Off time: Set the Day(s), Hours and
- time at which point the user can press any button on the remote to cancel the TV going to sleep. The following are the
- Sleep timer options: Off/10/20/30/60/90/120/180/240

Option Menu Press MENU to display the main menu and press the up and down arrows to select the

Audio Language: Set the audio language.
Audio Language: Set the audio language.
Subtitle Language: Set subtitle language.
PVR File system: Set the recording of DTV program, check the USB device's free

ecord limit hours, recording speed, set

OSD Language: Set the OSD display

time shift size.

• Restore Default: Restore all settings to factory default.

OSD Timer.

Lock Menu

- Press the default password (0000) to enter set up.

 • Lock System: By entering the password,

- to be blocked.

 Parental control: Set the age level (4 to 18 years old) of the TV program.





Press MENU to display the main menu and press the up and down arrows to select the lock menu.

- users can lock important set ups of the system including program search and
- setting default.
 Cancel LOCK by setting it at OFF.
- Set Password.Block Channel: Set Channels that you wish

USB

Enter the Input source list Press the "INPUT" button to show input source list. Press up and down arrows to

• The colour of the icon indicates whether



- **Photo Play**
- sub-menu
 3. Choose C, then press ENTER to

the play/pause button. Use the rewind

 
button to play the last photo. Press the

fast forward button to play the next

Music Play

- sub-menu
 4. Choose the music you want to play and
- press the play/pause button. Use the rewind button to play the last track. Press the fast forward button to play Press RETURN to quit.



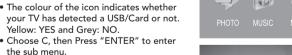

Insert the USB device into the USB jack Press the left and right arrows, choose PHOTO, and press ENTER to get to the Choose the photo you want and press

Press RETURN to quit.

- Insert the USB device into the USB jack Press the left and right arrows, choose MUSIC, and press ENTER to get to the sub-menu
 3. Choose C, then press ENTER to

- Movie Play Insert the USB device into the USB jack Press the left and right arrows, choose MOVIE, and press ENTER to get to the
- sub-menu. Choose C, then press ENTER to sub-menu.
 4. Choose the movie you want to play and press the play/pause button. Use the
- rewind button to play the last chapte Press the fast forward button to play the next chapter. Press RETURN to quit.

Text Play

- Insert the USB device into the USB jack Press the left and right arrows, choose TEXT, and press ENTER to get to the
- sub-menu.
 4. Choose the txt you want to write and press the play/pause button. Press the reverse button to play the last page and press the forward button to play

sub-menu.
3. Choose C, then press ENTER to

- the next page.
 Use the rewind button to play the last text and the fast forward button to play the next text.

 6. Press RETURN to quit.
- **FM Radio** Press the INPUT button. Press ENTER button or the SEARCH button to look for FM channels
- searching through FM channels.) Press CH- or CH+ to select a FM

automatically. (Press the RETURN button for a long time to stop





87.0_M

Troubleshooting

Problem

Before you take the television into your place of purchase, please see the table below to ensure the problem you are having cannot be solved by one of the solutions listed below.

Solution/Reaso

No picture and sound.	Incorrect power is being used. Power switch is off or the display has been turned off by the remote control.
No picture.	Check channel has been selected correctly. If in multimedia state, change to TV state.
No sound.	Audio volume is off or the audio system has been improperly set.
Vague picture or unstable picture.	Ensure the antenna is correctly adjusted. The grounding signal is too weak.
Duplicated Pictures.	Reflective signals from nearby buildings or high reflective signals are being picked up.
Static interference.	Affected by electric wave interference from vehicle motors, trains, high-voltage power wires or neon lights.
No Colour.	Check colour is adjusted correctly. Poor signal. Check if the colour elimination function is on.

Altronic Distributors warrants this product for one year from date of purchase from Altronics or its resellers to the consumer. If this item is part of an installation or another product, please contact the installer or supplier fo

For repair or service please contact your PLACE OF PURCHASE. If this item was purchased directly from Altronics please make a warranty claim by:

a) Calling your nearest store location and quoting your tax invoice number b) Upon contacting Altronics, we will issue an R.A. (Return Authorisation). As Altronics have a number of service

c) A copy of the R.A. form, (or at the very minimum, the R.A. number) must accompany the goods to effect the repair.

d) Altronics will pay the return freight to the customer where the warranty claim has been accepted.

2. FOR OVER THE COUNTER PURCHASES to make a warranty claim, please return the goods to us in any of our stores, with a copy of your proof of purchase (tax invoice). a) Upon leaving the goods at one of our stores, an R.A. number will be issued to you.

It is at Altronics discretion as to whether the goods will be repaired or replaced (whilst under warranty); and as to whether identical goods will be used to replace the item due to changes of models / products.

Our goods come with quarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

> Distributed by Altronic Distributors Pty 1td Phone: (08) 9428 2199

Note: Under no circumstances should you attempt to repair the device yourself or via a non-authorised Altronics service centre, as this will invalidate the warranty!

Press MENU to display the main menu and

- sound menu.
 Sound Mode: Standard/Music/Mov-
- Balance: Adjust the level of sound coming



Press MENU to display the main menu and press the up and down arrows to select the

- On time: Set the Day(s), Hours, Minutes, Input, Channel and Volume.
- Minutes.
 Sleep timer: If user has selected a time for the TV to sleep it will start to count down from 60 seconds once it has reached that
- Auto Sleep: Never/4hrs/6hrs/8hrs

your warranty.

During the warranty period, we undertake to repair or replace your product at no charge if found to be defective due to a manufacturing fault. The warranty excludes damage by misuse or incorrect installation (i failure to install and operate device according to specifications in the supplied instruction manual), neglec shipping accident, or no fault found, nor by use in a way or manner not intended by the supplier.

1. FOR MAIL ORDER CUSTOMERS (includes school and trade orders),

agents throughout Australia, a copy of the R.A. will be emailed, faxed or mailed to you with full instructions of how and where to send the goods. The freight for shipping goods back to

Altronics for all repairs is at the customers expense.

e) Please quote the R.A. number in any correspondence to us.

b) Once repaired, you will be contacted, advising that the goods are ready to be collected from the store

Ensure the USB has been put in the right

way. Ensure the memory format is right.

USB won't