 


PRODUCT DRAWING & INDICATION

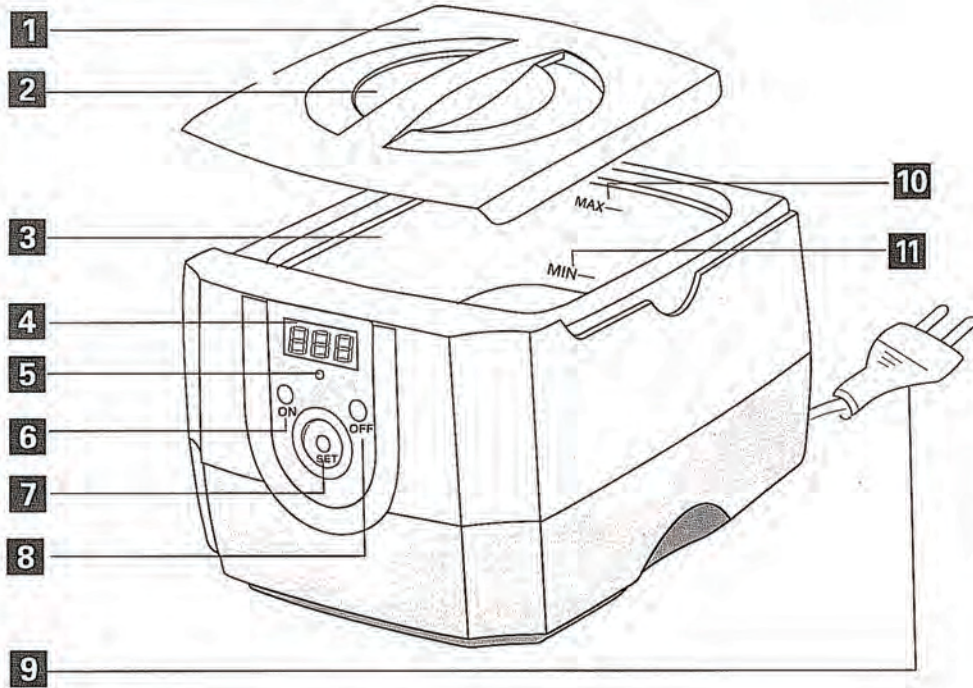

- 1 LID 2 VIEW WINDOW 3 STAINLESS STEEL TANK 4 DIGITAL DISPLAY
- 5 INDICATION LIGHT 6 "ON" BUTTON 7 "SET" BUTTON 8 "OFF" BUTTON
- 9 PLUG AND CORD 10 "MAX" MARK 11 "MIN" MARK

 
 
 
ULTRASONIC CLEANER

CD-4800

PATENT NO.: 200330115311.5

DIGITAL CONTROL

POWERFUL TRANSDUCER

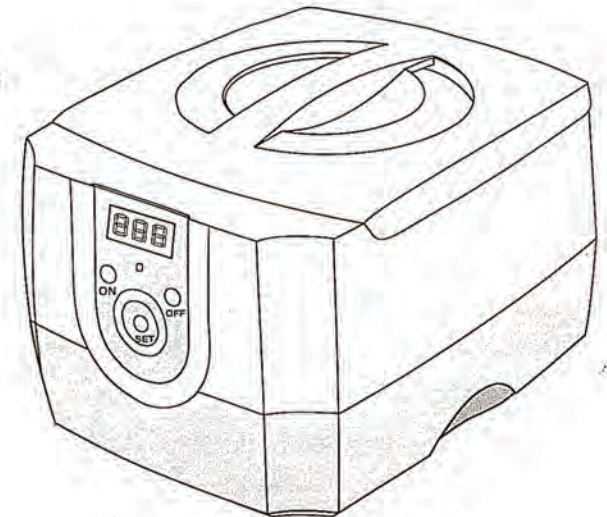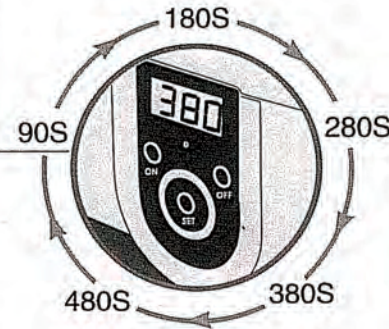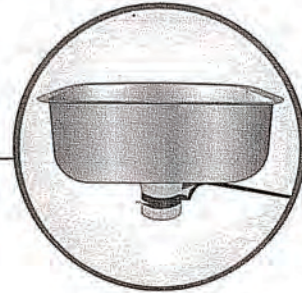

APPLICATION: Ideal for glasses, Jewellery, Watches, Mobile phone service Center dentures.

- READ ALL INSTRUCTIONS BEFORE USING
- KEEP THIS MANUAL


NAME	ULTRASONIC CLEANER	POWER SUPPLY	AC 220-240V 50 Hz
ITEM NO.	CD-4800	POWER	70 W
DIM.	230X180X160mm	TIMER SETTING	180s → 280s → 380s → 480s → 90s
TANK SIZE	1400ml		
FREQUENCY	42KHz	WT	1.75 kg

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following.

 
⚠ WARNING- To reduce the risk of burn, electrocution, fire or injury to persons

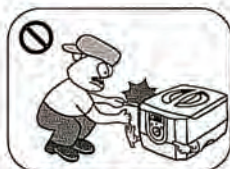


Do not disassemble the unit except for the authorized serviceman.



 
Do not fill the tank with abrasives or corrosive chemicals.

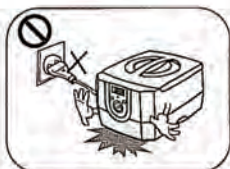

 Unplug the unit before filling. Do not exceed the "MAX" mark.

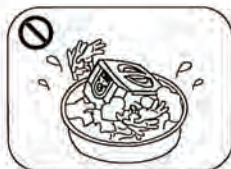

 
Do not immerse the unit in water to reduce the risk of electrocution.

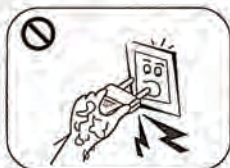


Do not touch the socket with wet hand to reduce the risk of electrocution.



 Do not use this unit when sleeping or drowsy.

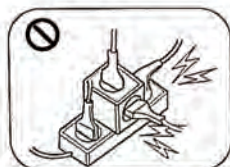

 Use this unit properly as per its instruction manual. Do not use attachments not recommended by the manufacturer.

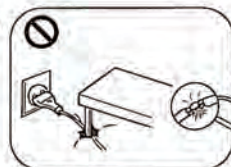

Never operate this unit if cord or plug are damaged. If it is not working properly, or has been dropped into water or damaged, return the damaged unit to a service centre for examination and repair.

 


This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

SAFETY INSTRUCTION: READ ALL INSTRUCTIONS BEFORE USING


⚠ DANGER- To reduce the risk of electrocution:

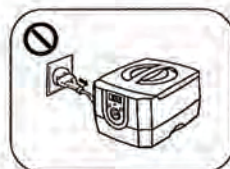

Unplug this unit immediately after using.



 
Keep the unit away from heated surface, and place it in a dry and flat place.

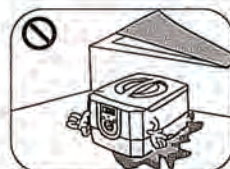

Keep the unit in a safe place to avoid falling into water or other liquid.



 
The unit should never be left unattended when plugged in.

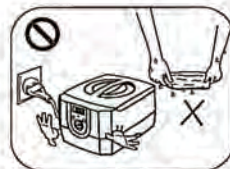

Do not use while bathing.



 Do not immerse the unit into water or other liquid.

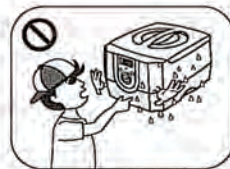

Do not reach for the unit that has fallen into water. Unplug immediately.

 
 
 


 

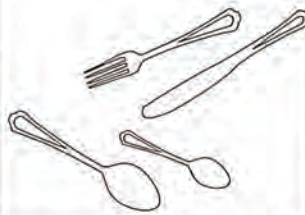 
The product may be off or can't be switched off when it is subjected to electromagnetic interference like Fast Transients or Surge voltage, but it can recover after being re-plugged in the socket, and then just follow the instruction described in this manual to set the function again for normal operation.

Unplug this product before filling. Fill with water only unless otherwise specified by manufacturer. Do not overfill.


This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

AVAILABLE FOR:

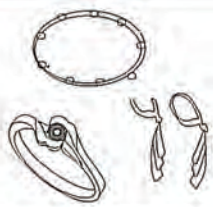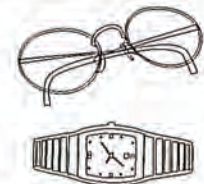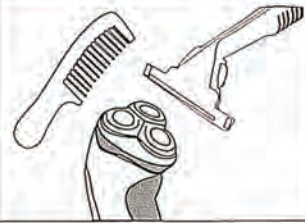Jewellery	Glasses and Timepieces	Commodities
		
Necklaces, Rings, Earrings, Bracelets etc.	Glasses, Sun Glasses, Watch Chains, Waterproof watches etc.	Electric shaver heads, Razor blades, Dentures, Combs, Toothbrushes etc.

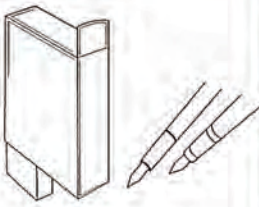Stationery	Metal Articles	Dining Appliance
		
Pen-heads, Printer-heads, Seals etc.	Watch Parts, Ancient coins, Badges, Valves, Machine nozzles etc.	Forks, Knives, Spoons etc.

 OPERATION INSTRUCTIONS

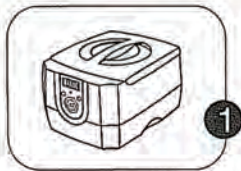


1 Open the lid, and fill stainless steel tank with water.

Running without water may damage the unit!




2 Place item into water.
The water should merge the item to be cleaned but not exceed "MAX" mark and be less than "MIN" mark.

 OPERATION INSTRUCTIONS

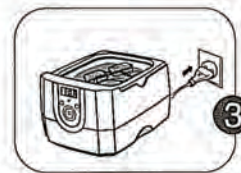


3 Put the plug in the socket.

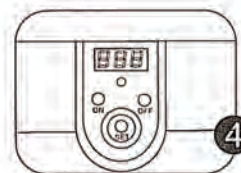 


4 Press SET button to choose working cycle freely. When the unit is electrified, "180" is displayed automatically. It is the most common used working cycle. Every time press "SET", these optional working cycles from

 180S→280S→380S→480S→90S

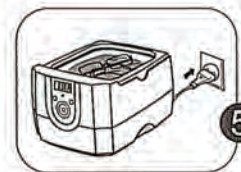


5 Press "ON" to start cleaning and the red indication light is on.

 During cleaning, you can hear the "ZI ZI" voice, it means the unit is working.

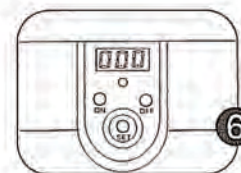

 6 When reach the time of "000" the unit will auto stop, the red light will turn off. If another cleaning is needed, just repeat the above steps. During cleaning, if you want to stop, just press "OFF". Press "ON" again, the unit will implement the remainder program to continue the cleaning. Furthermore, you can press "SET" to renew working cycle.

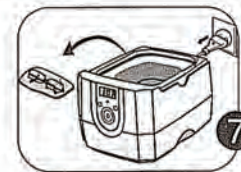


7 When finished cleaning, unplug it and open the lid, then take out the item. At last, pour the water from stainless steel tank and wipe it up.

THREE WAYS OF CLEANING




GENERAL CLEANING

 Use just tap water for general cleaning. The water should merge the item to be cleaned but not exceed "MAX" mark and be less than "MIN" mark.

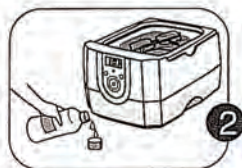

ENHANCED CLEANING

 Add about 5-10ml of detergent into the water when the item to be cleaned is smeary or long time not cleaned. It can quicken the speed of seaminess decomposition, and enhance about 30% of cleaning result.

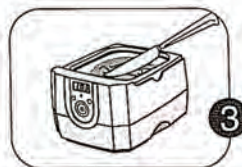

PARTLY CLEANING

For large items, partly cleaning as shown.



Any unfirm inlaid item may become loose.
Do not put any easy-discolored item into the tank for cleaning, such as cloth products, leather products, wood ware etc.



 
Do not put mobile phone or watch which is not waterproof into the tank for cleaning.
Do not put any spectacles frame or art ware which is made from shell for hawksbill into the tank for cleaning.

USER MAINTENANCE




Unplug and empty the unit after using.

Do not keep water in the tank for a long time.

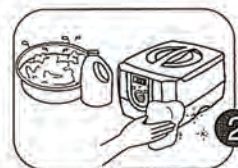

Wipe the tank and unit with dry towel.

 Avoid washing the complete unit with water to reduce the risk of electrocution.

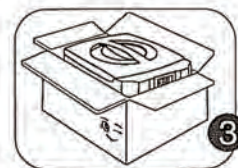

Keep in cool and dry place.

 
Dirt eliminated process through ultrasonic technology



Many tiny bubbles are generated under the action of ultrasonic.



Bubbles are imploded constantly under the action of ultrasonic to impact the surface of the item.

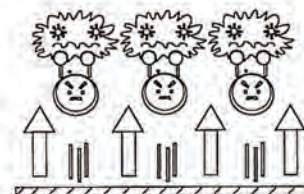

Dirt is split into many granules and separated from the surface of the item, then comes into water.