


Digital Voice Recorder

Quick Start Guide

Model: X0705

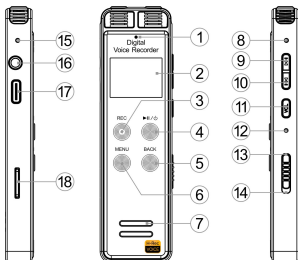

1.REC LIGHT

2.DISPLAY

3.REC BUTTON

4 . E N T R Y / P L A Y /

5 . B A C K / R E C
S A V E D

PAUSE

6. MENU

7.SPEAKER

9. PREVIOUS

8. R-MIC

11. VOL

10. NEXT

13. POWER ON

12. RESET

15. L-MIC

14.POWER OFF

17. USB PORT

16.EARPHONE JACK

18. EXTERNAL
EXPANSION CARD
SLOT

Functional operation:

Description	Operation	Functions
POWER ON/OFF	Push up	Power on and start up
	Push down	Direct power off and shutdown
REC BUTTON	Short press	Short press REC after starting up and quickly enter the recording.
	Short press	Short press BACK to stop recording and save the file.

PLAY/ PAUSE	Short press	When playing or recording, short press the PAUSE to pause playing or recording; press PAUSE again to resume playing or recording.
MENU/ OK	Short press	<ol style="list-style-type: none"> 1. When the file is playing, short press MENU to enter the secondary submenu selection interface; 2. Short press PLAY to confirm the entry/play/pause.
PREVIOUS	Short press	Go PREVIOUS; Short press VOL when playing and then press PREVIOUS to increase volume.
	Long press	When playing, long press this Button for fast rewinding.

NEXT	Short press	Go next; Short press VOL when playing and then press NEXT to decrease volume.
	Long press	When playing, long press this Button for fast forwarding.

Note:

- Short press means to press once and release; Long press means to press and hold the Button for 2~3s before release.
- Do not directly turn off the power switch while recording, because this may cause failure to save the current recording; Do not turn off the power switch directly when setting up various tasks, because this may cause failure to save the settings (Note: the correct action is to press the OK

Button for correct confirmation, and then turn off the power normally)

- In the power-on but no-operation state, it will automatically shut down for 3 minutes by default for power saving; Long press ►||/⏻ to wake up the device.
- Multiply press BACK to go back to the main menu.
- Music and recording files are supported to play in the background. To pause or turn off the sound, you may have to enter the corresponding file playing interface, and then press ►||/⏻ Button.

1.Music

Under the menu "Music", there is "All Songs/Singers/Albums/Styles/Catalogue List/Playlist/Update Playlist". Press the PREVIOUS or NEXT for selection.

When music or recording files are in the play/pause state, short press the MENU to access the submenu, where you could choose to delete files or play settings.

File deletion:

In the play/pause or stop state, short press MENU and select "Delete" or "Delete All" from the submenu options. As soon as the interface pops up "Yes/No", you can press PREVIOUS/NEXT to move and select, and press ►||/⏻ Button for confirmation. "Delete All" means to delete all music files and recording files; Do not forcibly turn off the power when deleting files, otherwise the files will be damaged.

Play settings:

In the play/pause or stop state, short press the MENU, and there will be five functions, "play mode/repeat setting/voice setting/bookmark/add to playlist".

- Play mode: Repeat play and random play.

- Repeat setting:

Long press and hold the MENU in the playing state, and then the starting point A will be displayed at the bottom left of the screen (A does not flash, but B flashes on LCD display). Long press and hold the MENU again, and then set the end point B (A–B will be displayed on LCD display), thereby realizing the function of repeating between A–B points. Short press and hold PAUSE or long press and hold the MENU to exit the A–B repeat mode.

- Repeat times: Set the repeat times (1~10) (unit: times)

- Repeat interval: Set the repeat interval time (1~10) (unit: seconds)
- Sound setting: An equalizer may be chosen: none, rock, funk, hip hop, jazz, classical, electronic, custom, etc.
- Variable speed play:
0 is normal play mode, negative number is slow play, positive number is fast play (the larger the relative value is, the more obvious it is).
- Volume adjust

In the state of playing music or recording files, short press the VOL to arise the volume value in the upper right corner of the screen. At this time, press the NEXT to decrease the volume and press the PREVIOUS to increase the volume; The volume value displayed on the screen will also be increased and decreased accordingly; After adjustment, short press the VOL again to see the value turns

white, indicating the exiting form volume adjust mode.

2.Record

There is "Record Library/Record Settings" under the "Record" interface of the main menu. Press the NEXT/PREVIOUS to select the record settings, and short press OK to enter the record settings menu, where you could select:

- Recording format

MP3 formats: 32kbps, 64kbps, 128kbps and 192kbps;

WAV formats: 512kbps, 768kbps, 1024kbps and 1536kbps.

- Recording gain

Seven-level gain setting (test the recording gain setting based on the recording environment before recording. The higher the level of recording gain is set, the more significant the result of remote recording will be)

- Record monitoring

Select "monitoring on" or "monitoring off";

Connect earphones to monitor the record process in the "monitoring on" state.

- Sound control settings

In the sound control mode, the sound control switch is set to "ON", and the recording pen starts recording when the sound source is detected, and automatically pauses recording when the sound source is not detected, thus avoiding invalid recording during a silent period; The sensitivity of sound control recording contains levels 1~7, and the greater the value, the more significant the sensitivity of detecting sound source; When leaving the factory, the default sound control switch of this device is "OFF".

- Segmented recording: There are four optional recording durations: 30 minutes, 60 minutes, 90 minutes and 120 minutes.

- Timer recording

When the timer recording switch is ON, the specified recording start and time can be set, and the timer recording period can be set as single time, daily or on working days.

- Recording lamp: The recording lamp could be set as OFF or ON, though the default is ON;

3.Folder

MUSIC folder and RECORD folder can be selected.

4.Settings

- Scheduled shutdown: The scheduled shutdown time of 10/30/60/90/120 minutes could be set as needed.
- Backlight timer: In non-operating state, the screen backlight would automatically turn off after 10s, 20s, 30s or "always light up" (optional).
- Brightness: Adjust the overall brightness and darkness of the display screen.

- Date and time:

Press NEXT or PREVIOUS button to select numbers. Then press the volume Button to move and switch hours and minutes, and press Play to confirm after setting.

- Language selection: 25 languages are supported and can be chosen by users as needs.

- Password settings:

Either "ON" or "OFF" might be available.

After setting the password, short press the OK to set the password, and short press the OK to enter. At this time, three groups of passwords of "00 00 00" are displayed. Press NEXT/PREVIOUS to select numbers, press the VOL to switch and move to the next of number group, and press OK to save after final setting; This device will prompt that the password has been modified; When you forget the password, you could enter "18 18 18" and

press the MENU for quick cracking, thereafter the previously set password will be automatically released.

- Information: Basic information and memory size of this product are provided for view.

- Format this device: Select "Yes" to delete all file data in the device.

- Factory settings:

Restore the factory settings. Select "Yes" to automatically restore the factory settings.

5.PREVIOUS play

Select the PREVIOUS play menu as needed.

- **Connect to computer**

Please connect to the computer via an USB cable matches with this device. The device will automatically startup after connection; For the first connection, prompts for creating driver information and finding new hardware information will

appear on the computer until a new disk is identified by "My Computer", indicating a successful the connection.

- **Upload and download files**

You can transfer file data between this product and computer.

- **Disconnect from the computer**

After the file transfer is completed, please safely delete the hardware and remove the media.

- **Battery and charging**

a. Please use the USB cable along with this device to match the Type-C interface. Other connecting cables may not be able to connect to the computer normally or cause the interface to be damaged.

b. A charger may be available as long as its output voltage is 5V and its output current is 1000mA (charging time is about 2H) when using the charger.

Main accessories of this product: voice recorder, Type-C USB cable, and instruction manual .