

# **IVS DVR**

## **User Manual**

---

- **Intelligent Video Surveillance**
- **GUI Display with USB Mouse Control**

Please read instructions thoroughly before operation and retain it for future reference.

For the actual display & operation, please refer to your DVR in hand.

# IMPORTANT SAFEGUARD



## CAUTION

### RISK OF ELECTRIC SHOCK



#### CAUTION:

To reduce the risk of electric shock, do not expose this apparatus to rain or moisture. Only operate this apparatus from the type of power source indicated on the label. The company shall not be liable for any damages arising out of any improper use, even if we have been advised of the possibility of such damages.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



All lead-free products offered by the company comply with the requirements of the European law on the Restriction of Hazardous Substances (RoHS) directive, which means our manufacture processes and products are strictly "lead-free" and without the hazardous substances cited in the directive.



The crossed-out wheeled bin mark symbolizes that within the European Union the product must be collected separately at the product end-of-life. This applies to your product and any peripherals marked with this symbol. Do not dispose of these products as unsorted municipal waste. Contact your local dealer for procedures for recycling this equipment.



This apparatus is manufactured to comply with the radio interference requirements.

## Trademark Acknowledgements



- The trademark application is filed and under process in the U.S. and other countries.

iPhone® is the registered trademark of Apple Inc.

BlackBerry® and related trademarks, names and logos are the property of Research In Motion Limited and are registered and/or used in the U.S. and countries around the world. Used under license from Research In Motion Limited.

Android™ is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.

Microsoft®, Windows®, Internet Explorer®, Mozilla® FireFox®, Google Chrome™, QuickTime®, Windows® Mobile & Symbian® mentioned in this document are the registered trademarks of their respective holders.

## Disclaimer

The information in this manual was current when released. We reserve the right to revise or remove any content in this manual at any time. We do not warrant or assume any legal liability or responsibility for the accuracy, completeness, or usefulness of this manual. For the actual display & operation, please refer to your DVR in hand. The content of this manual is subject to change without notice.

## Grounding

This is a Safety Class 1 Product (provided with a protective earthing ground incorporated in the power cord). The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. Any interruption of the protective conductor inside or outside of the instrument is likely to make the instrument dangerous. Intentional interruption is prohibited.

## Water & Moisture

Do not expose this product to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.

## MPEG4 Licensing

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

## **GPL Licensing**



This product contains codes which are developed by Third-Party-Companies and which are subject to the GNU General Public License ("GPL") or the GNU Lesser Public License ("LGPL").

The GPL Code used in this product is released without warranty and is subject to the copyright of the corresponding author.

Further source codes which are subject to the GPL-licenses are available upon request.

We are pleased to provide our modifications to the Linux Kernel, as well as a few new commands, and some tools to get you into the code. The codes are provided on the FTP site, and please download them from the following site or you can refer to your distributor:

<ftp://ftp.dvrtw.com.tw/GPL/AV074/>

# TABLE OF CONTENTS

<b>1. BEFORE USING THIS DVR.....</b>	<b>1</b>
1.1 Package Content .....	1
1.2 Front Panel .....	1
1.3 Rear Panel.....	2
<b>2. CONNECTION AND SETUP .....</b>	<b>4</b>
2.1 SATA HDD Installation .....	4
2.2 Camera Connection.....	5
2.2.1 Normal Camera Connection .....	5
2.2.2 DCCS Camera Connection.....	5
2.2.3 PTZ Camera Connection .....	5
2.3 DVR Power On .....	7
2.4 Date and Time Setting .....	7
2.5 Clear Hard Disk .....	8
2.6 Password Setting .....	8
<b>3. GUI DISPLAY WITH USB MOUSE CONTROL.....</b>	<b>9</b>
3.1 Connect USB Mouse .....	9
3.2 Quick Menu Bar .....	9
3.2.1 Channel Switch.....	9
3.2.2 PTZ Control Panel .....	10
3.3 Main Menu .....	10
<b>4. BASIC OPERATION.....</b>	<b>11</b>
4.1 Live Page.....	11
4.2 Record Icon .....	11
4.3 Playback .....	11
4.3.1 Playback Control .....	12
4.3.2 Event Search .....	12
4.3.3 Audio Playback .....	12
4.4 User Level Switch .....	12
4.5 Video Output Switch .....	13
<b>5. MAIN MENU .....</b>	<b>14</b>
5.1 QUICK START .....	14
5.1.1 GENERAL .....	14
5.1.2 TIME SETUP .....	16
5.2 DATE SETUP .....	16
5.2.1 DATE INFO.....	16
5.2.2 DAYLIGHT .....	16
5.3 SYSTEM.....	17
5.3.1 TOOLS.....	17
5.3.2 SYSTEM INFO .....	18
5.3.3 USB BACKUP / DVD BACKUP .....	19
5.4 EVENT INFORMATION .....	20
5.4.1 QUICK SEARCH .....	20
5.4.2 EVENT SEARCH.....	20
5.4.3 HDD INFO .....	21
5.4.4 EVENT LOG .....	21

5.5 ADVANCE CONFIG .....	21
5.5.1 CAMERA .....	21
5.5.2 DETECTION .....	22
5.5.3 ALERT .....	23
5.5.4 NETWORK .....	23
5.5.6 DISPLAY .....	26
5.5.7 RECORD .....	27
5.5.8 REMOTE .....	28
5.5.9 DCCS .....	28
5.5.10 IVS .....	29
5.5.11 NOTIFY .....	33
5.6 SCHEDULE SETTING .....	33
5.6.1 RECORD .....	33
5.6.2 DETECTION .....	34
<b>6. REMOTE OPERATION .....</b>	<b>35</b>
6.1 Supplied Licensed Software .....	35
6.1.1 Installation & Network Connection .....	35
6.1.2 Control Panel Overview .....	36
6.1.3. General Operation .....	38
6.1.4. E-Map .....	40
6.2 IE Web Browser .....	46
6.2.1 Event Playback & Download .....	48
6.2.2 IVS Statistics .....	49
<b>APPENDIX 1 SPECIFICATIONS .....</b>	<b>50</b>
<b>APPENDIX 2 PIN CONFIGURATION .....</b>	<b>54</b>
<b>APPENDIX 3 COMPATIBLE USB FLASH DRIVE LIST .....</b>	<b>57</b>
<b>APPENDIX 4 COMPATIBLE SATA HDD LIST .....</b>	<b>58</b>
<b>APPENDIX 5 MAIN MENU STRUCTURE .....</b>	<b>59</b>
<b>APPENDIX 6 DVR BATTERY REPLACEMENT .....</b>	<b>61</b>






# 1. BEFORE USING THIS DVR

## 1.1 Package Content

- |  |  |
|--|--|
| <input type="checkbox"/> DVR                         | <input type="checkbox"/> Manual for IR Remote Controller |
| <input type="checkbox"/> IR Remote Controller        | <input type="checkbox"/> DVR Quick Start                 |
| <input type="checkbox"/> IR Receiver Extension Cable | <input type="checkbox"/> Adapter & Power cord            |
| <input type="checkbox"/> CD Manual                   | <input type="checkbox"/> 9 or 25 Pin DSUB Connector      |
| <input type="checkbox"/> HDD screws                  | <input type="checkbox"/> USB Mouse                       |

## 1.2 Front Panel

### 1) LED Indicators

-  DVR is powered on.
-  HDD is reading or recording.
-  An alarm is triggered.
-  Timer recording is on.
-  Under playback status.

### 2) (For Selected Models Only)

Press “” to open / close the DVD Writer.

### 3) CH1 ~ 16 / 1 ~ 8 / 1 ~ 4

Press the channel number buttons to select the channel to display.

### 4)

Press to show the 4 channel display mode.

### 5) SEQ

Press to display each channel in full screen one by one starting from CH1. When the last channel is displayed, it will repeat from CH1 again. To exit this mode, press “SEQ” again.

### 6) SLOW

In the playback mode, press to show slow playback.

### 7) ZOOM

Press to enlarge the picture of selected channel in the FRAME or FIELD recording mode.

### 8) PLAY

Press to playback the latest recorded data.

### 9) LIST (Event List Search)

Press to quickly search the recorded files by event lists: RECORD / MOTION / ALARM / TIME / HUMAN DETECTION / IVS / STATISTIC, or select FULL to show all the event logs.

To quickly search the time you want, select “QUICK SEARCH”. For details, please refer to “5.4.1 QUICK SEARCH” at page 20.

### 10) MENU

Press “MENU” to enter the main menu.

### 11) ENTER

Press “ENTER” to confirm the setting.

### 12) II (▲) / ■ (▼) / ◀ (◀) / ▶ (▶)

Press ▲ / ▼ / ◀ / ▶ to move up / down / left / right.

In the playback mode:

Press “II” to pause playback.


Press “■” to stop playback.


Press “▶▶” to fast forward.


Press “◀◀” to fast rewind.

### 13) AUDIO (SLOW + ZOOM)


Press “SLOW” + “ZOOM” to select live or playback audio from audio channel 1~4.

 Live audio from audio channel 1~4  
(indicated in white).

 Playback audio from audio channel 1~4  
(indicated in yellow).

 Audio channel unselected

### 14) P.T.Z. ( + SEQ)

Press “” + “SEQ” at the same time to enter / exit the PTZ control mode.

### 15) USB port

There are two USB ports on the front panel, one for connecting your USB mouse for mouse control, and the other one for connecting your USB flash drive for video backup.

---

**Note:** It's not allowed to have two USB mice or two USB flash drives connected on the front panel.

---



---

**Note:** For the compatible USB flash drive list, please refer to “APPENDIX 3 COMPATIBLE USB FLASH DRIVE LIST” at page 57.

---

## 1.3 Rear Panel

### 1) 75Ω / HI-IMPEDANCE (For Selected Models Only)

When using Loop function, please switch to HI-IMPEDANCE. When you don't use Loop function, please switch to 75Ω.

### 2) VIDEO IN (1 ~ 16 / 1 ~ 8 / 1 ~ 4): Connect to the video connector of a camera.

VIDEO LOOP (1 ~ 16 / 1 ~ 8): Video output connector.

---

**Note:** The DVR will automatically detect the video system of the camera, please make sure that the cameras are properly connected to the DVR and power-supplied before the DVR is turned on.

---

### 3) AUDIO IN (1~4)

Connect to the audio connector of a camera if the camera supports audio recording.

---

**Note:** To make a video backup with audio, make sure the camera which supports the audio function is connected to the video-in channel and audio-in channel. For example, the audio data from audio CH1 will be recorded with the video data from video CH1.

---

### 4) AUDIO OUT

Connect to a speaker with 1 mono audio output.

---

**Note:** To know how many audio outputs your DVR supports, please refer to its specifications.

---

### 5) MONITOR

Connect to a CRT monitor for video output.

---

**Note:** When both MONITOR and VGA are connected, press the left key ◀ on the DVR front panel during DVR power-on to force the video output via MONITOR. For details, please refer to “4.5 Video Output Switch”.

---

### 6) CALL (For Selected Models Only)

Connect to a monitor specific for sequence display.


### 7) VGA

Connect to a LCD monitor directly.

---

**Note:** When both MONITOR and VGA are connected, press the right key ▶ on the DVR front panel during DVR power-on to force the video output via VGA. For details, please refer to “4.5 Video Output Switch”.

---

- 8) IR *(For Selected Models Only)*  
Connect the IR receiver extension line for remote control.
- 9) EXTERNAL I/O  
This port is used to connect external devices (such as speed dome cameras or external alarm, etc).
- 10) LAN  
Connect to Internet by LAN cable.
- 11) DC 19V  
Connect to the supplied adapter.
- 12)  Power Switch  
Switch to “I” to turn on the power, and “O” to turn off the power.



## 2. CONNECTION AND SETUP

Before the DVR is powered on, make sure you have installed a hard disk and connected at least one camera. For details, please refer to the following sections.

**Note:** The DVR is designed to automatically detect the video system of the connected cameras (NTSC or PAL). To make sure the system detection is correct, please check if the cameras are connected to the DVR and power-supplied before the DVR is powered on.

### 2.1 SATA HDD Installation

A SATA HDD must be installed before the DVR is powered on.

**Note:** It's recommended to clear all data in the hard disk when the DVR is powered on and the date & time are set correctly to ensure the recorded data are not mixed with other data previously saved in the same hard disk. For details, please refer to "2.5 Clear Hard Disk" at page 8.

#### ➤ For 16CH & 8CH Models

Step1: Loose the screws on the upper cover and open the upper cover of the DVR.


**Note:** The DVR cover is made of metal. Please be careful with its edge when you remove the cover.

Step2: There are two HDD brackets for this DVR as indicated on the right picture.

#### 2-1 To install on the first bracket

Remove the bracket, and align the screw holes of the bracket with the HDD's screw holes. Make sure the PCB side of the HDD is facing up.

Fasten the HDD to the bracket, and connect the power connector and data bus connector to the HDD. Then, replace the bracket to DVR.

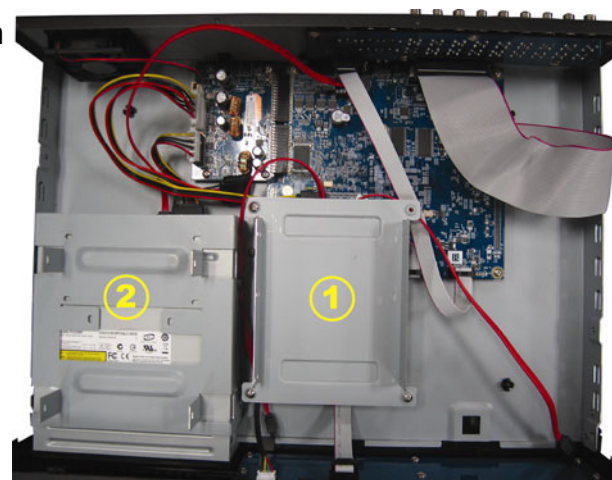


#### 2-2 To install on the second bracket

Connect the power connector and data bus connector to the HDD.

When connecting the power cable, make sure the cable is passed through the power cable of DVD writer. This is to prevent the HDD power cable from interfering with the fan spinning.

Align the screw holes of the bracket with the HDD's screw holes. Make sure the PCB side of the HDD is facing up. Then, fasten the HDD to the bracket.

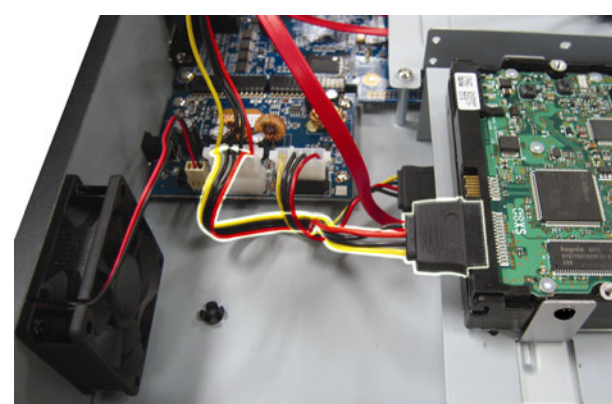

Step3: Close the upper cover of the DVR, and fasten all the screws you loosened in Step1.


#### ➤ For 4CH Model

Step1: Remove the screws on the top cover of DVR, and remove the top cover.

Step2: Remove the HDD bracket. Then, with the PCB side facing up, connect the compatible HDD to the power connector and data bus connector.

Step3: Put the compatible HDD in the bracket, and fasten it with the supplied screws, two for each side.

Step4: Replace the bracket back to the DVR.

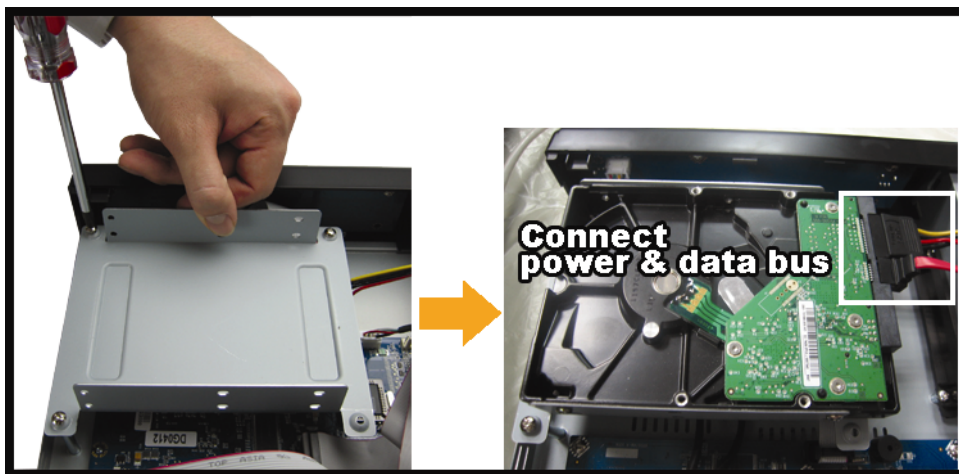

Step5: Replace the top cover and fasten the screws you loosened in Step1.

## 2.2 Camera Connection

The cameras must be connected and power-supplied before the DVR is powered on. Connect the camera with the indicated power supply. Then, connect the camera video output to the DVR video input port with a coaxial cable or RCA cable with BNC connectors.

---

**Note:** For detailed DVR video input ports, please refer to “1.3 Rear Panel” at page 2.

---

### 2.2.1 Normal Camera Connection

---

**Note:** For detailed camera installation and connection, please refer to its own user manual.

---

#### 1) Connecting to DVR video input

Connect the camera video output to the DVR video input port with a coaxial cable or RCA line with BNC connector.

#### 2) Connecting to DVR audio input (Optional)

Connect the camera audio output to the DVR audio input port with a coaxial cable or RCA cable with BNC connectors.

#### 3) Connecting to power

Connect the camera with indicated power supply and make sure it's power-supplied.

### 2.2.2 DCCS Camera Connection

#### 1) Connecting to DVR video input

Connect the camera video output to the DVR video input port with a coaxial cable, or a RCA cable with BNC connectors.

#### 2) Connecting to power

Connect the camera with indicated power supply.


#### 3) Configuring camera parameters (For zoom lens control cameras only)



Set camera parameters when the DVR is powered on. For details, please refer to the camera user manual.

### 2.2.3 PTZ Camera Connection

The following description is taking our brand's PTZ camera as an example.

For detailed PIN / port connection, please refer to “APPENDIX 2 PIN CONFIGURATION” at page 54. For DVR setting to control the PTZ camera, please refer to “5.5.7 RECORD” at page 27. For detailed PTZ camera control and operation, please refer to its own user manual.

RJ11 cable
RS485-A: Red wire
RS485-B: Green wire
<div><div>RJ11 Line</div><div></div></div>
The RJ11 cable is not supplied in the sales package.

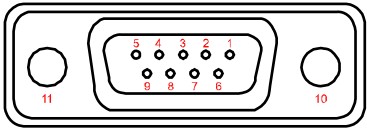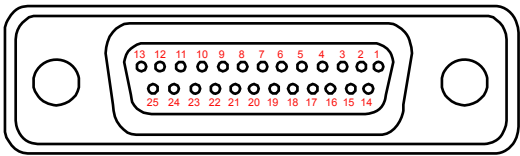9 PIN D-Sub Connector	25 PIN D-Sub Connector
RS485-A: PIN 8 RS485-B: PIN 9	RS485-A: PIN 12 RS485-B: PIN 24
<div><div>Solder Side of 9-pin D-Sub connector</div><div>RS485-A: PIN8 / RS485-B: PIN9</div><div></div></div>	<div><div>Solder Side of 25-pin D-Sub connector</div><div>RS485-A: PIN12 / RS485-B: PIN24</div><div></div></div>
D-Sub connector is supplied with the DVR package.	

**STEP 1: Get a RJ11 cable with the proper length to your connection.**

Different RJ11 connector may have different wire layout, so the connection might be different. If you cannot control the DVR after connection, please reverse the RJ11 cable connection with the DVR.

**STEP 2: Remove one end of the insulating coating of the RJ11 cable.**

Remove one end of the insulating coating of the RJ11 cable to find the RS485-A and the RS485-B wires, and remove the insulating coating to reveal the naked wires for further connection.

**STEP 3: Twist the RS485-A and RS485-B wires of the RJ11 cable and the speed dome camera together.**

Twist the RS485-A (red) and RS485-B (green) wires of the RJ11 cable to the RS485-A (brown) and RS485-B (orange) wires of the speed dome camera. To protect the naked wires, use the insulation tape to cover on the twisted wires.

**STEP 4: Connect the other end of the RJ11 cable to DVR.**

Solder the RS485-A (red) and RS485-B (green) wires of the RJ11 cable to the corresponding pins on the solder side of the 9 or 25 PIN D-Sub connector (as shown above).

**STEP 5: Set the speed dome camera at the DVR side.**

Go to “ADVANCE CONFIG” → “REMOTE” to set the speed dome camera.

- a) Select the device to “PTZ”.
- b) Set the ID to the value the same as the one set in the speed dome camera. The default ID of the camera is 000.
- c) Select the protocol to “NORMAL”.
- d) Set the baud rate to the value the same as the one set in the speed dome camera. The default baud rate of the camera is 2400.

ADVANCE CONFIG												
CAMERA	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8	CH9	CH10	CH11	◀ ▶
DETECTION	DEVICE										PTZ	
ALERT	ID										000	
NETWORK	PROTOCOL										NORMAL	
DISPLAY	RATE										2400	
RECORD												
<b>REMOTE</b>												
DCCS												
IVS												
NOTIFY												
EXIT												

## 2.3 DVR Power On

This device should be operated only with the type of power source indicated on the manufacturer's label. Connect the indicated AC power cord to the power adapter, and plug into an electrical outlet. The power LED will be on.

**Note:** Before the DVR is powered on, make sure the cameras are connected and power-supplied for the detection of the camera video system to be correct.

**Note:** To ensure that your DVR works constantly and properly, it's recommended to use an UPS, Uninterruptible Power Supply (Optional), for continuously operation.



## 2.4 Date and Time Setting

Before operating your DVR, please set the date and time on your DVR **FIRST**.

**Note:** Please DO NOT change the date or time of your DVR after the recording function is activated. Otherwise, the recorded data will be disordered and you will not be able to find the recorded file to backup by time search. If users change the date or time accidentally when the recording function is activated, it's recommended to clear all HDD data, and start recording again.

**Note:** For the first time to use the DVR, please power it on for at least 48 hours continuously after the date & time is set correctly. It helps to prevent DVR time from resetting after the disconnecting of DVR power. If the DVR time resets after the disconnecting of DVR power, for example, caused by a power outage, the battery might run out and please replace the battery as described in "APPENDIX 6 DVR BATTERY REPLACEMENT" at page 61.

Right-click to enter the DVR password with the password keypad. The default administrator password is 0000.

The status will be changed from  (key lock) to  (administrator). Then, right-click to show the main menu, and select "QUICK START" → "TIME SETUP" to set the date & time.

QUICK START		
GENERAL	DATE	2009 / NOV / 17
<b>TIME SETUP</b>	TIME	15 : 35 : 53
EXIT		

## 2.5 Clear Hard Disk

It's recommended to clear all data in the hard disk for the first time to use this DVR to ensure the recorded data are not mixed with other data previously saved in the same hard disk.

Right-click to show the main menu, and select "SYSTEM" → "SYSTEM INFO" → "CLEAR HDD". The DVR will reboot when HDD data are cleared. For details, please refer to "5.3.2 SYSTEM INFO" at page 18.

SYSTEM		
TOOLS	BAUD RATE	2400
<b>SYSTEM INFO</b>	HOST ID	000
USB BACKUP	R.E.T.R	5
DVD BACKUP	AUTO KEY LOCK	NEVER
	CLEAR HDD	HDD-0
	RESET DEFAULT	SUBMIT
	REMOTE CONTROL ID	000
	SERIAL TYPE	RS485
	VIDEO FORMAT	NTSC
	VERSION	1019-1008-1010-1010
EXIT		

## 2.6 Password Setting

Right-click to show the main menu, and select "SYSTEM" → "TOOLS" to change the DVR password.

There are two user levels: ADMIN & OPERATOR. For details, please refer to "5.3.1 TOOLS" at page 17.

SYSTEM		
<b>TOOLS</b>	LANGUAGE	ENGLISH
SYSTEM INFO	ADMIN PASSWORD	SETUP
USB BACKUP	OPERATOR PASSWORD	SETUP
DVD BACKUP	UPGRADE	SUBMIT
	BACKUP CONFIG	SUBMIT
	RESTORE CONFIG	SUBMIT
EXIT		



### 3. GUI DISPLAY WITH USB MOUSE CONTROL

#### 3.1 Connect USB Mouse

Connect your USB mouse to one of the USB ports on the DVR front panel, and check if there's a mouse icon (🖱️) on the screen, indicating the USB mouse is detected properly.

Move your mouse to enter the DVR password with the password keypad. The default administrator password is **0000**. The status will be changed from 🔒 (key lock) to 🗑️ (administrator), and the quick menu bar appears on the left side of the screen.

**Note:** There are two user levels for DVR access which can be set in the main menu "SYSTEM" → "TOOLS". For details, please refer to "5.3.1 TOOLS" at page 17.

##### Password Input




##### Quick Menu: Close



#### 3.2 Quick Menu Bar

Move to the arrow mark to extend the quick menu bar and show the five functions as follows:

##### Quick Menu: Open

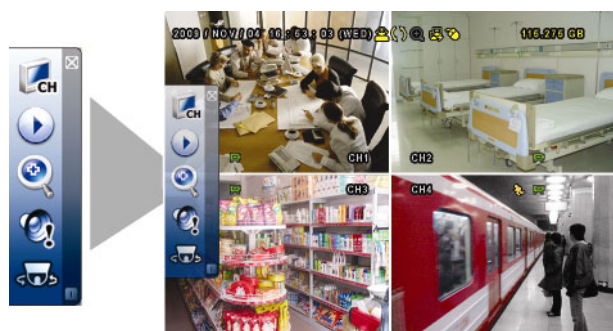

Click to show the channel switch panel and select the channel you want. For details, please refer to "3.2.1 Channel Switch" at page 9.



Click to display the playback control panel, and click ▶️ to play the latest recorded video clip, or click 📅 to enter the search list. For details, please refer to "4.3 Playback" at page 11.



Switch to the channel you want first, and click 🔍 to enter the zoom-in mode. In this mode, click and drag the red frame on the bottom left of the screen to move to the place you want to see. To exit this mode, click ✖️.



Click to select the audio channel you want:  
In the live mode, only the live audio channels can be selected.  
In the playback mode, live and playback audio channels can be selected.



Click to enter the PTZ mode and show the PTZ camera control panel. For details, please refer to "3.2.2 PTZ Control Panel" at page 10.



Click to show the power off panel to either halt or reboot the system.

##### 3.2.1 Channel Switch

Click **CH** on the quick menu bar to display the panel as follows:











1~16	Video Channel Number	Click to switch to the channel you want in full screen.
	Sequence Display	Click to display each channel in full screen one by one starting from CH1. When the last channel is displayed, it will repeat from CH1 again. When this function is on,  will be shown on the status bar.
	Quad Display	Press to show the 4-channel display mode.
	9-Cut Display	Press to show the 9-channel display mode.
	16-Cut Display	Press to show the 16-channel display mode.

### 3.2.2 PTZ Control Panel

**Note:** In the PTZ control mode, hot point is supported to move the camera view to the specified point after a click.

Click  on the quick menu bar to display the panel as follows:

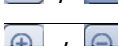

	Camera Menu	Click to enter the camera main menu. For details about each camera menu, please refer to its own user manual.
	Enter	Click to confirm your selection / enter the menu.
	Up / Down / Left / Right	Click to move your selection up / down / left / right, or change settings.
	Zoom in / out max	Click to zoom in on the image to the largest / zoom out on the image to its original size.
	Zoom in / out	Click to zoom in / out the image.
	Focus near / far	Click to adjust the focus of the image.
	Auto mode	Click to activate the auto function. Before using it, you need to assign a specific function that will be enabled when "AUTO" is clicked. For details, please refer to the user manual of the PTZ camera.
	Preset point	Click to enter the PTZ preset point you want to see.

## 3.3 Main Menu







Right-click anywhere on the screen to show the main menu as follows, and right-click again to exit.

For details about each menu and its sub-menus, please refer to "5. MAIN MENU" at page 14.

For details about the menu structure, please refer to "APPENDIX 5 MAIN MENU STRUCTURE" at page 59.

### Main Menu



	QUICK START	Click to set the status display, image settings, and date & time.
	DATE SETUP	Click to set the date display and daylight saving.
	SYSTEM	Click to set the system configurations.
	EVENT INFORMATION	Click to enter the event search menu.
	ADVANCE CONFIG	Click to set CAMERA, DETECTION, ALERT, NETWORK, SNTP, DISPLAY, RECORD, REMOTE, DCCS, IVS & NOTIFY.
	SCHEDULE SETTING	Click to set record timer and detection timer.

## 4. BASIC OPERATION

### 4.1 Live Page



Icon	Function	Icon	Function	Icon	Function
	Live audio channel (1~4)		Playback audio channel (1~4)		Audio channel off
	Digital zoom on		Digital zoom off		Timer recording
	Network disconnected		Internet connected		LAN connected
	USB mouse connected		USB flash drive / device connected		No USB device connected
	Key lock		PTZ mode on		HDD overwrite
	Administrator		Operator		Sequence
	Recording		Alarm event		Motion event
	Virtual fence event		One way pass event		Scene Change event
	Human detection event		Flow counting enabled		Smart zoom

### 4.2 Record Icon

#### 1) Manual Recording

By defaults, manual recording is on () when the DVR is powered on and a HDD is installed.

#### 2) Event Recording

The event icons, / / / / / , show on the screen when their respective events occur and the related record function is on.

#### 3) Timer Recording

When timer recording is on, you will see "" on the screen.

#### 4) HDD Overwritten

Be defaults, the HDD overwritten function is set to ON, and "" will be shown on the screen.

### 4.3 Playback

Click "" on the quick menu bar to display the playback control panel, and click to play the latest recorded video clip, or click to enter the search list.














**Note:** There must be at least 8192 images of recorded data for playback to work properly. If not, the device will stop playback. For example, if the IPS is set to 30, the recording time should be at least 273 seconds (8192 images / 30 IPS) for the playback to work properly.

**Note:** During playback, the image size of the recording (FRAME, FIELD or CIF) will be shown on the screen.

### 4.3.1 Playback Control


	Fast Forward	Increase the speed for fast forward. Click once to get 4X speed forward and click twice to get 8X speed, etc., and the maximum speed is 32X.
	Fast Rewind	Increase the speed for fast rewind. Click once to get 4X speed rewind and click twice to get 8X speed, etc., and the maximum speed is 32X.
	Play / Pause	Click to play the latest recorded video clip immediately, and click again to pause. In the pause mode, click  once to get one frame forward, and click  to get one frame rewind.
	Stop	Click to stop the video playback.
	Slow Playback	Click once to get 1/4X speed playback, and click twice to get 1/8X speed playback.
	Previous / Next Hour	Click to jump to the next / previous time interval in an hour, for example, 11:00 ~ 12:00 or 14:00 ~ 15:00, and start playing the earliest event video clip recorded during this whole hour.




### 4.3.2 Event Search

Click  to quickly search the recorded files by event lists: RECORD / MOTION / ALARM / TIME / HUMAN DETECTION / IVS / STATISTIC, or select FULL to show all the event logs.

To quickly search the time you want, select "QUICK SEARCH". For details, please refer to "5.4.1 QUICK SEARCH" at page 20.




### 4.3.3 Audio Playback


In the playback mode, click  on the quick menu bar as many times as needed to select live or playback audio from audio channel 1~4.


 Live audio from audio channel 1~4 (indicated in white).  Playback audio from audio channel 1~4 (indicated in yellow).  Audio channel unselected

**Note:** To make a video backup with audio, make sure the camera which supports the audio function is connected to the video-in channel and audio-in channel. For example, the audio data from audio CH1 will be recorded with the video data from video CH1.

## 4.4 User Level Switch

In the key lock mode () , move your USB mouse to display the password input keypad. There are two user levels for accessing the DVR: Administrator () & Operator () .

When the administrator password is entered,  will be shown on the status bar of the screen and all operations are allowed. The default administrator password is 0000.

When the operator password is entered,  will be shown on the status bar of the screen, and the main menu is **NOT** allowed to access. The operator user level needs to be set in the main menu “SYSTEM” → “TOOLS”.

To switch between these two user levels, click the current user level icon to switch to the key lock mode, and move your mouse to show the password input keypad, and enter the password of the user level you want.

## 4.5 Video Output Switch

It's not allowed to have video output simultaneously on a CRT monitor (connected to MONITOR) and LCD monitor (connected to VGA).

The default video output setting is “AUTO”, meaning the DVR will automatically detect the video output source. When VGA and MONITOR are both connected, the default monitor output is VGA.

To change the video output setting manually:

- To force the video output via MONITOR, press the left key ◀ on the DVR front panel at DVR power-on.
- To force the video output via VGA, press the right key ▶ on the DVR front panel at DVR power-on.

The setting is changed when you hear a short beep sound.

OR:

When the DVR is powered on and initialized, right-click to show the main menu, and select “ADVANCE CONFIG” → “DISPLAY” → “DISPLAY OUTPUT PATH”.

Select “VGA” to switch to the connected LCD monitor, or “COMPOSITE” to switch to the connected CRT monitor. The DVR will then reboot for the change to take effect.

ADVANCE CONFIG		
CAMERA	DE-INTERLACE <i>(For Selected Models Only)</i>	OFF
DETECTION	FULL SCREEN DURATION	03
ALERT	QUAD SCREEN DURATION <i>(For Selected Models Only)</i>	03
NETWORK	DWELL SCREEN DURATION	03
<b>DISPLAY</b>	DISPLAY COVERT	ON
RECORD	HDD DISPLAY MODE	HDD SIZE
REMOTE	DISPLAY OUTPUT PATH	AUTO
DCCS	ALPHA BLENDING	200
IVS		
NOTIFY		
EXIT		

5. MAIN MENU

Right-click anywhere on the screen to show the main menu as follows, and right-click again to exit. For details about the menu structure, please refer to “APPENDIX 5 MAIN MENU STRUCTURE” at page 59.

Main Menu



	QUICK START	Click to set the status display, image settings, and date & time.
	DATE SETUP	Click to set the date display and daylight saving.
	SYSTEM	Click to set the system configurations.
	EVENT INFORMATION	Click to enter the event search menu.
	ADVANCE CONFIG	Click to set CAMERA, DETECTION, ALERT, NETWORK, DISPLAY, RECORD, REMOTE, DCCS, IVS & NOTIFY.
	SCHEDULE SETTING	Click to set record timer and detection timer.

5.1 QUICK START

5.1.1 GENERAL

➤ For 16CH / 8CH Models

QUICK START		
<b>GENERAL</b> TIME SETUP	CHANNEL TITLE	ON
	EVENT STATUS	ON
	DATE DISPLAY	ON
	IMAGE SIZE	CIF
	QUALITY	SUPER BEST
	IMAGE PER SECOND	120
	EXIT	

➤ For 4CH Model

QUICK START		
<b>GENERAL</b> TIME SETUP	CHANNEL TITLE	ON
	EVENT STATUS	ON
	DATE DISPLAY	ON
	RECORD CONFIGURATION	SETUP
	EXIT	

- 1) CHANNEL TITLE  
Select to display the channel title or not (ON / OFF).
- 2) EVENT STATUS  
Select to display the event icons or not (ON / OFF).

**Note:** For details about each event icon, please refer to “4.1 Live Page” at page 11.

3) DATE DISPLAY

Select to display the date or not (ON / OFF).

4) IMAGE SIZE (For 16CH / 8CH Models Only)

Select one of the image sizes: FRAME, FIELD or CIF.

5) QUALITY (For 16CH / 8CH Models Only)

Select one of the 4 quality options: SUPER BEST, BEST, HIGH & NORMAL.

6) IMAGE PER SECOND (For 16CH / 8CH Models Only)

Select the images per second for MANUAL RECORD.

7) RECORD CONFIGURATION (For 4CH Model Only)

Click "SETUP" to enter the setting page individually for manual record, event record and timer record.

a) Select the record type you want to set.

b) In "CHANNEL", select "ALL" to apply the changes here to all channels.

QUICK START			
MANUAL	EVENT	TIMER	
CHANNEL		IMAGE SIZE	I.P.S.
ALL		CIF	100
			QUALITY SUPER BEST
			EXIT

Or, select "BY CHANNEL" to set the image size, image per second & image quality individually for each channel.

QUICK START				
MANUAL	EVENT	TIMER		
CHANNEL		IMAGE SIZE	I.P.S.	QUALITY
CH1		CIF	25	SUPER BEST
CH2		CIF	25	SUPER BEST
CH3		CIF	6	HIGH
CH4		FIELD	25	SUPER BEST
AVAILABLE IPS: CIF 69 / FIELD 34 / FRAME 17				
			APPLY	EXIT

**Note:** The allocatable IPS (image per second) in each image size for a DVR is fixed. When allocating IPS to each channel, select "LOCK" to remind you of the remaining IPS in each image size available for the rest of the channels.

## 5.1.2 TIME SETUP

QUICK START	
GENERAL	DATE 2009 / NOV / 17
<b>TIME SETUP</b>	TIME 15 : 35 : 53
EXIT	

### 1) DATE

Set the current date. The default display format is YEAR – MONTH – DATE (Y-M-D).

---

**Note:** To change the date display format, please refer to "5.2.1 DATE INFO".

---

### 2) TIME

Set the current time in HOUR : MIN : SEC.

## 5.2 DATE SETUP

### 5.2.1 DATE INFO

DATE SETUP	
<b>DATE INFO</b>	DISPLAY DATE OF MODE TEXT MODE
DAYLIGHT	FORMAT Y/M/D
EXIT	

### 1) DISPLAY DATE OF MODE

Show the date display mode.

### 2) FORMAT

Select one date format from the following three options: Y/M/D, M/D/Y or D/M/Y.

### 5.2.2 DAYLIGHT

DATE SETUP	
DATE INFO	DAYLIGHT SAVING OFF
<b>DAYLIGHT</b>	START TIME
	1 <sup>ST</sup> MON AUG 06:00
	END TIME
	LAST MON OCT 10:00
	ADJUST 01:00
EXIT	

Depending on the time zone you're in:

### 1) DAYLIGHT SAVING



Select to enable (ON) or disable (OFF) this function.

- 2) START TIME / END TIME  
Set the start time and end time.
- 3) ADJUST  
Set the time in HOUR : MIN.

## 5.3 SYSTEM

### 5.3.1 TOOLS

SYSTEM		
<b>TOOLS</b> SYSTEM INFO USB BACKUP DVD BACKUP	LANGUAGE	ENGLISH
	ADMIN PASSWORD	SETUP
	OPERATOR PASSWORD	SETUP
	UPGRADE	SUBMIT
	BACKUP CONFIG	SUBMIT
	RESTORE CONFIG	SUBMIT
EXIT		

- 1) LANGUAGE  
Select the language of the OSD.
- 2) ADMIN PASSWORD  
Click “SETUP” to change the administrator password. The default administrator password is **0000**.  
When you're prompted to enter the DVR password, enter the administrator password, and  will be shown on the status bar of the screen and all operations are allowed.
- 3) OPERATOR PASSWORD  
Click “SETUP” to set or change the operator password. .  
When you're prompted to enter the DVR password, enter the operator password, and  will be shown on the status bar of the screen and the main menu is **NOT** allowed to access.
- 4) UPGRADE  
Save the upgrade files obtained from your installer or distributor in a compatible USB flash drive, and insert it into the USB port at the front panel. Then, click “SUBMIT” to start upgrading.

---

**Note:** Before using the USB flash drive, please use your PC to format the USB flash drive to FAT32 format first. For the list of compatible USB flash drives, please refer to “APPENDIX 3 COMPATIBLE USB FLASH DRIVE LIST” at page 57.

---



---

**Note:** After upgrading firmware, it's recommended to clear all HDD data for the system to work more stably. Before clearing all HDD data, please remember to make video backup.

---

- 5) BACKUP CONFIG / RESTORE CONFIG  
To keep the current configurations after DVR upgrade, insert a compatible USB flash drive into the USB port, and select “SUBMIT” in “BACKUP CONFIG” to copy the current DVR configurations to a file “System.bin” and save to your USB flash drive.  
To restore the DVR configurations, insert the USB flash drive including “System.bin” to the USB port, and select “SUBMIT” in “RESTORE CONFIG”.

### 5.3.2 SYSTEM INFO

SYSTEM		
TOOLS	BAUD RATE	2400
<b>SYSTEM INFO</b>	HOST ID	000
USB BACKUP	R.E.T.R	5
DVD BACKUP	AUTO KEY LOCK	NEVER
	CLEAR HDD	HDD-0
	RESET DEFAULT	SUBMIT
	REMOTE CONTROL ID	000
	SERIAL TYPE	RS485
	VIDEO FORMAT	NTSC
	VERSION	1010-1005-1006-1007
EXIT		

#### 1) BAUD RATE

Set the baud rate of the DVR (2400 / 9600 / 19200 / 38400 / 57600 / 115200).

#### 2) HOST ID

Set the ID of the DVR (000 ~ 254).

#### 3) R.E.T.R

Select the timeout in minute after which the R.E.T.R. function will be activated (3 / 5 / 10 / 30).

#### 4) AUTO KEY LOCK

Set the time-out in second after which the key lock function is activated (NEVER / 30 / 60 / 120).

#### 5) CLEAR HDD

Select the HDD you want to clear, and click “YES” to confirm or “NO” to cancel.

It's recommended to clear all data in the hard disk when:

- It's the first time to use this DVR to ensure the recorded data are not mixed with other data previously saved in the same hard disk.
- The DVR firmware is upgraded for the system to work more stably. Before clearing all HDD data, please remember to make video backup.
- DVR date and time are changed accidentally when the recording function is activated. Otherwise, the recorded data will be disordered and you will not be able to find the recorded file to backup by time search.

#### 6) RESET DEFAULT

Click “SUBMIT” to reset all settings as default, and select “YES” to confirm or “NO” to cancel. The DVR will reboot after reset.

#### 7) REMOTE CONTROL ID

This function is available when users need to control two or more DVRs with one IR remote controller. The ID set here is used to identify the DVR the remote controller is going to control. Please also read the user manual of the IR remote controller for details.

#### 8) SERIAL TYPE

Here shows the serial type of the DVR (RS-485).

#### 9) VIDEO FORMAT

Here shows the information of the DVR video format (NTSC / PAL).

#### 10) VERSION

Here shows the firmware version information.

### 5.3.3 USB BACKUP / DVD BACKUP

Insert a compatible USB flash drive to the USB port at the front panel, or press ▲ to eject the DVD writer and place a DVD-R or CD-R to it.

**Note:** Before using the USB flash drive, please use your PC to format the USB flash drive to FAT32 format first. For the list of compatible USB flash drives, please refer to "APPENDIX 3 COMPATIBLE USB FLASH DRIVE LIST" at page 57.

SYSTEM	
TOOLS	START DATE 2009/NOV/19
SYSTEM INFO	START TIME 08:30:21
<b>USB BACKUP</b>	END DATE 2009/NOV/19
DVD BACKUP	END TIME 17:59:29
	CHANNEL <input checked="" type="checkbox"/> 01 <input type="checkbox"/> 02 <input type="checkbox"/> 03 <input type="checkbox"/> 04
	<input checked="" type="checkbox"/> 05 <input type="checkbox"/> 06 <input type="checkbox"/> 07 <input type="checkbox"/> 08
	<input checked="" type="checkbox"/> 09 <input type="checkbox"/> 10 <input type="checkbox"/> 11 <input type="checkbox"/> 12
	<input checked="" type="checkbox"/> 13 <input type="checkbox"/> 14 <input type="checkbox"/> 15 <input type="checkbox"/> 16
	HARD DISK ALL HDD
	BACKUP SUBMIT
	REQUIRE SIZE: 554MB SUBMIT
EXIT	AVAILABLE SIZE: 3788.0MB

1) START DATE / START TIME

Select the start date & time.

2) END DATE / TIME

Select the end date & time.

3) CHANNEL

Click to select the channel(s).

4) HARD DISK

Select the hard disk containing the video data you need or "ALL HDD".

5) BACKUP

Click "SUBMIT" to start backup.

6) REQUIRE SIZE

To know the size of the expected backup video before backup, click "SUBMIT" to start calculating.

■ Backup File Playback

During the backup process, a file player installer "PLAYER.EXE" will also be copied into your USB flash drive or disk, and you will see the message "CHECK PLAYER" shown on the screen.

**Note:** The maximum number of CD-R or DVD-R backup files in the CD or DVD is 41.

Insert your USB flash drive or place the CD or DVD into the DVD-ROM drive of your PC. Install the file player "PLAYER.EXE", and double click a backup file to play it directly in your PC and see if the backup is successful.

**Note:** The supported PC operating systems are Windows 7, Vista, XP & 2000.



## 5.4 EVENT INFORMATION

### 5.4.1 QUICK SEARCH

EVENT INFORMATION																																													
<b>QUICK SEARCH</b> EVENT SEARCH HDD INFO EVENT LOG	HARD DISK	ALL HDD																																											
	CHANNEL	<input checked="" type="checkbox"/> 01	<input type="checkbox"/> 02 <input type="checkbox"/> 03 <input type="checkbox"/> 04																																										
		<input checked="" type="checkbox"/> 05	<input type="checkbox"/> 06 <input type="checkbox"/> 07 <input type="checkbox"/> 08																																										
		<input checked="" type="checkbox"/> 09 <input type="checkbox"/> 10 <input type="checkbox"/> 11 <input type="checkbox"/> 12																																											
		<input checked="" type="checkbox"/> 13	<input type="checkbox"/> 14 <input type="checkbox"/> 15 <input type="checkbox"/> 16																																										
<div style="display: flex; justify-content: space-between; align-items: center;"> <div> <div>◀</div> <div>2009</div> <div>▶</div> </div> <div>NOV</div> </div> <table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th>SUN</th> <th>MON</th> <th>TUE</th> <th>WED</th> <th>THU</th> <th>FRI</th> <th>SAT</th> </tr> </thead> <tbody> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td></tr> <tr><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td></tr> <tr><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td></tr> <tr><td>22</td><td><b>23</b></td><td>24</td><td>25</td><td>26</td><td>27</td><td>28</td></tr> <tr><td>29</td><td>30</td><td></td><td></td><td></td><td></td><td></td></tr> </tbody> </table> <div style="display: flex; justify-content: space-between; align-items: center; margin-top: 5px;"> <div>00</div> <div>06</div> <div>12</div> <div>18</div> <div>24</div> </div> <div style="display: flex; justify-content: space-between; align-items: center; margin-top: 5px;"> <div>15 : 20</div> <div>SUBMIT</div> </div>				SUN	MON	TUE	WED	THU	FRI	SAT	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	<b>23</b>	24	25	26	27	28	29	30					
SUN	MON	TUE	WED	THU	FRI	SAT																																							
1	2	3	4	5	6	7																																							
8	9	10	11	12	13	14																																							
15	16	17	18	19	20	21																																							
22	<b>23</b>	24	25	26	27	28																																							
29	30																																												
EXIT																																													

Step1: Select the hard disk and channel including the video data you want to search.

Step2: Select the month including the video data you want to search from the calendar, and the date with recorded data will be highlighted.

Step3: Select the date you want from the calendar, and the time with recorded data will be highlighted from the time scale bar.

Step4: To immediately play the video clip, click "SUBMIT".

To choose the start time for video playback, move your mouse cursor to the highlighted time, and click to confirm the time when the time display below is the time you want. The video playback is activated right away when you confirm the time.

**Note:** For video playback operations, please refer to "4.3 Playback" at page 11.

### 5.4.2 EVENT SEARCH

EVENT INFORMATION		
QUICK SEARCH <b>EVENT SEARCH</b> HDD INFO EVENT LOG	DATE	2009/NOV/19
	TIME	16:13:16
	CHANNEL	1
	HARD DISK	ALL HDD
	EVENT TYPE	MOTION
	SEARCH	START
EXIT		

1) DATE / TIME

Select the specific time period that you want to search.

2) CHANNEL

Select the video channel you want to search.

3) HARD DISK

Select the hard disk including the video data you want to search, or select "ALL HDD".

4) EVENT TYPE

Select the event type you want to search: MOTION / ALARM / HUMAN DETECTION / INFLOW / OUTFLOW / VIRTUAL FENCE / ONE WAY PASS / SCENE CHANGE.

5) SEARCH

Click “START” to start search and play the video data immediately.

**5.4.3 HDD INFO**

You can check the remaining capacity of the connected HDD in this device.

EVENT INFORMATION		
QUICK SEARCH EVENT SEARCH <b>HDD INFO</b> EVENT LOG	HDD NUMBER	HDD SIZE
	HDD-0	1.197GB
EXIT		

**5.4.4 EVENT LOG**

You can check all the event information (event type, time and channel), or clear all log records.

EVENT INFORMATION			
QUICK SEARCH EVENT SEARCH <b>HDD INFO</b> EVENT LOG	EVENT	TIME	COMMENT
	KEY UNLOCK	2009/NOV/19 15:49:07	
	VIDEO LOSS	2009/NOV/19 15:32:05	04
	POWER ON	2009/NOV/19 15:32:02	
PREV NEXT CLEAN			
EXIT			

**5.5 ADVANCE CONFIG****5.5.1 CAMERA**

ADVANCE CONFIG														
CAMERA	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8	CH9	CH10	CH11	◀	▶	
	DETECTION										BRIGHTNESS		128	
	ALERT										CONTRAST		128	
	NETWORK										SATURATION		128	
	DISPLAY										HUE		128	
	RECORD										COV.		OFF	
	REMOTE										REC		ON	
	DCCS										CHANNEL TITLE		EDIT	
IVS														
NOTIFY														
EXIT														

1) BRIGHTNESS / CONTRAST / SATURATION / HUE

Click the current value to manually adjust the brightness/contrast/saturation/hue of each channel here.

2) COV.

Select if you want to mask the selected channel under recording (ON / OFF). When this function is activated, the wording “COV.” Will be shown on the channel screen.

**Note:** To hide the wording “COV.” When this function is on, go to “DISPLAY”, and set “DISPLAY COVERT” to “OFF”. For details, please refer to “5.5.6 DISPLAY” at page 26.

3) REC

Select if you want to enable recording for the selected channel (ON / OFF).

---

**Note:** When this function is disabled, no manual, event or timer recording will be activated even if any of these three record functions is set to "ON".

---

4) CHANNEL TITLE

Click "EDIT" to input the channel title (up to six characters). The default title is the channel number.

**5.5.2 DETECTION**

ADVANCE CONFIG												
CANERA	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8	CH9	CH10	CH11	◀ ▶
<b>DETECTION</b>	LS											07
ALERT	SS											03
NETWORK	TS											02
DISPLAY	DET											OFF
RECORD	ALARM											OFF
REMOTE	AREA											EDIT
DCCS												
IVS												
NOTIFY												
EXIT												

1) LS (Level of Sensitivity)

"LS" is to set the sensitivity of comparing two different images. The smaller the value is, the higher sensitivity for motion detection. The highest sensitivity setting is 00, and the lowest sensitivity setting is 15. The default value is 07.

2) SS (Spatial Sensitivity)

"SS" is to set the sensitivity for detecting the size of one object (the number of the grids) on the screen. The smaller the value is, the higher sensitivity for motion detection.

The highest sensitivity setting is 00, and the lowest sensitivity setting is 15. The default setting is 03.

---

**Note:** The default setting of SS is 03, which means once an object is detected more than 3 grids, the system will get triggered. So the value of SS must be less than the number of grids that you set up for the motion detection area.

---

3) TS (Time of Sensitivity)

"TS" is to set the sensitivity regarding how long one object stays in the detection area and triggers the recording. The smaller the value is, the higher sensitivity for motion detection.

The highest sensitivity setting is 00, and the lowest sensitivity setting is 15. The default setting is 02.

4) DET

Select if you want to activate the motion detection function for the selected channel (ON/OFF).

5) ALARM

Select N.C./ N.O depending on your installation need. The default alarm value is OFF.

6) AREA

Click "EDIT" to set the motion detection area.

There are 16 × 12 grids per camera for all channels. Pink blocks represent the area that is not being detected while the transparent blocks are the area under detection.

### 5.5.3 ALERT

ADVANCE CONFIG		
CAMERA	EXT. ALERT	ON
DETECTION	INT. BUZZER	OFF
<b>ALERT</b>	KEY BUZZER	ON
NETWORK	VLOSS BUZZER	ON
DISPLAY	MOTION BUZZER	ON
RECORD	ALARM BUZZER	ON
REMOTE	HDD BUZZER	ON
DCCS	ALARM DURATION (SEC)	5
IVS	HDD NEARLY FULL (GB)	5
NOTIFY		
EXIT		

1) EXT. ALERT

Select to enable or disable the sound when any external alarm is triggered (ON / OFF).

2) INT. BUZZER

Select to enable or disable the sound (ON / OFF) for all internal buzzers: KEY BUZZER, VLOSS BUZZER, MOTION BUZZER, ALARM BUZZER, and HDD BUZZER.

---

**Note:** When this item is set to "OFF", item 3) to item 7) will be disabled even though they are set to ON.

---

3) KEY BUZZER

Select to enable or disable the sound when pressing the buttons on the front panel (ON / OFF).

4) VLOSS BUZZER

Select to enable or disable the sound when video loss happened (ON / OFF).

5) MOTION BUZZER

Select to enable or disable the sound when any motion alarm is triggered (ON / OFF).

6) ALARM BUZZER

Select to enable or disable the sound when any internal alarm is triggered (ON / OFF).

7) HDD BUZZER

Select to enable or disable the sound (ON / OFF) when the HDD remaining capacity reaches to the value set in "HDD NEARLY FULL (GB)".

8) ALARM DURATION (SEC)

Select the duration time for alarm buzzer in second (5 / 10 / 20 / 40).

9) HDD NEARLY FULL (GB)

If HDD BUZZER is enabled, select the duration time for buzzer notifications when the hard disk available capacity is 5/10/15/20 GB left.

### 5.5.4 NETWORK

#### NETWORK

The description below is only for STATIC network type. For PPPOE and DHCP settings, you need to set from "Video Viewer".

For details, please download the extended user manual for "Video Viewer" from

<http://www.surveillance-download.com/user/CMS.pdf>.

➤ **STATIC**

ADVANCE CONFIG				
CAMERA	NETWORK	SNTP	FTP	E-MAIL
DETECTION	NETWORK TYPE	STATIC		
ALERT	IP	192.168.001.010		
<b>NETWORK</b>	GATEWAY	192.168.001.254		
SNTP	NETMASK	255.255.255.000		
DISPLAY	PRIMARY DNS	168.095.001.001		
RECORD	SECONDARY DNS	139.175.055.244		
REMOTE	PORT	0080		
DCCS	SAVE NETWORK SETTING	APPLY		
IVS				
NOTIFY				
EXIT				

1) NETWORK TYPE

Select the network type as STATIC and set all the information needed in the DVR.

2) NETWORK INFORMATION (IP / GATEWAY / NETMASK)

Key in all the network information obtained from your ISP (Internet Service Provider).

3) DNS (PRIMARY DNS / SECONDARY DNS)

Key in the IP address of the domain name server obtained from your ISP (Internet Service Provider).

4) PORT

The valid number ranges from 1 to 9999. The default value is 80. Typically, the TCP port used by HTTP is 80. However in some cases, it is better to change this port number for added flexibility or security.

5) SAVE NETWORK SETTING

Click "APPLY" to confirm the settings.

SNTP

Before using this function, please connect your DVR to Internet.

ADVANCE CONFIG				
CAMERA	NETWORK	SNTP	FTP	E-MAIL
DETECTION	GMT	(GMT + 8:00) TAIPEI		
ALERT	NTP SERVER	tock.stdtime.gov.tw		
<b>NETWORK</b>	SYNC PERIOD	OFF		
SNTP				
DISPLAY				
RECORD				
REMOTE				
DCCS				
IVS				
NOTIFY				
EXIT				

1) GMT

Select your time zone. There are 75 time zones for you to choose.

2) NTP SERVER

Click to change the default NTP server to another server they're familiar with, or keep the default NTP server.

3) SYNC PERIOD

Select to synchronize the DVR time everyday (DAILY), or turn this function off (OFF).

## FTP

When this function is enabled and an event occurs, a html file including a link will be sent to the specified FTP site. Click the link to access to this DVR and check the event recording.

ADVANCE CONFIG	
CAMERA DETECTION ALERT	<div> <div>NETWORK</div> <div>SNTP</div> <div>FTP</div> <div>E-MAIL</div> </div>
<b>NETWORK</b>	FTP ALERT ON USER NAME MANAGER PASSWORD ●●●●●● SERVER 192.168.2.32 PORT 0021 DIRECTORY UPLOAD
SNTP DISPLAY RECORD REMOTE DCCS IVS NOTIFY	
EXIT	

## E-MAIL

When this function is enabled and an event occurs, a html file including a link will be sent to the specified E-mail address. Click the link to access to this DVR and check the event recording.

ADVANCE CONFIG	
CAMERA DETECTION ALERT	<div> <div>NETWORK</div> <div>SNTP</div> <div>FTP</div> <div>E-MAIL</div> </div>
<b>NETWORK</b>	E-MAIL ALERT ON SMTP SERVER SNTP.GMAIL.COM PORT 465 MAIL FROM MANAGER SSL ENCRYPTION ON VERIFY PASSWORD ON USER NAME MANAGER PASSWORD ●●●●●● RECEIVER SETUP
SNTP DISPLAY RECORD REMOTE DCCS IVS NOTIFY	
EXIT	

### 1) E-MAIL ALERT

Select "ON" to enable this function, or "OFF" to disable this function.

### 2) SMTP SERVER

Enter the SMTP server address provided from your e-mail system supplier.

### 3) PORT

Enter the port number provided from your e-mail system supplier. If this column is left blank, the e-mail server will use port 25 to send e-mails.

### 4) MAIL FROM

Enter the sender's name.

### 5) SSL ENCRYPTION

Select "ON" if your e-mail server is using SSL encryption to protect your e-mail content from unauthorized access.

### 6) VERIFY PASSWORD

Some mail servers are required to verify the password. Please enter the "user name" and "password".

### 7) USER NAME / PASSWORD

Enter the "user name" and "password" when "VERIFY PASSWORD" is set to "ON".

### 8) RECEIVER

Select "SETUP" to add up to 15 e-mail addresses of the assigned recipients.

## 5.5.6 DISPLAY

ADVANCE CONFIG		
CAMERA	DE-INTERLACE <i>(For Selected Models Only)</i>	OFF
DETECTION	FULL SCREEN DURATION	03
ALERT	QUAD SCREEN DURATION <i>(For Selected Models Only)</i>	03
NETWORK	DWELL SCREEN DURATION	03
<b>DISPLAY</b>	DISPLAY COVERT	ON
RECORD	HDD DISPLAY MODE	HDD SIZE
REMOTE	DISPLAY OUTPUT PATH	AUTO
DCCS	ALPHA BLENDING	200
IVS		
NOTIFY		
EXIT		

### 1) DE-INTERLACE

Select to enable or disable the de-interlace function (ON / OFF).

---

**Note:** If you set the recording image size as "FRAME", please TURN ON de-interlace function.  
If you set the recording image size as "CIF", please TURN OFF the de-interlace function.

---

### 2) FULL SCREEN DURATION

Select the full screen dwell duration time in second (03 / 05 / 10 / 15).

### 3) QUAD SCREEN DURATION *(For Selected Models Only)*

Select the quad screen dwell duration time in second (03 / 05 / 10 / 15).

### 4) DWELL SCREEN DURATION

Select the duration time in second for the CALL monitor function (03 / 05 / 10 / 15).

### 5) DISPLAY COVERT

Select "ON" or "OFF" to display or hide the wording "COV." When covert recording is activated in "CAMERA".

### 6) HDD DISPLAY MODE

Select "SIZE" to show the remaining HDD capacity for recording in GB, or "TIME" to show the remaining recording time.

### 7) DISPLAY OUTPUT PATH

The default video output setting is "AUTO", meaning the DVR will automatically detect the video output source. When a CRT monitor and LCD monitor are both connected, the default video output is via the connected LCD monitor.

Select "VGA" to fix the video output via the connected LCD monitor, or "COMPOSITE" to fix the video output via the connected CRT monitor.

When the change is made, the DVR will then reboot for the change to take effect.

### 8) ALPHA BLENDING

Click to manually adjust the transparent level of the main menu.

## 5.5.7 RECORD

**Note:** Please DO NOT change the date or time of your DVR after the recording function is activated. Otherwise, the recorded data will be disordered and you will not be able to find the recorded file to backup by time search. If users change the date or time accidentally when the recording function is activated, it's recommended to clear all HDD data, and start recording again.

ADVANCE CONFIG		
CAMERA	MANUAL RECORD ENABLE	ON
DETECTION	EVENT RECORD ENABLE	ON
ALERT	TIMER RECORD ENABLE	ON
NETWORK	EVENT RECORD IPS	120
DISPLAY	TIMER RECORD IPS	120
<b>RECORD</b>	PRE-ALARM RECORD	ON
REMOTE	OVERWRITE	ON
DCCS	EVENT RECORD ALL CHANNEL	OFF
IVS	KEEP DATA LIMIT (DAYS)	OFF
NOTIFY		
EXIT		

- 1) MANUAL RECORD ENABLE  
Set the manual recording function on / off.
- 2) EVENT RECORD ENABLE  
Set the event recording function on / off.
- 3) TIMER RECORD ENABLE  
Set the timer recording function on / off.
- 4) EVENT RECORD IPS  
Select the images per second for EVENT RECORD (Recording that is triggered by alarm or motion).
- 5) TIMER RECORD IPS  
Select the images per second for TIMER RECORD (Recording that is activated according to the scheduled time).
- 6) PRE-ALARM RECORD  
Select to enable or disable the pre-alarm function (ON / OFF).  
When pre-alarm and event recording functions are both activated, the DVR will record 8MB data before an alarm / motion event is triggered.
- 7) OVERWRITE  
Select "ON" to overwrite previous recorded data in your HDD when the HDD is full. When this function is on and the HDD is full, the DVR will clear 8GB data from the oldest for continuous recording without notice.
- 8) EVENT RECORD ALL CHANNEL  
Select to record all channels (ON) or record the channel with an event only (OFF) for any event.
- 9) KEEP DATA LIMITS (DAYS)  
Assign the maximum recording days from 01 to 31 after which all the recorded data will be removed, or select "OFF" to disable this function.



## 5.5.8 REMOTE

ADVANCE CONFIG												
CANERA DETECTION ALERT NETWORK DISPLAY RECORD <b>REMOTE</b> DCCS IVS NOTIFY	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8	CH9	CH10	CH11	◀ ▶
	DEVICE							PTZ				
	ID							00				
	PROTOCOL							NORMAL				
	RATE							2400				
EXIT												

### 1) DEVICE

For the PTZ camera, select “PTZ”.

*For a zoom lens control camera:*

The DVR will detect it automatically and display its model number here.

To configure the parameters for a zoom lens control camera, please refer to “5.5.9 DCCS” at page 28. Different zoom lens control cameras might have different parameter settings. For details, please refer to their own user manuals.

### 2) ID

Click the current value to set the ID number (0 ~ 255) for the connected PTZ camera if necessary.

Make sure the ID setting of the camera is the same as the setting here, or the DVR will not be able to control the device.

---

**Note:** To know the default ID of the PTZ camera, please refer to its user manual.

---

### 3) PROTOCOL

Select NORMAL (our protocol), P-D (PELCO-D) or P-P (PELCO-P) protocol.

### 4) RATE

Select the baud rate for the connected PTZ camera (2400 / 4800 / 9600 / 19200 / 57600 / 115200).

Make sure the baud rate setting of the camera is the same as the setting here, or the DVR will not be able to control the device.

---

**Note:** To know the default baud rate of the PTZ camera, please refer to its user manual.

---

## 5.5.9 DCCS

ADVANCE CONFIG												
CANERA DETECTION ALERT NETWORK DISPLAY RECORD REMOTE <b>DCCS</b> IVS NOTIFY	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8	CH9	CH10	CH11	◀ ▶
	DIAGNOSTIC							START				
	MENU							SETUP				
	DEVICE							AVK523				
	CONNECTION							OK				
EXIT												

### 1) DIAGNOSTIC

Click “START” to start examining the DCCS signal transmission between the DVR and the camera. The result will display in “CONNECTION”.

### 2) MENU

Click “SETUP” to configure the connected zoom lens control camera.

Different zoom lens control cameras might have different parameter settings. For details, please refer to their own user manuals.

**Note:** While configuring the camera parameters, the DVR will switch to the corresponding channel, and you can simultaneously preview the effects for the settings.

3) DEVICE

Here shows the model number of the camera.

4) CONNECTION

Here shows the examining result for DCCS signal transmission between the DVR and camera. The message is as follows:

MESSAGE SHOWN	MEANING
CHECKING	The DVR is checking the DCCS signal transmission between the DVR and camera.
OK	The signal transmission is fine and the DCCS function works properly.
FAIL	The signal transmission is too weak or not available for the DCCS function to work properly.

### 5.5.10 IVS

IVS, Intelligent Video Surveillance, is the advanced application for motion detection, but more precise and smarter. It can be applied to different situations with one of the following three modes: FLOW COUNTING, VIRTUAL FENCE, and ONE WAY PASS.

When anyone crosses the detection line (virtual fence), the recording will be on.

**Note:** Four camera channels are supported for this function. For 16CH and 8CH models, users are allowed to select four camera channels randomly to use this function; for 4CH models, all the four camera channels are supported.

ADVANCE CONFIG		
CAMERA	IVS1 IVS2 IVS3 IVS4	
DETECTION	CAMERA (For 16CH & 8CH models only)	CH3
ALERT	IVS MODE	FLOW COUNTING
NETWORK	DISPLAY LINE	OFF
DISPLAY	SENSITIVITY	07
RECORD	RESET COUNT	SUBMIT
REMOTE	VIRTUAL FENCE AREA	SETUP
DCCS	SCENE CHANGE	OFF
<b>IVS</b>	SCENE CHANGE SENSITIVITY	MIDDLE
NOTIFY		
EXIT		

1) CAMERA (For 16CH & 8CH models only)

Select the camera channel that you want to use the IVS function.

2) IVS MODE

Select one of the following three modes depending on your environment:

MODE	DESCRIPTION
FLOW COUNTING	A virtual detection line is set to detect the moving direction of pedestrians for flow counting.
VIRTUAL FENCE	A virtual detection line is set to detect intruders crossing the detection line, and an alarm will be triggered.
ONE WAY PASS	A virtual detection line is set to detect intruders from the specified direction, and an alarm will be triggered.

3) DISPLAY LINE

Select to display the detection line for IVS on the screen or not.

4) SENSITIVITY

Set the sensitivity for IVS from 00 ~ 15. The larger the value, the more sensitive the IVS will be.



5) RESET COUNT

Click “SUBMIT” to reset the flow counting number to 0 when the IVS mode is set to “FLOW COUNTING” and activated.

6) VIRTUAL FENCE AREA

Click “SETUP” to draw the detection line for IVS, and set the detection direction from left to right, or right to left. This area setting is the detection base for IVS MODE.

7) SCENE CHANGE

Select “ON” to trigger a motion event when the camera is sensed to be moved and the camera scene is changed. At the same time, the icon “ ” will be also shown on the screen in addition to the motion icon “ ”

8) SCENE CHANGE SENSITIVITY

Set the detection sensitivity for “SCENE CHANGE” to “HIGH”, “MIDDLE” or “LOW”.

## IVS APPLICATION

### ➤ **FLOW COUNTING**

Step1: Go to “VIRTUAL FENCE AREA” to draw a detection line with your mouse, and decide the detection direction by selecting “REVERSE”.



Step2: Finish the IVS setting and return to the live view. The IVS icon “ ” will be shown on the status bar.

Click it to show the flow counting panel as follows.

When anyone walks across the detection line, the system will determine his movement is in or out, and add one count to the corresponding channel on the flow counting panel.

<b>IN</b>	People coming from the opposite direction to the arrow mark.
<b>OUT</b>	People coming from the same direction as the arrow mark.



➤ **VIRTUAL FENCE and ONE WAY PASS**

Step1: Go to “VIRTUAL FENCE AREA” to draw a detection line with your mouse, and decide the detection direction by selecting “REVERSE”.



Step2: Finish the IVS setting and return to the live view.

When anyone walks across the detection line, the system will determine his movement is in or out, and:

<b>VIRTUAL FENCE</b>	An event happens for anyone walking across the detection line, and “🚶” will be shown on the screen.
<b>ONE WAY PASS</b>	An event happens for anyone walking from the opposite direction to the arrow mark, and “🔥” will be shown on the screen.





## IVS STATISTICS

Press “LIST” on the DVR front panel, or click “▶” → “📄” to enter the event search menu. Then, select “STATISTIC”

LIST																										
QUICK SEARCH RECORD MOTION ALARM TIME HUMAN DETECTION IVS FULL <b>STATISTIC</b>	<table> <tr> <td>CHANNEL</td> <td><input checked="" type="checkbox"/> 01</td> <td><input type="checkbox"/> 02</td> <td><input type="checkbox"/> 03</td> <td><input type="checkbox"/> 04</td> </tr> <tr> <td>EVENT TYPE</td> <td colspan="4"> <input checked="" type="checkbox"/> INFLOW  <input type="checkbox"/> OUTFLOW  <input type="checkbox"/> VIRTUAL FENCE  <input type="checkbox"/> ONE WAY PASS  <input type="checkbox"/> HUMAN DETECTION  <input type="checkbox"/> MOTION  <input type="checkbox"/> ALARM               </td> </tr> <tr> <td>HARD DISK</td> <td colspan="4">ALL HDD</td> </tr> <tr> <td>TIME</td> <td colspan="4">2010/MAY/17</td> </tr> <tr> <td>STATISTIC</td> <td colspan="4">SUBMIT</td> </tr> </table>	CHANNEL	<input checked="" type="checkbox"/> 01	<input type="checkbox"/> 02	<input type="checkbox"/> 03	<input type="checkbox"/> 04	EVENT TYPE	<input checked="" type="checkbox"/> INFLOW <input type="checkbox"/> OUTFLOW <input type="checkbox"/> VIRTUAL FENCE <input type="checkbox"/> ONE WAY PASS <input type="checkbox"/> HUMAN DETECTION <input type="checkbox"/> MOTION <input type="checkbox"/> ALARM				HARD DISK	ALL HDD				TIME	2010/MAY/17				STATISTIC	SUBMIT			
CHANNEL	<input checked="" type="checkbox"/> 01	<input type="checkbox"/> 02	<input type="checkbox"/> 03	<input type="checkbox"/> 04																						
EVENT TYPE	<input checked="" type="checkbox"/> INFLOW <input type="checkbox"/> OUTFLOW <input type="checkbox"/> VIRTUAL FENCE <input type="checkbox"/> ONE WAY PASS <input type="checkbox"/> HUMAN DETECTION <input type="checkbox"/> MOTION <input type="checkbox"/> ALARM																									
HARD DISK	ALL HDD																									
TIME	2010/MAY/17																									
STATISTIC	SUBMIT																									
EXIT																										

Set all the criteria you want to search, and click “SUBMIT” in “STATISTIC” to show the event statistics by DAY in LIST (default) or CHART.

- To check the statistics in the bar chart, click “CHART”.
- To switch to the MONTH or YEAR view, click “DAY” at the bottom.

IVS STATISTIC		
LIST	CHART	▲
hour	COUNT	
00:00 – 00:59	0	
01:00 – 01:59	0	
02:00 – 02:59	0	
03:00 – 03:59	0	
04:00 – 04:59	0	
05:00 – 05:59	0	
06:00 – 06:59	0	
07:00 – 07:59	0	
08:00 – 08:59	3	
09:00 – 09:59	9	▼
2010/MAY/17	DAY	EXIT

5.5.11 NOTIFY

This network camera supports instant event notifications to your iPhone. When a man is detected by an external human detection sensor, the camera will immediately receive the alarm signal and send to your iPhone.

ADVANCE CONFIG				
CANERA DETECTION ALERT NETWORK DISPLAY RECORD REMOTE DCCS IVS <b>NOTIFY</b>	GUARD		ON	
	CH1	LOBBY	CH9	CH9
	CH2	LIVING ROOM	CH10	CH10
	CH3	ENTRANCE	CH11	CH11
	CH4	MEETING ROOM	CH12	CH12
	CH5	CH5	CH13	CH13
	CH6	CH6	CH14	CH14
	CH7	CH7	CH15	CH15
	CH8	CH9	CH16	CH16
	EXIT			

- 1) GUARD
- Select to enable or disable IVS function (ON / OFF).
- Select to activate the Push Notification function (ON / OFF). Or it could also be activated later from iPhone.

**Note:** For details about DVR operations from iPhone, please visit <http://www.eagleeyesctv.com>.

- 2) CH1 ~ 16 / CH1 ~ 8 / CH1 ~ 4
- Enter the text you want to see when your iPhone receives Push Notification. The default text is the channel number.

5.6 SCHEDULE SETTING

5.6.1 RECORD

Select “ON” to enable record timer, and select the day and time for this function.

SCHEDULE SETTING	
<b>RECORD</b> DETECTION	RECORD TIMER
	ON
	0 2 4 6 8 10 12 14 16 18 20 22 24
	SUN
	MON
	TUE
	WED
	THU
	FRI
	SAT
EXIT	

X axis

0 ~ 24 hours. Each time bar is 20 minutes.

Y axis

Monday ~ Sunday.

5.6.2 DETECTION

Select “ON” to enable detection timer, and select the day and time for this function.

SCHEDULE SETTING																																																																																																																	
RECORD	DETECTION TIMER																																																																																																																
DETECTION	ON																																																																																																																
	<table border="1"><thead><tr><th></th><th>0</th><th>2</th><th>4</th><th>6</th><th>8</th><th>10</th><th>12</th><th>14</th><th>16</th><th>18</th><th>20</th><th>22</th><th>24</th></tr></thead><tbody><tr><td>SUN</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>MON</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>TUE</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>WED</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>THU</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>FRI</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>SAT</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></tbody></table>		0	2	4	6	8	10	12	14	16	18	20	22	24	SUN														MON														TUE														WED														THU														FRI														SAT													
	0	2	4	6	8	10	12	14	16	18	20	22	24																																																																																																				
SUN																																																																																																																	
MON																																																																																																																	
TUE																																																																																																																	
WED																																																																																																																	
THU																																																																																																																	
FRI																																																																																																																	
SAT																																																																																																																	
EXIT																																																																																																																	

**X axis**            0 ~ 24 hours. Each time bar is 20 minutes.  
**Y axis**            Monday ~ Sunday.

## 6. REMOTE OPERATION

You can also control the DVR remotely via the supplied licensed software “Video Viewer”, a web browser (such as Microsoft Internet Explorer, Mozilla FireFox, or Google Chrome), your mobile phone, and Apple’s QuickTime player.

**Note:** For details about remote operations via your mobile phone, please visit <http://www.eagleeyesccv.com>.

### 6.1 Supplied Licensed Software

The sections below describe frequently-used functions of the Video Viewer. For details about this software and network settings, please download its extended user manual from the following link:


<http://www.surveillance-download.com/user/CMS.pdf>

#### 6.1.1 Installation & Network Connection

##### 1) Install the software

Step1: Place the supplied CD into your CD-ROM or DVD-ROM drive. The program will be automatically run.

Step2: Click “Download The Latest Version” under “Licensed Software AP” to download the latest version of Video Viewer from the Internet.

Step3: Follow the on-screen instructions to finish the installation. When the installation is completed, a shortcut icon  will be placed on your PC desktop.

##### 2) Network Connection


###### ➤ Local Connection (via LAN)


LAN is used when it’s the first time to remotely access the DVR and you need to configure the network setting of your DVR based on your network type in advance.

a) Connect the DVR to your PC via a RJ45 network cable. The default DVR values are as follows:




Item	Default Value
IP address	192.168.1.10
User name	admin
Password	admin
Port	80

b) Set the PC’s IP address as “192.168.1.XXX” (1~255, except 10) in order to make the PC and DVR under the same domain.

c) Double-click  on your PC desktop to enter the control panel. By defaults, the “Address Book” panel will be displayed on the right side of the control panel.

d) Click  →  to key in the default IP address, user name, password, and port number of the DVR you intend to connect.

OR

Click  →  to search the available IP address(es) of other DVR(s) under the same domain as your PC’s IP address. The found address(es) will be listed, and can be added into the address book by clicking .

e) Double-click the IP address you just added into the address book to log in.



➤ Remote Connection (via Internet)

When the network configuration of your DVR is completed, you can access your DVR remotely via Internet.

- Double-click "👁️" on your PC desktop to enter the control panel. By defaults, the "Address Book" panel will be displayed on the right side of the control panel.
- Click "🏠" → "🔑" to key in the IP address, user name, password, and port number of the DVR you intend to connect.

OR

Click "🔍" → "🔄" to search the available IP address(es) of other DVR(s) under the same domain as your PC's IP address. The found address(es) will be listed, and can be added into the address book by clicking "🔑".

- Double-click the IP address you just added into the address book to log in.

## 6.1.2 Control Panel Overview

Two control panels are available and can be switched depending on your use habit.

### Simplified Version (Default)

Address Book      Snapshot

Miscellaneous Control      Information

Log      DVR Control

Record

? Version

— Minimize

⌂ Full Function Display Switch

✕ Close Program

🔄 180° Counterclockwise Image Rotation

📷 Snapshot

Event Notification & Quick Checklist 🚨

2009/07/30, 18:52:36
🔊 📷

CH1

CH2

CH3

CH4

🔍 📷 🔄 🏠 🏠 🏠 🏠 🏠 🏠
Live 🔊

🔍 Close All Display Views

📷 Close Current View

🔄 Original Size

⌂ Full Screen

📷 Display Mode Switch

🔊 Audio Volume

## Full Function Version






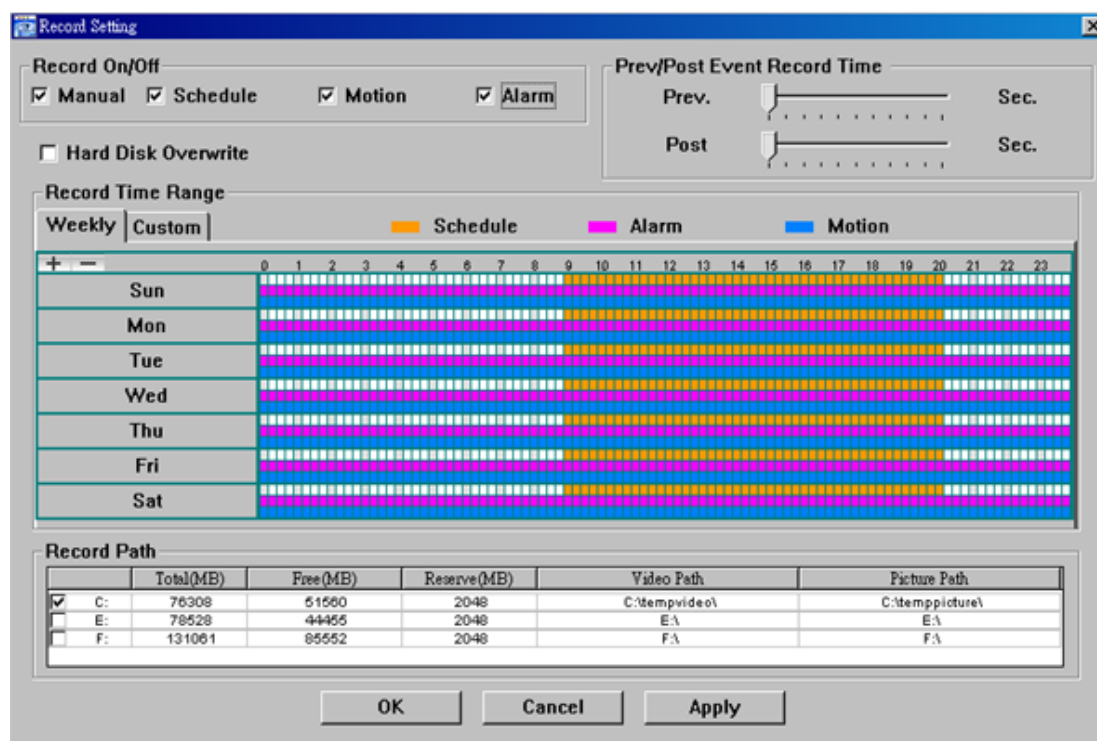
## Main Button Overview

Button		Function	Description
Simplified	Full Function		
		Address Book	Click to show the predefined IP address(es). You can add, remove or search the IP address to log in the DVR remotely.
		Remote Config	Click to go into the detailed DVR setting.
		Record Setting	Click to go to the detailed record setting.
		Custom Setting	Click to choose the language of this program. The language change will take effect when this program is closed and executed again.
		Log	Click to view all event and recording logs, search the desired log(s) by date, or playback the recording of the selected log.
		Record / Record Stop	Click to start / stop the manual recording.
		Snapshot	Click to take a snapshot of the current view. The snapshot will be saved in the path you specified in "Record Setting".
		Information	Click to show the current network connection details.
		DVR Control	Click to go to the DVR control panel to operate the DVR remotely.

### 6.1.3. General Operation



#### Record

To record remotely at the same time for any event or alarm at the DVR side, click “” or “” → “” to go to the “Record Setting” page.





In the “Record Setting” page, you can set the following items:

- 4 Record type
- 5 Hard disk overwriting
- 6 Pre- / post-alarm record time
- 7 Record time setting
- 8 Record path

If “Manual” is checked, click “” or “” on the main control panel to start the manual recording immediately, and the recordings will be saved in the specified location.

If “Motion” and / or “Alarm” are checked, the recording function will also be enabled at the remote side when any event is triggered at the DVR side, and the recordings will be saved in the specified location.

#### Playback

To play a recording, click “” or “”, and select the “Record” tab or “Backup” tab. A list of all the recordings will be shown by defaults, and you can also sort out the logs you want to speed up the search time.

**Status List**

Time Range: Range Unit: **One Day** Prev. Next

Start Time: 2009/03/27 End Time: 2009/03/27

Record Type: ☒ User ☒ Alarm ☒ Motion ☒ RETR

Event	IP	Start Time	End Time	File Path	Reserve	Error
User	192.168.1.12	09/23/08 20:41:07	09/23/08 20:41:07	C:\tempvideo\20080923204107_off	<input type="checkbox"/>	<input type="checkbox"/>
User	192.168.1.12	09/23/08 20:36:45	09/23/08 20:36:45	C:\tempvideo\20080923203645_off	<input type="checkbox"/>	<input type="checkbox"/>
User	192.168.1.12	09/23/08 20:18:56	09/23/08 20:41:07	C:\tempvideo\20080923201856_off	<input type="checkbox"/>	<input type="checkbox"/>
User	192.168.1.12	09/23/08 20:13:22	09/23/08 20:36:45	C:\tempvideo\20080923201322_off	<input type="checkbox"/>	<input type="checkbox"/>
Motion	192.168.1.12	09/23/08 20:05:30	09/23/08 20:05:35	C:\tempvideo\20080923200530_off	<input type="checkbox"/>	<input type="checkbox"/>
Motion	192.168.1.12	09/23/08 20:05:30	09/23/08 20:05:35	C:\tempvideo\20080923194836_off	<input type="checkbox"/>	<input type="checkbox"/>
Motion	192.168.1.12	09/23/08 20:05:30	09/23/08 20:05:35	C:\tempvideo\20080923195524_off	<input type="checkbox"/>	<input type="checkbox"/>
User	192.168.1.12	09/23/08 19:55:24	09/23/08 20:18:56	C:\tempvideo\20080923195524_off	<input type="checkbox"/>	<input type="checkbox"/>
User	192.168.1.12	09/23/08 19:48:36	09/23/08 20:13:22	C:\tempvideo\20080923194836_off	<input type="checkbox"/>	<input type="checkbox"/>
User	192.168.1.12	09/23/08 19:32:55	09/23/08 19:55:24	C:\tempvideo\20080923193255_off	<input type="checkbox"/>	<input type="checkbox"/>
User	192.168.1.12	09/23/08 19:24:51	09/23/08 19:48:36	C:\tempvideo\20080923192451_off	<input type="checkbox"/>	<input type="checkbox"/>
User	192.168.1.12	09/23/08 19:10:26	09/23/08 19:32:55	C:\tempvideo\20080923191026_off	<input type="checkbox"/>	<input type="checkbox"/>
User	192.168.1.12	09/23/08 19:01:05	09/23/08 19:24:51	C:\tempvideo\20080923190105_off	<input type="checkbox"/>	<input type="checkbox"/>
User	192.168.1.12	09/23/08 18:47:57	09/23/08 19:10:26	C:\tempvideo\20080923184757_off	<input type="checkbox"/>	<input type="checkbox"/>

Total Records: 1 Delete Delete All Play Repair Apply Close

To immediately play a recording, select a log from the list, and click “Play”, or double-click the selected log.

## Network Backup

Click “” → “”, or click “” to go into the “Backup” page as follows, and you can select a specific time range or event to make a video backup remotely.

The file(s) you backup will be from the currently selected IP address.

**Backup (60.251.8.56)**

Reload Prev. Page Next Page

HDD Number: MASTER-1 Channel: 1

Start Time: 2009/07/26 14:58:52 End Time: 2009/07/27 14:58:52

File Path: c:\download\

☒ Simultaneous Playback

☒ System ☒ Manual ☒ Alarm ☒ Timer ☒ Motion

NO.	Event	CH	Time
1	MOTION	2	2009/07/27 14:56:43
2	MOTION	2	2009/07/27 14:56:24
3	MOTION	2	2009/07/27 14:56:12
4	MOTION	2	2009/07/27 14:55:28
5	MOTION	2	2009/07/27 14:55:12
6	MOTION	2	2009/07/27 14:54:43
7	MOTION	2	2009/07/27 14:54:26
8	MOTION	2	2009/07/27 14:54:12
9	MOTION	2	2009/07/27 14:53:43
10	MOTION	2	2009/07/27 14:53:24
11	MOTION	2	2009/07/27 14:53:12
12	MOTION	2	2009/07/27 14:52:43
13	MOTION	2	2009/07/27 14:52:33
14	MOTION	2	2009/07/27 14:52:19
15	MOTION	2	2009/07/27 14:52:12
16	MOTION	2	2009/07/27 14:51:43
17	MOTION	2	2009/07/27 14:51:23
18	MOTION	2	2009/07/27 14:51:12

Download Cancel

Function	Description
HDD Number / Channel	Specify the hard disk (HDD Number) and channel number (Channel) within which have the video data you need.
Download by Time	Specify the time range within which has the video data you want in the “Start Time” and “End Time” columns.
Download by Event	<p>Select an event log from the event list. This list shows all logs in the specified DVR from the latest to the earliest.</p> <ul style="list-style-type: none"> <li>➤ To quickly find the events you need, check or uncheck the event type “System” / “Manual” / “Alarm” / “Motion”, and select the log you want.</li> <li>➤ To view the earlier or later logs that are not shown in the current page, click “Prev. Page” or “Next Page”.</li> <li>• To refresh the event list, click “Reload”.</li> </ul>
File Path	Assign the location where the backup files are saved.
Simultaneous Playback	To view the backup images simultaneously when the download process is in progress, select the checkbox “Simultaneous Playback”. You will see the backup images while the images are being downloaded to the PC or notebook.



Function	Description
	To simply backup images without previewing, deselect the checkbox "Simultaneous Playback". You will only see a message box indicating the total time needed, the current status and the saving location.
Download / Cancel	Click "Download" to start or "Cancel" to discard the video backup.


## Firmware Upgrade

This function is used to grade your DVR for function scalability.


**Note:** Before using this function, make sure you have the correct upgrade files provided by your installer or distributor.

Step1: Click "📖", and select the IP address of your network camera in the address book.

Step2: Click "🔄" to show the upgrade page, "Update Server".

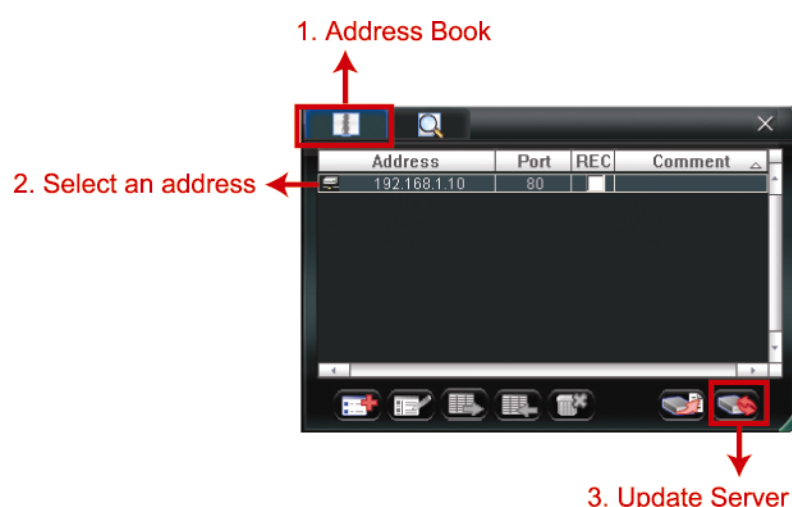

Step3: Click "Add" to browse to the upgrade files.

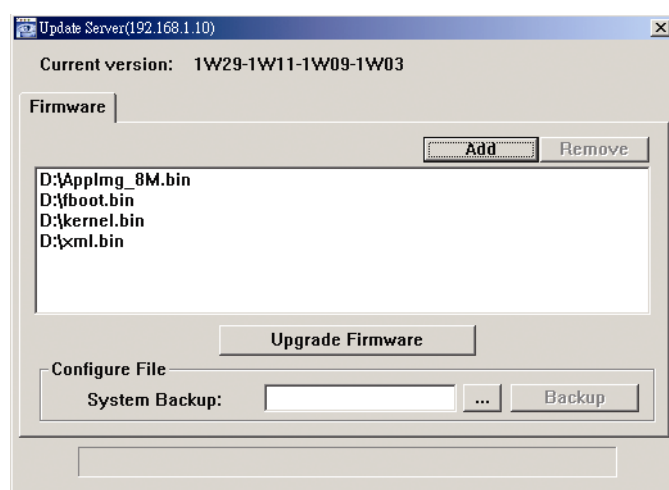

Step4: Click "Upgrade Firmware" to start firmware upgrade.

**Note:** It takes a few minutes to finish the upgrade process. Do not disconnect the power during firmware upgrade, or the upgrade may be failed. The camera will reboot after the upgrade.

Step5: Select the IP address of the camera and click "🔄" again to check if the firmware is upgraded.



### 6.1.4. E-Map

Video Viewer is also a Central Management System (CMS) software, which allows network device control & management for up to 16 devices simultaneously.


**Note:** Before using this function, make sure Video Viewer is connected to all the devices (up to 16) you want to monitor.

E-Map is **ONLY** available when the control panel is switch to the full function version.


## How to Add an E-Map Group

STEP1: In the simplified version, click “” to switch the control panel to the full function version, and click “” to enter the E-Map page as follows.

**Note:** To know where the buttons are, please refer to “Simplified Version (Default)” at page 36, and “Full Function Version” at page 37.

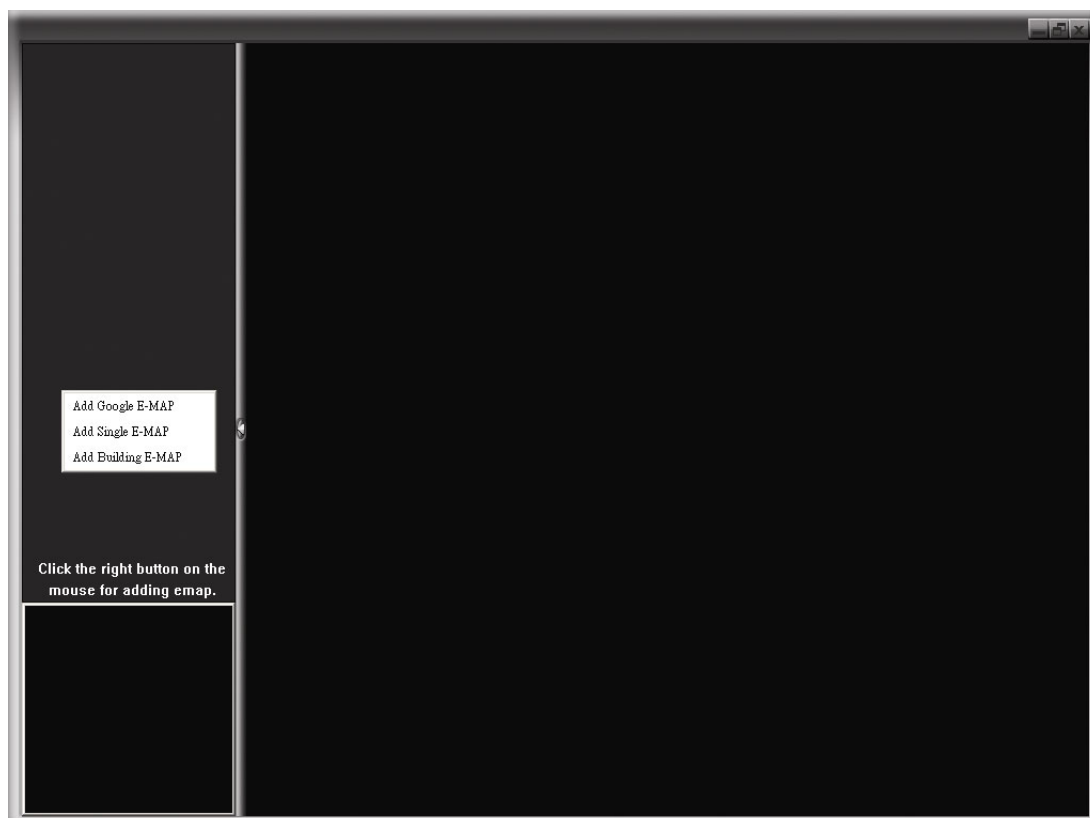


STEP2: Right-click to show the shortcut menu on the top-left panel, and select the E-Map group you want to add. There are three E-Map groups you can add: Google E-MAP, Single E-MAP, and Building E-MAP.

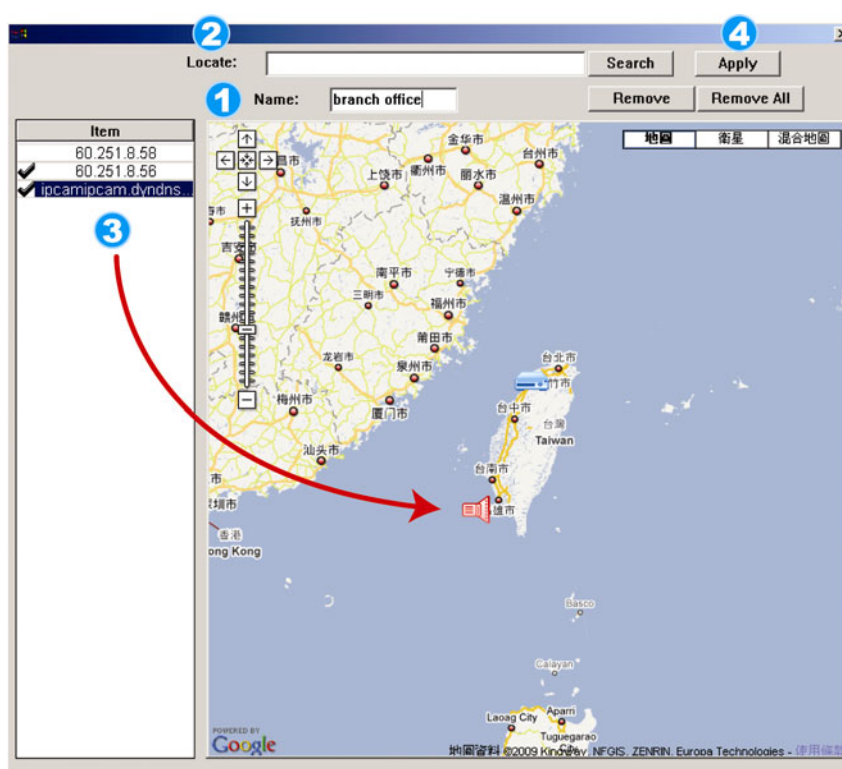


### How to add a Google E-Map group:

- 1 Enter the name of this Google E-Map group.
- 2 Enter a specific address or landmark, and click “Search”.  
OR  
Move to the map and drag to the location you want.
- 3 Click and drag the IP address to where it's located in the current level.
- 4 Click “Apply” to save and finish.

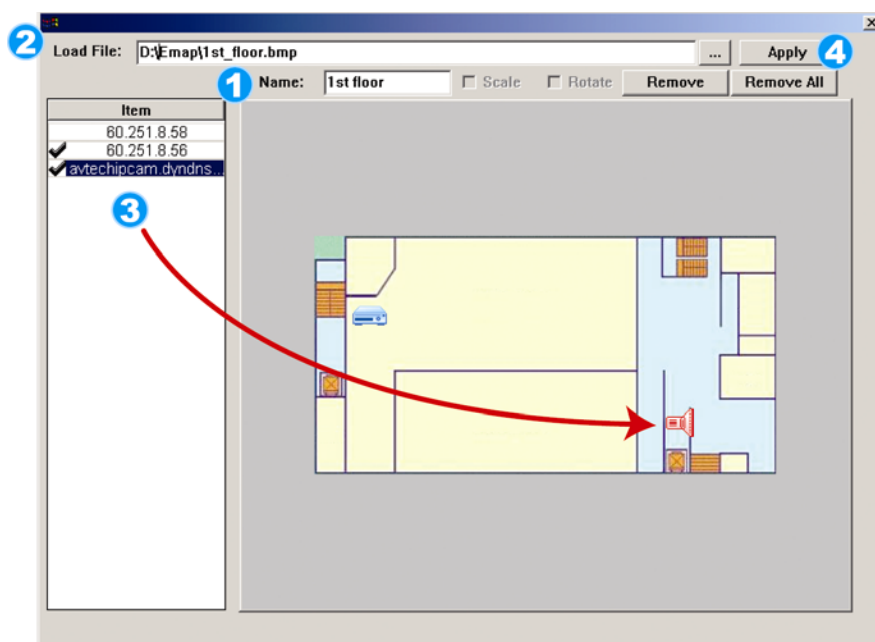

### How to add a single E-Map group:


- 1 Enter the name of this single E-Map group.
- 2 Click “...” to browse the map file in BMP or JPEG.
- 3 Click and drag the IP address to where it's located in the current level.
- 4 Click “Apply” to save and finish.

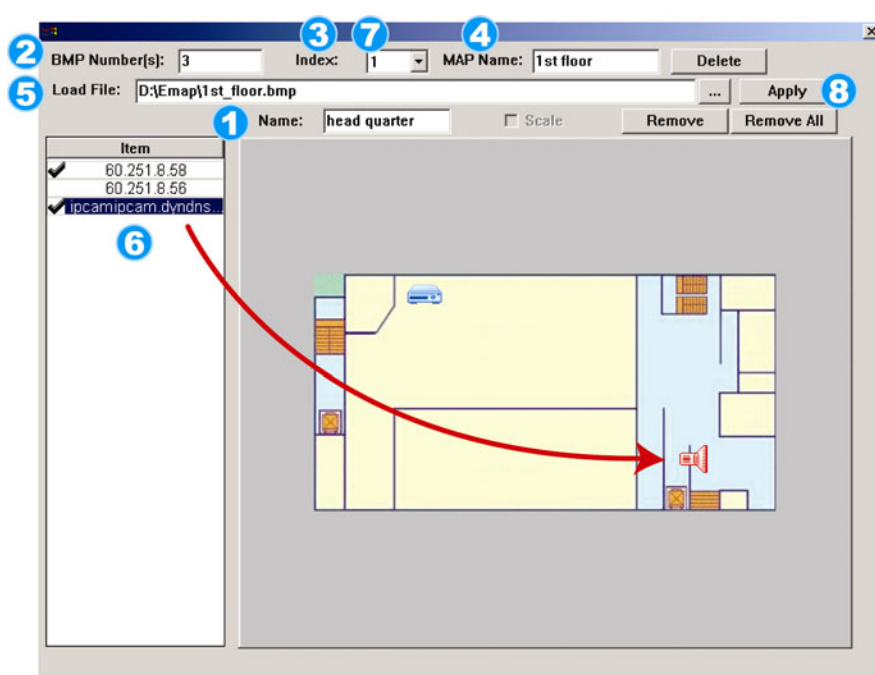




### How to add a building E-Map group:

- 1 Enter the name of this building E-Map group.
- 2 Enter the total levels of this building.
- 3 Select the level of the building from the drop-down list.
- 4 Enter the name of the level.
- 5 Click “...” to browse the map file in BMP or JPEG.
- 6 Click and drag the IP address to where it's located in the current level.
- 7 Go back to STEP 3 to select other level of the building, and repeat from STEP 3 to 6 until the setup for all levels are finished.
- 8 Click “Apply” to save and finish.

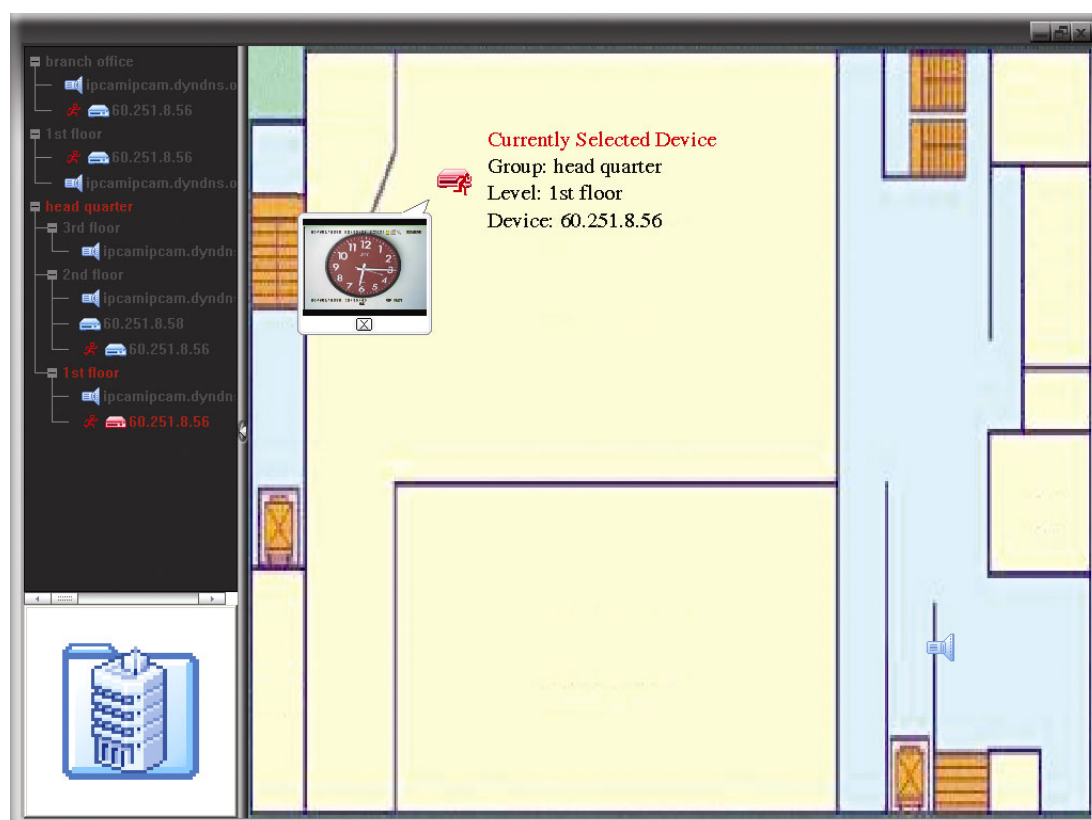STEP3: When the E-Map group is created, you will see the tree on the top-left panel, showing all the devices you've added to this group.




Icon	Description
	The connected device is camera. When it's selected, it will become red.
	The connected device is DVR. When it's selected, it will become red.
	For any motion or alarm event, it will appear on the screen to catch your attention. To know what's happening quickly, double-click the device icon on the E-Map to show the live view.

## How to Edit / Remove an Existing E-Map Group

### ➤ For Google E-Map Group

Right-click on the group name to show the shortcut menu list, and select “Edit E-MAP” or “Remove E-MAP” as needed.


You can also add a single E-Map group (Add Single E-MAP) or Building E-Map group (Add Building E-MAP) into the existing Google E-Map group.

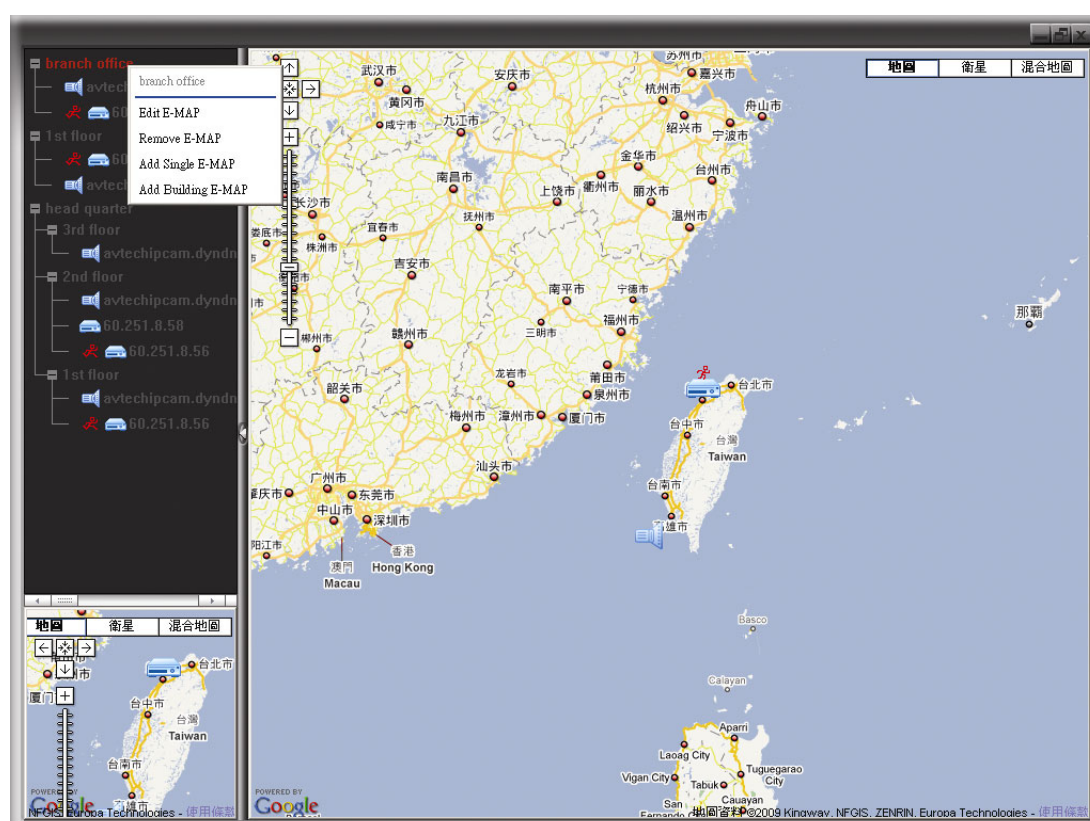




➤ For Single E-Map Group

Right-click on the group name to show the shortcut menu list, and select “Edit E-MAP” or “Remove E-MAP” as needed.

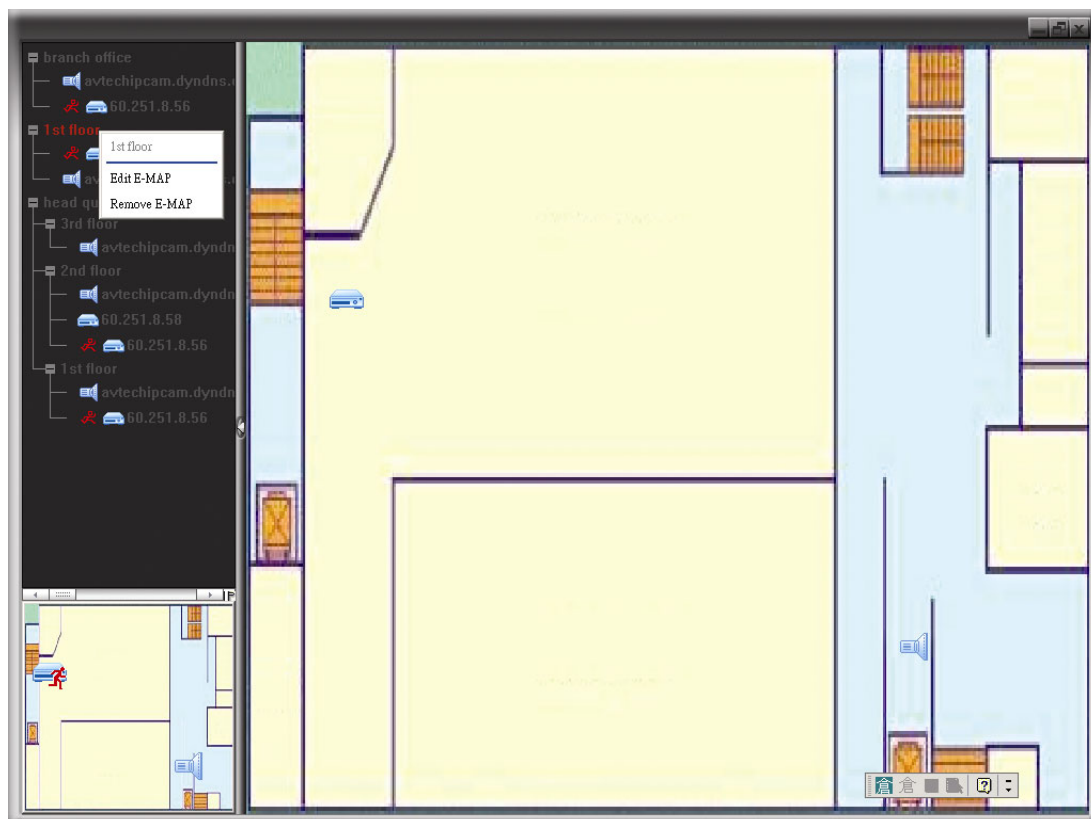


➤ For Building E-Map Group

Right-click on the group name to show the shortcut menu list, and select “Edit Building E-MAP” or “Remove E-MAP” as needed.

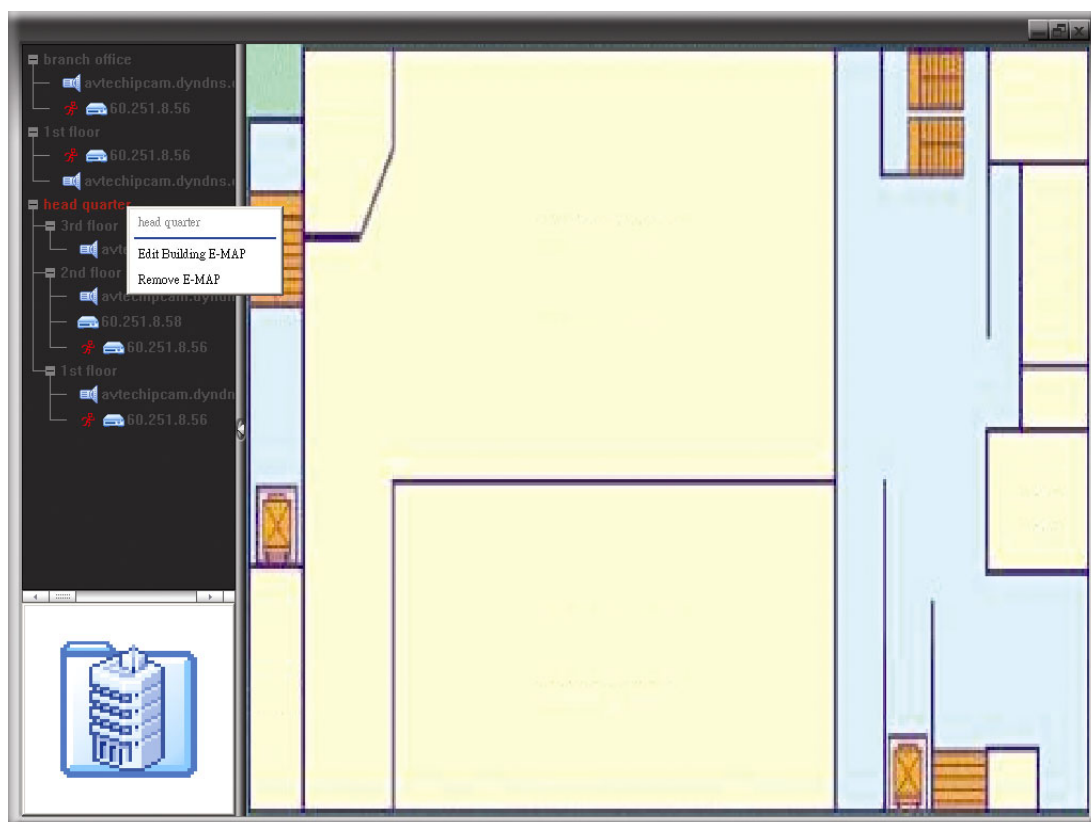

To edit or remove a certain level of the building E-Map group, right click on the level name, and select “Edit E-MAP” or “Remove E-MAP” as needed.

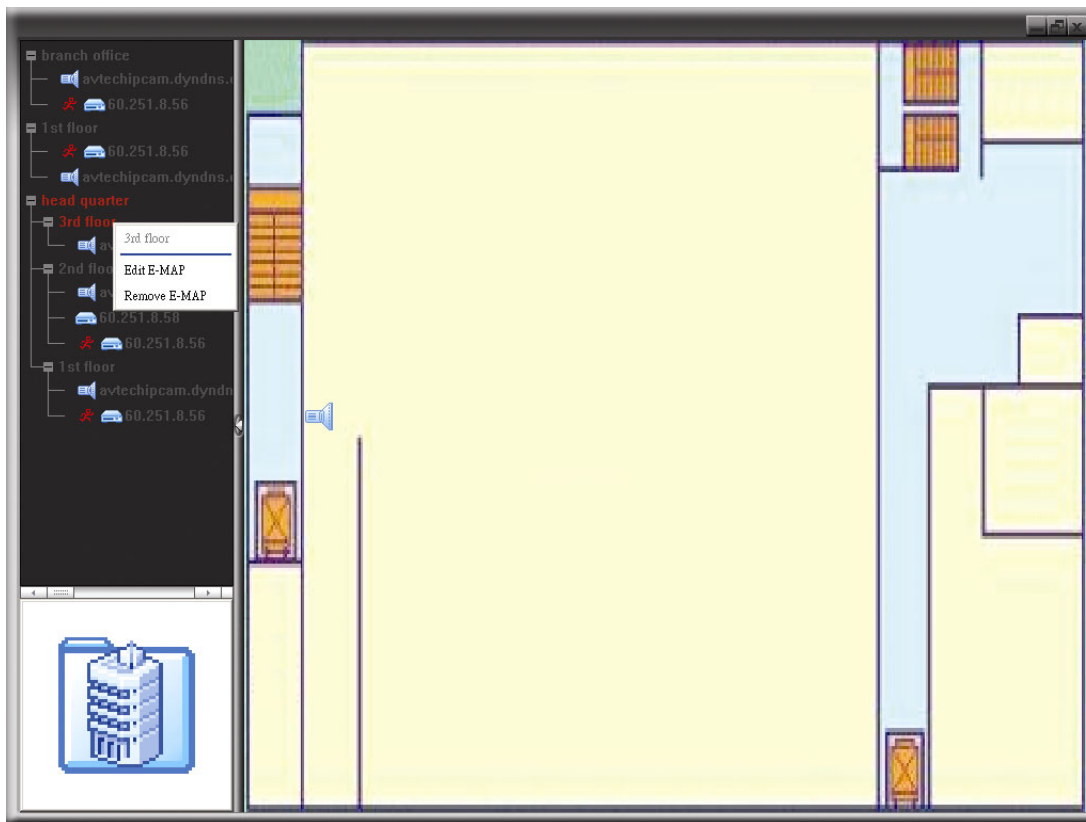

## 6.2 IE Web Browser

You can view the images or operate your DVR with IE web browser.


**Note:** The supported PC operation systems are Windows 7, Vista, XP and 2000.

Step 1: Key in the IP address used by your DVR in the URL address box, such as 60.121.46.236, and press Enter.







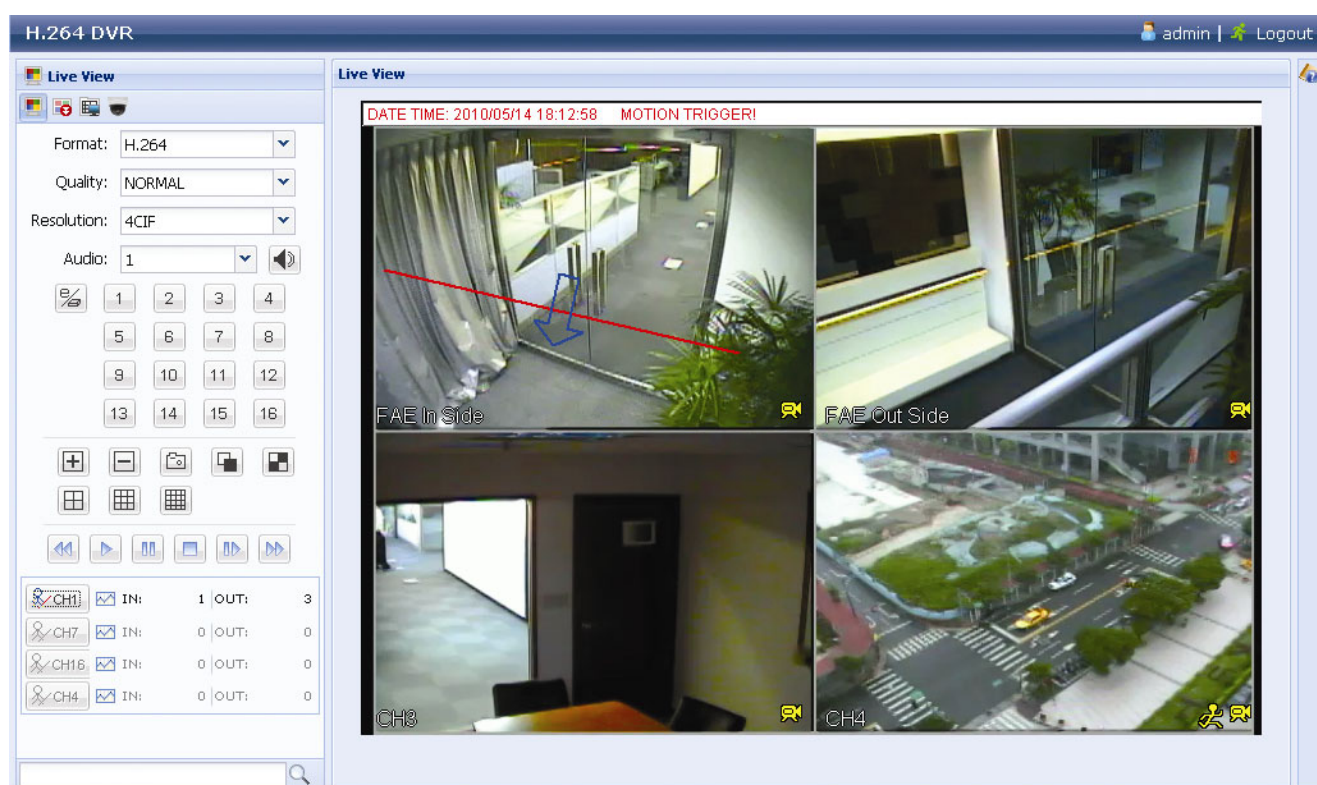













You will be prompted to enter the user name and password to access the DVR.

If the port number your DVR used is NOT 80, you need to key in the port number additionally. The format is **ipaddress:portnum**. For example, for IP address 60.121.46.236 and port No. 888, please key in "http://60.121.46.236:888" into the URL address box, and press "Enter".

Step 2: Enter the user name and password, the same as the ones used at AP login, and click "OK". You will see a similar screen as the following when the login information is correct.



Icon	Description
	Click to go to the live view of the DVR.
	Click to enter the playback panel where you can search or select the event you want to play and download to your PC simultaneously. For details, please refer to "6.2.1 Event Playback & Download" at page 48.
	Click to go to the detailed DVR setting.
	Click to enter the PTZ mode.
<b>Video / Audio Control</b>	
Format	<b><u>H.264 / QuickTime</u></b> QuickTime is Apple Inc.'s multimedia software. You need to have QuickTime installed in you operation system first. When "QuickTime" is selected, you will be promoted to enter the user name and password to access the server of the DVR.
Quality	<b><u>BEST / HIGH / NORMAL / BASIC</u></b> Select the image quality.
Resolution	<b><u>4 CIF / CIF</u></b> Select the image resolution (4CIF: 704*480 / CIF: 352*240)
Audio	Select the audio channel you want for listening to the live audio. Note: Your camera must support audio recording, and connect to the video channel which supports audio recording and the audio input of the DVR. For details, please refer to "1.3 Rear Panel" at page 2. means mute. To disable the mute status, click this icon again and select the audio channel you want.

Icon	Description
<b>Channel Control</b> 	Click to enable the remote independent operation. This icon will turn to blue, and only the available function icons will be shown. Note: This button shows only for 16CH and 8CH models.
Channel Selection (1~16 / 1~8 / 1~4)	Click one of the number to switch to the channel you want to see in full screen.
 / 	Click to go to the previous / next channel, or change setting.
	Click to take a snapshot of the current view, and save it to the specified path in your PC set in “  ” → “General”.
 / 	 : Click to display four channels at a time. When the last channel is displayed, it will start from CH1 again.  : Click to display each channel one by one, starting from CH1. When the last channel is displayed, it will start from CH1 again. To exit from this display mode, press any other channel display button.
 /  / 	Click to show 4-cut / 9-cut / 16-cut display.
<b>Playback Control</b> 	Increase the speed for fast rewind. Click once to get 4X speed rewind and click twice to get 8X speed, etc., and the maximum speed is 16X.
	Increase the speed for fast forward. Click once to get 4X speed forward and click twice to get 8X speed, etc., and the maximum speed is 16X.
	Click to play the current video clip.
	Click to pause the video playback.
	Click to stop the video playback.
	Click to play the video clip slowly, once to get 4X slower, twice get 8X slower.
<b>IVS Panel</b> 	This button is enabled only when the IVS mode is “Flow Counting”. Click to show the detection line.
	Click to enter the IVS statistics page. For details, please refer to “6.2.2 IVS Statistics” at page 49.



## 6.2.1 Event Playback & Download

### Time Search

Cut: 4

Mode: Time

HDD No.: HDD-0

Start Time: 2010/05/14

16 : 41 : 58

Channel: 1

Quick Search

### Calendar Search

Mode: Calendar

HDD No.: HDD-0

Channel: ☒ 1 ☐ 2 ☐ 3 ☐ 4

Search

2010

Jan Feb Mar Apr **May** Jun

Jul Aug Sep Oct Nov Dec

May

1 2 3 4 5 6 7 8

9 10 11 12 13 14 15 16

17 18 19 20 21 22 23 24

25 26 27 28 29 30 31

Select Time: 00:00 - 00:00

Start

### Event Icon

	Timer		Scene change		Outflow
	System		One way pass		Inflow
	Manual		Virtual fence		Human Detection
	Motion				

### H.264 DVR Playback

Cut: 4

Mode: Full List

Event: All

HDD No.: HDD-0

CH	Time
1	2010/05/14 18:09:32
2	2010/05/14 18:09:32
1	2010/05/14 18:09:31
4	2010/05/14 18:09:27
1	2010/05/14 18:09:17
1	2010/05/14 18:09:16
1	2010/05/14 18:09:16
2	2010/05/14 18:09:15
2	2010/05/14 18:09:14
1	2010/05/14 18:09:10
4	2010/05/14 18:08:17
4	2010/05/14 18:07:36
2	2010/05/14 18:07:27

2010/05/14 18:10:14

2010/05/14 18:09:51


2010/05/14 18:09:32

2010/05/14 18:09:20

18:00 19:00

/	Close all / Close	Click  to close the current playback video clip (in the red frame), or  to close all playback video clips.
/	Previous / Next Hour	Click to jump to the next / previous time interval in an hour, for example, 11:00 ~ 12:00 or 14:00 ~ 15:00, and start playing the earliest event video clip recorded during this whole hour.
	Fast Forward	Increase the speed for fast rewind. Click once to get 4X speed rewind and click twice to get 8X speed, etc., and the maximum speed is 16X.
	Fast Rewind	Increase the speed for fast forward. Click once to get 4X speed forward and click twice to get 8X speed, etc., and the maximum speed is 16X.
	Play	Click to play the current video clip.
	Pause	Click to pause the video playback.
	Stop	Click to stop the video playback.
	Step	In the pause mode, click to get one frame forward.
	Audio	Click to mute the playback if necessary, and click again to restore. <b>Note:</b> Audio is available when your camera supports audio recording, and connects to the video channel which supports audio recording and the audio input of the DVR. For details, please refer to "1.3 Rear Panel" at page 2.
	Snapshot	Click to take a snapshot of the current view, and save it to the specified path in your PC set in " → "General".
	Download	Click to download the current video clip to the specified path in your PC.

## 6.2.2 IVS Statistics

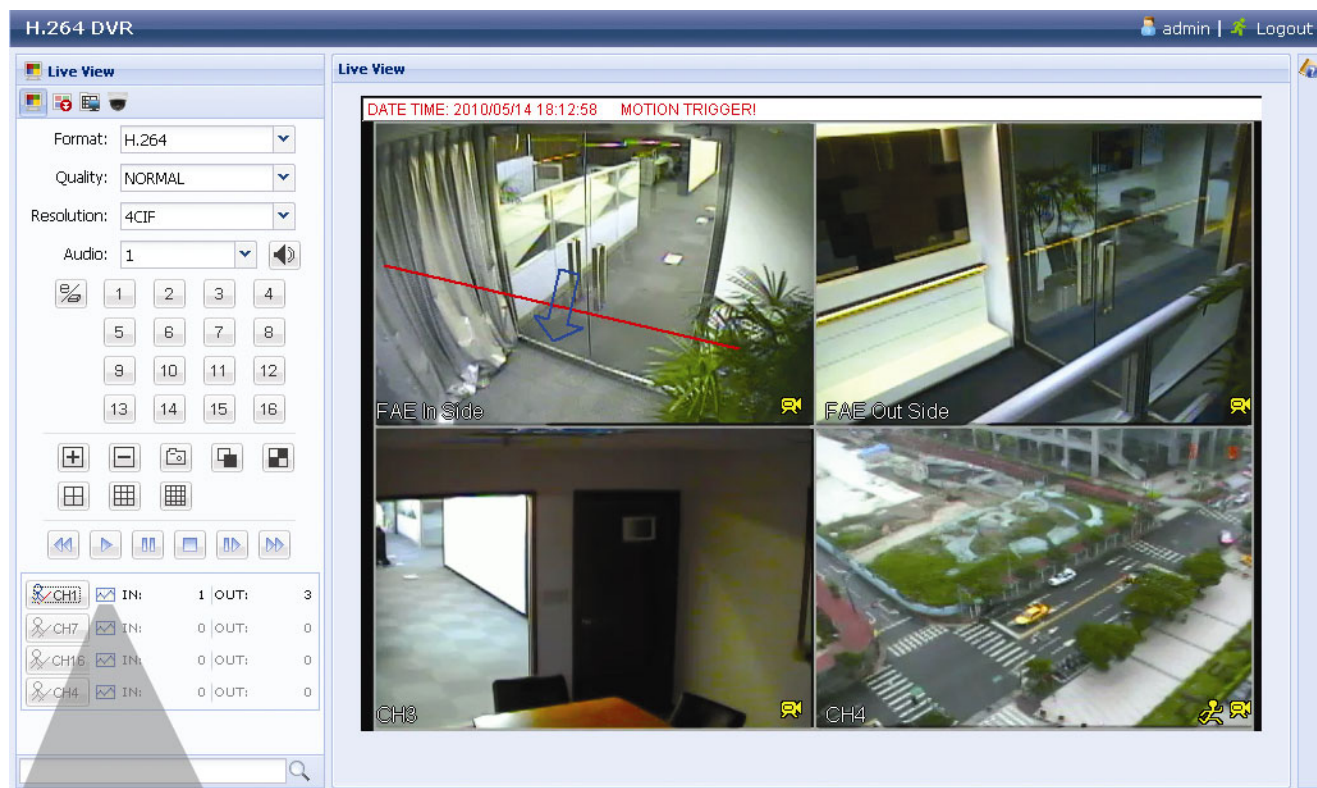

### IVS Statistics

#### IVS Statistics: Event Search Panel

**IVS Statistics**

Channel: ☒ 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5 ☐ 6 ☐ 7 ☐ 8  
☐ 9 ☐ 10 ☐ 11 ☐ 12 ☐ 13 ☐ 14 ☐ 15 ☐ 16

Event: ☐ Alarm ☒ Motion ☐ Inflow ☐ Outflow  
☐ Virtual Fence ☐ Oneway ☐ Human Detection

HDD No.: HDD-0 Date: 2010/05/14 Search


#### IVS Statistics: List

Hour	Count
2010 / 05 / 14 01:00 - 00:00	17
2010 / 05 / 14 00:00 - 01:00	0
2010 / 05 / 14 01:00 - 02:00	0
2010 / 05 / 14 02:00 - 03:00	0
2010 / 05 / 14 03:00 - 04:00	0
2010 / 05 / 14 04:00 - 05:00	0
2010 / 05 / 14 05:00 - 06:00	0
2010 / 05 / 14 06:00 - 07:00	0
2010 / 05 / 14 07:00 - 08:00	16

Day

Click to switch between the Day / Month / Year view

#### IVS Statistics: Chart

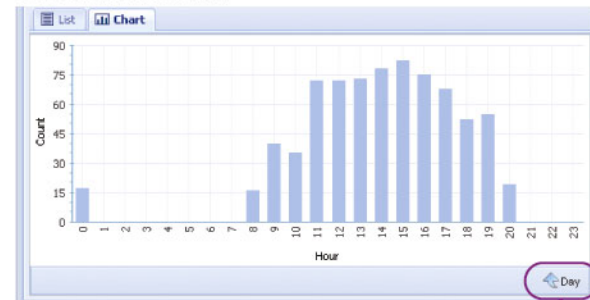

Day

Click to switch between the Day / Month / Year view

## APPENDIX 1 SPECIFICATIONS

### ➤ For 16CH / 8CH Models

		16CH	8CH
Video System		NTSC / PAL (auto detection)	
Video Compression Format		H.264	
Video Input (composite video signal 1 Vp-p 75Ω BNC)		16 channels	8 channels
Video Loop Output (composite video signal 1 Vp-p 75Ω BNC)		16 channels	8 channels
Video Output (BNC)	Main Monitor	For stable display	
	Call Monitor	For sequence display	
Video Output (VGA)		Built-in VGA interface for LCD monitor	
Audio Input / Output		4 audio inputs, 2 audio outputs (Mono)	
Maximum Recording Rate	Frame	704×480 pixels with 120 IPS <NTSC> / 704×576 pixels with 100 IPS <PAL>	704×480 pixels with 60 IPS <NTSC> / 704×576 pixels with 50 IPS <PAL>
	Field	704x240 pixels with 240 IPS <NTSC> / 704×288 pixels with 200 IPS <PAL>	704x240 pixels with 120 IPS <NTSC> / 704×288 pixels with 100 IPS <PAL>
	CIF	352×240 pixels with 480 IPS <NTSC> / 352×288 pixels with 400 IPS <PAL>	352×240 pixels with 240 IPS <NTSC> / 352×288 pixels with 200 IPS <PAL>
DCCS Support		YES (All channels)	
IVS Support		YES (4 channels)	
Image Quality Setting		SUPER BEST / BEST / HIGH /NORMAL	
Hard Disk Storage		Accommodates 2 SATA HDDs (1 HDD capacity up to 2TB)	
Quick Search		Time / Motion / Alarm search mode	
SATA Interface		Built-in	
Recording Mode		Manual / Timer / Motion / Alarm / Remote	
Multiplex Operation		Live display / record / playback / backup / network operations	
USB Mouse Control		YES	
Motion Detection Area		16 × 12 grids per camera for all channels	
Motion Detection Sensitivity		4 adjustable parameters for accurate detection	
Pre-alarm Recording		YES	
Backup Device		DVD Writer (Optional) / USB 2.0 flash drive / Network	
Web Transmitting Compression Format		H.264	
Network Live Audio		YES	
Ethernet		10/100 Base-T. Supports remote control and live view via Ethernet	
Web Interface		Supports licensed software "Video Viewer" / Internet Explorer, Mozilla Firefox & Google Chrome web browsers / QuickTime player (10 users access simultaneously)	
		*Operating System: Windows 7 / Vista / XP / 2000	
Network Protocol		TCP/IP, PPPOE, DHCP and DDNS	
Remote Independent Operation		YES	
Event Notification		By FTP / E-Mail	
R.E.T.R. (Remote Event Trigger Recording)		YES	
IR Remote Control		YES (IR receiver built-in)	
Mobile Surveillance		YES (including iPhone, BlackBerry, Windows Mobile, & Symbian)	
Picture Zoom		2X digital zoom	
PTZ Control		YES	
Alarm I/O		16 inputs, 1 output	8 inputs, 1 output



	<b>16CH</b>	<b>8CH</b>
Key Lock (Password Protection)	YES	
Local User Level	Administrator & Operator	
Video Loss Detection	YES	
Camera Title	Supports up to 6 letters	
Video Adjustable	Hue / Saturation / Contrast / Brightness	
Date Display Format	YY/MM/DD, DD/MM/YY & MM/DD/YY	
Daylight Saving	YES	
Power Source ( $\pm 10\%$ )	DC 19V	
Power Consumption ( $\pm 10\%$ )	< 64 W	
Operating Temperature	10°C ~ 40°C (50°F~104°F)	
Dimensions (mm)**	432(W) × 90(H) × 326(D)	
System Recovery	System auto recovery after power failure	
Optional Peripherals	Keyboard controller	

\* The specifications are subject to change without notice.

\*\* Dimensional Tolerance:  $\pm 5\text{mm}$

➤ **For 4CH Model**


Video System		NTSC / PAL (auto detection)	
Video Compression Format		H.264	
Video Input (composite video signal 1 Vp-p 75Ω BNC)		4 channels	
Video Output (BNC)	Main Monitor	For stable display	
	Call Monitor	For sequence display	
VGA Output (VGA)		Built-in VGA interface for LCD monitor	
Audio Input / Output		4 audio inputs, 1 audio output (Mono)	
Maximum Recording Rate	Frame	704×480 pixels with 30 IPS <NTSC> / 704×576 pixels with 25 IPS <PAL>	
Maximum Recording Rate	Field	704×240 pixels with 60 IPS <NTSC> / 704×288 pixels with 50 IPS <PAL>	
Maximum Recording Rate	CIF	352×240 pixels with 120 IPS <NTSC> / 352×288 pixels with 100 IPS <PAL>	
DCCS Support		YES (All channels)	
IVS Support		YES (4 channels)	
Image Quality Setting		SUPER BEST / BEST / HIGH /NORMAL	
Hard Disk Storage (One HDD capacity up to 2TB)		Without DVD Writer Model: Accommodates 2 SATA HDDs	With DVD Writer Model: Accommodates 1 SATA HDD
Quick Search		Time / Motion / Alarm search mode	
SATA Interface		Built-in	
Recording Mode		Manual / Timer / Motion / Alarm / Remote	
Multiplex Operation		Live display / record / playback / backup / network operations	
USB Mouse Control		YES	
Motion Detection Area		16 × 12 grids per camera for all channels	
Motion Detection Sensitivity		4 adjustable parameters for accurate detection	
Pre-alarm Recording		YES	
Backup Device		DVD Writer (Optional) / USB 2.0 flash drive / Network	
Web Transmitting Compression Format		H.264	
Network Live Audio		YES	
Ethernet		10/100 Base-T. Supports remote control and live view via Ethernet	
Web Interface		Supports licensed software "Video Viewer" / Internet Explorer, Mozilla Firefox & Google Chrome web browsers / QuickTime (10 users access simultaneously)	
		*Operating System: Windows 7 / Vista / XP / 2000	
Network Protocol		TCP/IP, PPPOE, DHCP and DDNS	
Remote Independent Operation		YES	
Event Notification		By FTP / E-Mail	
R.E.T.R. (Remote Event Trigger Recording)		YES	
IR Remote Control		YES (IR receiver built-in)	
Mobile Surveillance		YES (including iPhone, BlackBerry, Windows Mobile, & Symbian)	
Picture Zoom		2X digital zoom	
PTZ Control		YES	
Alarm I/O		4 inputs, 1 output	
Key Lock (Password Protection)		YES	
Local User Level		Administrator & Operator	
Video Loss Detection		YES	
Camera Title		Supports up to 6 letters	
Video Adjustable		Hue / Saturation / Contrast / Brightness	
Date Display Format		YY/MM/DD, DD/MM/YY & MM/DD/YY	

Daylight Saving	YES
Power Source (±10%)	DC 19V
Power Consumption (±10%)	< 42 W
Operating Temperature	10°C ~ 40°C (50°F~104°F)
Dimensions (mm)**	343(W) × 59(H) × 223(D)
System Recovery	System auto recovery after power failure
Optional Peripherals	Keyboard controller

\* The specifications are subject to change without notice.  
\*\* Dimensional Tolerance: ±5mm

## APPENDIX 2 PIN CONFIGURATION

- For 16CH Model

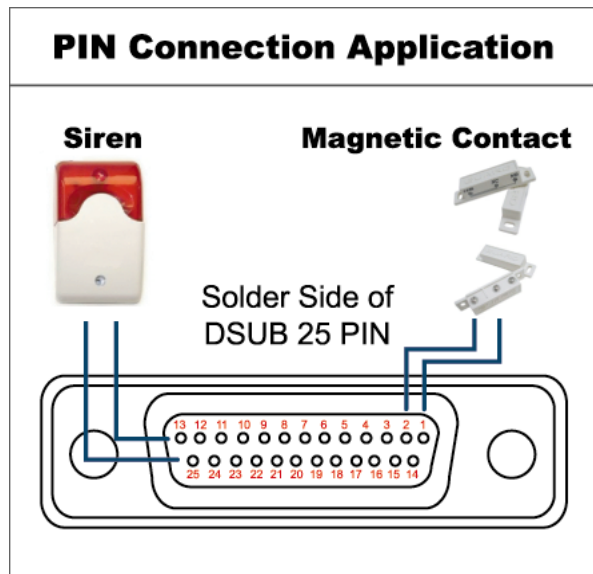

### Siren:


When the DVR is triggered by alarm or motion, the COM connects with NO and the siren with strobe starts wailing and flashing.

### Magnetic Contact:

When the magnetic contact is opened, the alarm will be triggered and the recording is on.

PIN	FUNCTION	DESCRIPTION																											
1	GND	GROUND																											
2~9	ALARM INPUT	<p>Connect ALARM INPUT (PIN 2 -- 9) and GND (PIN 1) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on.</p> <table> <tr> <th>PIN</th><th>Alarm</th><th>Corresponding video channel</th></tr> <tr> <td>PIN 2</td><td>1</td><td>CH1</td></tr> <tr> <td>PIN 3</td><td>3</td><td>CH3</td></tr> <tr> <td>PIN 4</td><td>5</td><td>CH5</td></tr> <tr> <td>PIN 5</td><td>7</td><td>CH7</td></tr> <tr> <td>PIN 6</td><td>9</td><td>CH9</td></tr> <tr> <td>PIN 7</td><td>11</td><td>CH11</td></tr> <tr> <td>PIN 8</td><td>13</td><td>CH13</td></tr> <tr> <td>PIN 9</td><td>15</td><td>CH15</td></tr> </table>	PIN	Alarm	Corresponding video channel	PIN 2	1	CH1	PIN 3	3	CH3	PIN 4	5	CH5	PIN 5	7	CH7	PIN 6	9	CH9	PIN 7	11	CH11	PIN 8	13	CH13	PIN 9	15	CH15
PIN	Alarm	Corresponding video channel																											
PIN 2	1	CH1																											
PIN 3	3	CH3																											
PIN 4	5	CH5																											
PIN 5	7	CH7																											
PIN 6	9	CH9																											
PIN 7	11	CH11																											
PIN 8	13	CH13																											
PIN 9	15	CH15																											
10~11	PIN OFF	NA																											
12	RS485-A																												
13	EXTERNAL ALARM NO	<p>Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO.</p> <p>Attention: The voltage restriction is under DC24V 1A.</p>																											
14	PIN OFF	NA																											
15~22	ALARM INPUT	<p>Connect ALARM INPUT (PIN 15 – 22) and GND (PIN 1) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on.</p> <table> <tr> <th>PIN</th><th>Alarm</th><th>Corresponding video channel</th></tr> <tr> <td>PIN 15</td><td>2</td><td>CH2</td></tr> <tr> <td>PIN 16</td><td>4</td><td>CH4</td></tr> <tr> <td>PIN 17</td><td>6</td><td>CH6</td></tr> <tr> <td>PIN 18</td><td>8</td><td>CH8</td></tr> <tr> <td>PIN 19</td><td>10</td><td>CH10</td></tr> <tr> <td>PIN 20</td><td>12</td><td>CH12</td></tr> <tr> <td>PIN 21</td><td>14</td><td>CH14</td></tr> <tr> <td>PIN 22</td><td>16</td><td>CH16</td></tr> </table>	PIN	Alarm	Corresponding video channel	PIN 15	2	CH2	PIN 16	4	CH4	PIN 17	6	CH6	PIN 18	8	CH8	PIN 19	10	CH10	PIN 20	12	CH12	PIN 21	14	CH14	PIN 22	16	CH16
PIN	Alarm	Corresponding video channel																											
PIN 15	2	CH2																											
PIN 16	4	CH4																											
PIN 17	6	CH6																											
PIN 18	8	CH8																											
PIN 19	10	CH10																											
PIN 20	12	CH12																											
PIN 21	14	CH14																											
PIN 22	16	CH16																											
23~23	PIN OFF	NA																											
24	RS485-B																												
25	EXTERNAL ALARM COM	<p>Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO.</p> <p>Attention: The voltage restriction is under DC24V 1A.</p>																											

## For 8CH Model

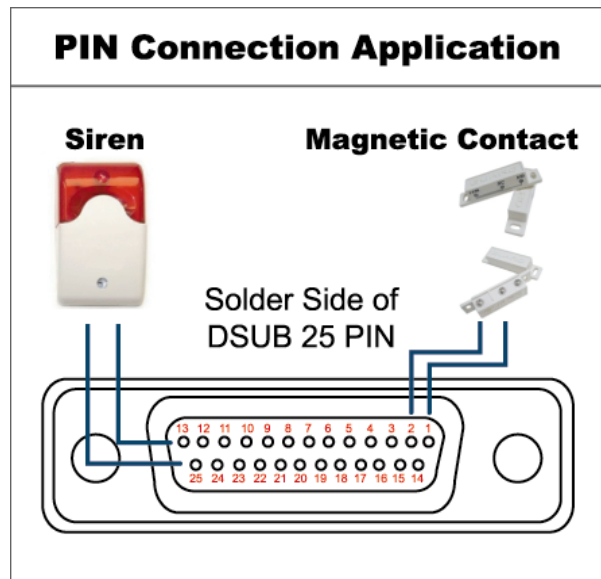**Siren:**


When the DVR is triggered by alarm or motion, the COM connects with NO and the siren with strobe starts wailing and flashing.

**Magnetic Contact:**

When the magnetic contact is opened, the alarm will be triggered and the recording is on.

PIN	FUNCTION	DESCRIPTION															
1	GND	GROUND															
2~5	ALARM INPUT	<p>Connect ALARM INPUT (PIN 2 – 5) and GND (PIN 1) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on.</p> <table> <tr> <th>PIN</th><th>Alarm</th><th>Corresponding video channel</th></tr> <tr> <td>PIN 2</td><td>1</td><td>CH1</td></tr> <tr> <td>PIN 3</td><td>3</td><td>CH3</td></tr> <tr> <td>PIN 4</td><td>5</td><td>CH5</td></tr> <tr> <td>PIN 5</td><td>7</td><td>CH7</td></tr> </table>	PIN	Alarm	Corresponding video channel	PIN 2	1	CH1	PIN 3	3	CH3	PIN 4	5	CH5	PIN 5	7	CH7
PIN	Alarm	Corresponding video channel															
PIN 2	1	CH1															
PIN 3	3	CH3															
PIN 4	5	CH5															
PIN 5	7	CH7															
6 ~ 11	PIN OFF	NA															
12	RS485-A																
13	EXTERNAL ALARM NO.	<p>Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.</p>															
14	PIN OFF	NA															
15~18	ALARM INPUT	<p>Connect ALARM INPUT (PIN 15 – 18) and GND (PIN 1) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on.</p> <table> <tr> <th>PIN</th><th>Alarm</th><th>Corresponding video channel</th></tr> <tr> <td>PIN 15</td><td>2</td><td>CH2</td></tr> <tr> <td>PIN 16</td><td>4</td><td>CH4</td></tr> <tr> <td>PIN 17</td><td>6</td><td>CH6</td></tr> <tr> <td>PIN 18</td><td>8</td><td>CH8</td></tr> </table>	PIN	Alarm	Corresponding video channel	PIN 15	2	CH2	PIN 16	4	CH4	PIN 17	6	CH6	PIN 18	8	CH8
PIN	Alarm	Corresponding video channel															
PIN 15	2	CH2															
PIN 16	4	CH4															
PIN 17	6	CH6															
PIN 18	8	CH8															
19~23	PIN OFF	NA															
24	RS485-B																
25	EXTERNAL ALARM COM	<p>Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.</p>															

- For 4CH Model

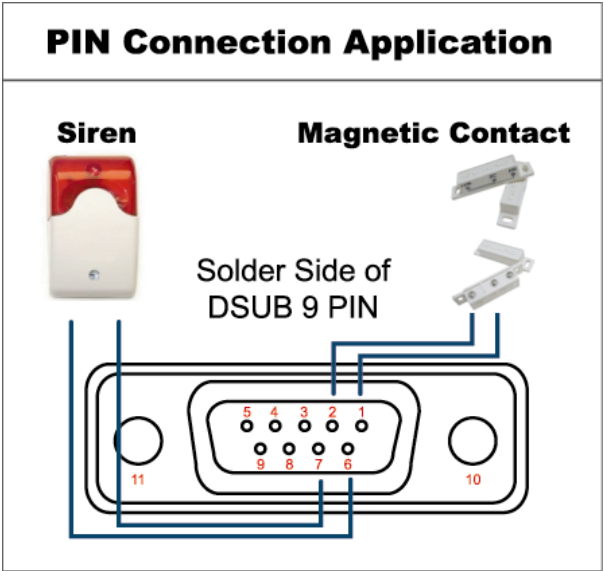

**Siren:**

When the DVR is triggered by alarm or motion, the COM connects with NO and the siren with strobe starts wailing and flashing.

**Magnetic Contact:**

When the magnetic contact is opened, the alarm will be triggered and the recording is on.

PIN	FUNCTION	DESCRIPTION															
1~4	ALARM INPUT	Connect ALARM INPUT (PIN1 – 4) and GND (PIN5) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on. <table><tr><th>PIN</th><th>Alarm</th><th>Corresponding video channel</th></tr><tr><td>PIN 1</td><td>1</td><td>CH1</td></tr><tr><td>PIN 2</td><td>2</td><td>CH2</td></tr><tr><td>PIN 3</td><td>3</td><td>CH3</td></tr><tr><td>PIN 4</td><td>4</td><td>CH4</td></tr></table>	PIN	Alarm	Corresponding video channel	PIN 1	1	CH1	PIN 2	2	CH2	PIN 3	3	CH3	PIN 4	4	CH4
PIN	Alarm	Corresponding video channel															
PIN 1	1	CH1															
PIN 2	2	CH2															
PIN 3	3	CH3															
PIN 4	4	CH4															
5	GND	GROUND															
6	EXTERNAL ALARM COM	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.															
7	EXTERNAL ALARM NO	Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A.															
8	RS485-A																
9	RS485-B																
10~11	GND	GROUND															

## APPENDIX 3 COMPATIBLE USB FLASH DRIVE LIST

Please upgrade the firmware of the DVR to the latest version to ensure the accuracy of the following table. If the USB flash drive is not supported by the DVR, the “USB ERROR” message will be shown on the screen.

**Note:** Please use your PC to format the USB flash drive as “FAT32”.

**Note:** You can backup up to 2GB video data for one-time USB backup. To backup more data, please set the time & channel(s) you want, and start USB backup again.

MANUFACTURER	MODEL	CAPACITY
Transcend	JFV35	4G
	JFV30	8G
Kingston	DataTraveler	1G
PQI	U172P	4G
Apacer	AH320	2GB
	AH320A	8GB
	AH220	1GB
	AH320	4GB
A-data	RB-18	1GB
Sandisk	Cruzer Micro	2G
	Cruzer Micro	4G
	Cruzer4-pk	2G
Netac	U208	1G
MSI	F200	4G
SONY	Micro Vault Tiny 2G	2G
	Micro Vault Tiny 4G	4G
	Micro Vault Tiny	1G





## APPENDIX 4 COMPATIBLE SATA HDD LIST

Please upgrade the firmware of the DVR to the latest version to ensure the accuracy of the following table.

MANUFACTURER	MODEL	CAPACITY	ROTATION
Seagate	ST3320613AS	320GB	7200 rpm
	ST33500320AS	500GB	7200 rpm
	ST3750330AS	750GB	7200 rpm
	ST31000340AS	1000GB	7200 rpm
WD	WD3200AAKS	320GB	7200 rpm
	WD5000AACS	500GB	7200 rpm
	WD6400AAKS	640GB	7200 rpm
	WD7500AAKS	750GB	7200 rpm
	WD10EADS	1TB	7200 rpm
	WD15EADS	1.5TB	7200 rpm
	WD20EADS	2TB	7200 rpm
Maxtor	STM3500320AS	500GB	7200 rpm
	STM3750330AS	750GB	7200 rpm
HITACHI	HDT725032VLA360	320GB	7200 rpm
	HDS721010KLA330	1000GB	7200 rpm

# APPENDIX 5 MAIN MENU STRUCTURE

	QUICK START	GENERAL	CHANNEL TITLE
			EVENT STATUS
			DATE DISPLAY
			IMAGE SIZE <i>(Selected Models Only)</i>
			QUALITY <i>(Selected Models Only)</i>
			IMAGE PER SECOND <i>(Selected Models Only)</i>
			RECORD CONFIGURATION <i>(Selected Models Only)</i>
		TIME SETUP	DATE
			TIME
	DATE SETUP	DATE INFO	DISPLAY DATE OF MODE
			FORMAT
		DAYLIGHT	DAYLIGHT SAVING
	SYSTEM	TOOLS	LANGUAGE
			ADMIN PASSWORD
			OPERATOR PASSWORD
			UPGRADE
		SYSTEM INFO	BAUD RATE
			HOST ID
			R.E.T.R.
			AUTO KEY LOCK
			CLEAR HDD
			RESET DEFAULT
			REMOTE CONTROL ID
			SERIAL TYPE
			VIDEO FORMAT
			VERSION
		USB BACKUP	
		DVD BACKUP	
	EVENT INFORMATION	QUICK SEARCH	
		EVENT SEARCH	
		HDD INFO	
		EVENT LOG	
	ADVANCE CONFIG	CAMERA	BRIGHTNESS
			CONTRAST
			SATURATION
			HUE
			COV.
			REC
			CHANNEL TITLE
		DETECTION	LS
			SS
			TS
			DET
			ALARM
			AREA
		ALERT	EXT. ALERT
			INT. BUZZER
			KEY BUZZER
			VLOSS BUZZER
			MOTION BUZZER
			ALARM BUZZER
			HDD BUZZER
			ALARM DURATION (SEC)
			HDD NEARLY FULL (GB)
		NETWORK	NETWORK
		SNTP	SNTP
			FTP
			E-MAIL
		DISPLAY	DE-INTERLACE <i>(Selected Models Only)</i>
			FULL SCREEN DURATION
			QUAD SCREEN DURATION <i>(Selected Models Only)</i>
			DWELL SCREEN DURATION
			DISPLAY COVERT
			HDD DISPLAY MODE
			DISPLAY OUTPUT PATH
			ALPHA BLENDING

	ADVANCE CONFIG	RECORD	MANUAL RECORD ENABLE
			EVENT RECORD ENABLE
			TIMER RECORD ENABLE
			EVENT RECORD IPS
			TIMER RECORD IPS
			PRE-ALARM RECORD
			OVERWRITE
			EVENT RECORD ALL CHANNEL
			KEEP DATA LIMIT (DAYS)
		REMOTE	
		DCCS	
		IVS	CAMERA <i>(Selected Models Only)</i>
			IVS MODE
			DISPLAY LINE
			SENSITIVITY
			RESET COUNT
			VIRTUAL FENCE AREA
			SCENE CHANGE
			SCENE CHANGE SENSITIVITY
		NOTIFY	GUARD
	SCHEDULE SETTING	RECORD	
		DETECTION	

## APPENDIX 6 DVR BATTERY REPLACEMENT

DVR time reset after power failure, for example, caused by a power outage, will cause the disorder of the recorded data, and users may have problems in searching the event clip they want. To keep the DVR time from resetting, a non-chargeable lithium battery, CR2032, is installed in the DVR.

However, the DVR time might still get reset when the DVR battery is low or even running out of power. If so, please replace the DVR battery, CR2032, **right away** as instructed below.

### ➤ How to replace CR2032

---

**Note:** The lithium battery, CR2032, is a non-chargeable battery, and should be purchased separately. Please replace only with the same or equivalent type battery in case of danger.


---

Step1: Stop all DVR recording **immediately** to prevent the disorder of the recorded data. Then, back up the recorded data if necessary.

Step2: Power off the DVR, and disconnect the DVR power.

Step3: Remove the DVR cover, and find the battery on the mainboard.

Step4: Push the release as indicated below to remove the battery.

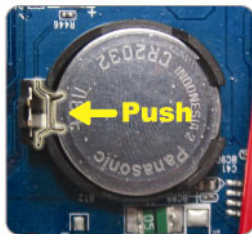

Step5: Get a new battery with the side of “CR2032” facing up, and install it to the mainboard.

Step6: Replace the DVR cover and connect to power.

Step7: Set DVR date & time, and resume recording. For details, please refer to “2.4 Date and Time Setting” at page 7, and “5.5.7 RECORD” at page 27.