

Altronic Distributors warrants this product for two years from the date of purchase from Altronics or its resellers to the consumer.

During the warranty period, we undertake to repair or replace your product at no charge if found to be defective due to a manufacturing fault. The warranty excludes damage by misuse or incorrect installation (i.e. failure to install and operate device according to specifications in the supplied instruction manual), neglect, shipping accident, or no fault found, nor by use in a way or manner not intended by the supplier.

For repair or service please contact your **PLACE OF PURCHASE**.

If this item was **purchased directly from Altronics** please make a warranty claim by:

1. **FOR MAIL ORDER CUSTOMERS** (includes school and trade orders),
  - a) Ringing us on 1300 797 007 and quoting your tax invoice number.
  - b) Upon contacting Altronics, we will issue an R.A. (Return Authorisation). As Altronics have a number of service agents throughout Australia, a copy of the R.A. will be emailed, faxed or mailed to you with full instructions of how and where to send the goods. The freight for shipping goods back to Altronics for all repairs is at the customers expense.
  - c) A copy of the R.A. form, (or at the very minimum, the R.A. number) must accompany the goods to effect the repair.
  - d) Altronics will pay the return freight to the customer where the warranty claim has been accepted.
  - e) Please quote the R.A. number in any correspondence to us.
2. **FOR OVER THE COUNTER PURCHASES**; to make a warranty claim, please return the goods to us in any of our stores, with a copy of your proof of purchase (tax invoice).
  - a) Upon leaving the goods at one of our stores, an R.A. number will be issued to you.
  - b) Once repaired, you will be contacted, advising that the goods are ready to be collected from the store.

It is at Altronics discretion as to whether the goods will be repaired or replaced (whilst under warranty); and as to whether identical goods will be used to replace the item due to changes of models / products.

Note: Under no circumstances should you attempt to repair the device yourself or via a non-authorized Altronics service centre, as this will invalidate the warranty!

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Distributed by Altronic Distributors Pty. Ltd.  
Phone: 1300 780 999 Fax: 1300 790 999  
Internet: [www.altronics.com.au](http://www.altronics.com.au)



## T 2418A Temperature Controlled 80 Watt Soldering Station Operating Instructions



- LED display
- Simple push button operation
- Silicone burn proof iron lead
- Free standing iron holder with tip cleaner
- Temperature adjustable
- Temperature correction adjustment
- Suitable for ROHS compliant soldering
- ESD safe and spike free circuitry
- Grounding socket

## Overview

Thank you for purchasing the T 2418A soldering station – a great solution for your soldering equipment needs! We believe that you will be more than satisfied with the many features and the versatility of your new soldering station. Please carefully read the instruction manual prior to operation to maximize the advantages of using your new soldering station.

**WARNING:** This appliance is not intended for use by children or infirm persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance. Failure to observe this safety regulation could result in a risk to life and limb. The manufacturer or supplier shall not be liable for damage resulting from misuse of the unit or unauthorised alterations.

## Caution:

### DO NOT WORK ON LIVE CIRCUITS

- Before working on any mains powered equipment, make sure that it is turned off, and the mains plug is removed from the power point. You must not undertake work on live parts.

### DO NOT USE IF DAMAGED

- If the power lead becomes damaged or the soldering station becomes faulty, discontinue use immediately.

**Caution: Soldering irons operate at high temperatures and can easily burn the skin and/or objects. Do not touch the tip and heater at any time and keep it a safe distance from flammable materials while the unit is on, or while cooling after switching off. Please allow a sufficient time for it to cool before changing tips.**

## Product Description

The T 2418A digital readout, electronically temperature controlled soldering station has been designed to meet the present and future soldering needs of the electronic production industry, hobbyist and student.

The unit has a slender soldering iron pencil design with a comfortable rubber grip that prevents operator fatigue. The soldering iron is attached to the base unit using a burn-proof silicone cord.


The electronic circuitry enables the user to adjust the temperature from 150°C (302°F) to 480°C (896°F) without changing the tip. The temperature is maintained to within ±5°C of its idling temperature due to the characteristics of its PTC component. The T 2418A incorporates heater failure detection, where, if the heater circuit fails the display will read “H-E” and power will automatically be cut off to the heater. Also the temperature can be locked by a temperature lockout code that is convenient for production line management.

The electronic “ZERO VOLTAGE” switching protects voltage and current sensitive components, such as “CMOS” devices against transient voltage spikes, that can be caused by switching the power or heater on/off or other environmental conditions.

The specifically designed heater brings the temperature up to approximately 480°C (full setting) in about one minute. This results in very fast heat-up, instant recovery, and superior heat transmission.

The tip is grounded through the power unit to ensure leakage of less than 0.4 millivolts, and a wide selection of long-lasting, nickel/chrome plated and pre-tinned tips are available to meet all your soldering needs.

## Handle Exploded View Diagram

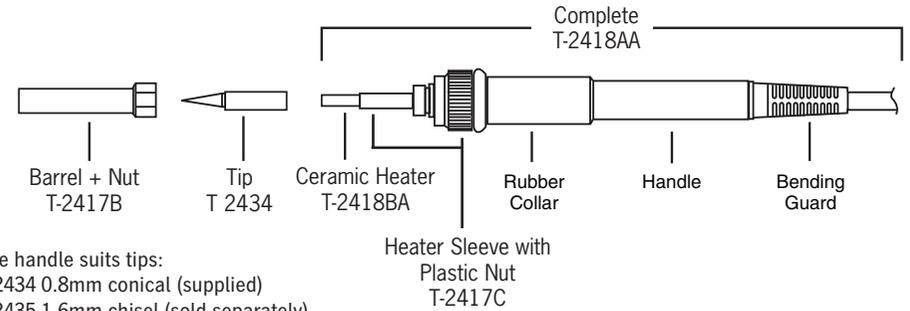

The handle suits tips:  
 T 2434 0.8mm conical (supplied)  
 T 2435 1.6mm chisel (sold separately)  
 T 2436 3.2mm chisel (sold separately)

## MICRON

should only be used to tighten the nut to avoid burning your fingers and care should be taken not to over-tighten as this would damage the element. The solder tips supplied are nickel/chrome plated pure copper and if used properly will give a long life.

### Remember to tin all new tips before use. Refer to item 3 in the Operating Instructions

1. Always keep tips tinned before returning to the holder, switching off or storing for any period of time. Wipe only before using.
2. Don't keep iron set at a high temperature for long periods of time as this will break down the surfaces of the tip.
3. Don't put any excessive pressure on a tip or rub a tip on a joint. It does not improve the heat transfer but only damages the tip.
4. Never clean the tip with abrasive materials or a file.
5. Don't use a flux containing chloride or acid. Use only rosin or activated resin fluxes.
6. If any oxide does form, it can be cleaned by lightly rubbing with a 600-800 grit emery cloth, or cleaning with isopropyl alcohol or equivalent. After cleaning, wet the tip and wrap rosin-core solder completely around the newly exposed surfaces.

### GENERAL CLEANING:

The outer cover of the iron and station may be cleaned with a damp cloth using small amounts of liquid detergent. Never submerge the unit in liquid or allow any liquid to enter the case of the station. Never use any solvent to clean the case.

## T 2418A Specifications

Input: .....220-240Va.c. 50Hz  
Output: .....80W  
Fuse (fast type): .....M205 type 0.5A  
Temperature range: .....150°C to 480°C (302°F to 896°F)  
Temperature correction range: .....+99°~ -99°C / +210°F~ -210°F

## MICRON



### Front panel

1. Temperature display readout
2. Celsius / Fahrenheit readout
3. Heat indicator light
4. "5": Temp up key
5. "6": Temp down key
6. "SET": Function key
7. Mains power switch

## Operating Instructions

1. Ensure that the power switch on the base unit is in the OFF position.
2. Plug in AC power cord and turn the mains power switch to ON, and the soldering station Power switch to ON.  
  
The LED display will illuminate and show the temperature value.
3. For tip first time use, the tip should be tinned immediately after switching on and warm up of the tip. The optimum temperature for tip tinning is 250°C (482°F). Press the 5 key up until 250°C (482°F) displays. (If the unit is set to degrees Centigrade, the temperature display window of the upper right corner shows °C, and if it is set to degrees Fahrenheit, the temperature display window of the upper right corner shows °F). When the unit reaches the display set temperature, the heater indicator light (Item 3, above) flashes to indicate the unit has reached the set operating temperature. Once operating temperature has been reached, tin the surface of the tip by applying a new covering of solder to the tip. Tip tinning is necessary to protect the life of the tip.
4. Once the tip is tinned, press the key 5 or 6 to choose the desired operating use temperature. The unit now is ready for use. Further information on recommended tip temperature settings is given on page 4 of this manual.

### TO ADJUST TEMPERATURE SETTING: (No lockout set)

1. To increase the temperature: Press the 5 key once, and the display will increase 1 numeral. For fast increment of the temperature setting, press and hold the 5 key for two seconds until you reach the desired temperature.
2. To decrease the temperature press 6 key, following the same procedure as above.

### PARAMETER SETTINGS:

The parameters that can be adjusted are overleaf. To enter parameter setting mode:

1. Press SET key and hold until display shows " — — —"
2. Release the SET key. The display " — — —" will start to flash.

## MICRON

3. Input the factory default lock setting of "010" by incrementing the 5 key.
4. Press SET key again and the display will show F-0 and flash. There are 3 parameters that can be set.  
Parameter F-1 is temperature lock setting.  
Parameter F-2 is temperature correction setting.  
Parameter F-3 is to change between Fahrenheit and Centigrade (Celsius) temperature selection
5. To select parameter setting, press the 5 or 6 to scroll through to the parameter setting you desire set.

Note that the unit returns to normal operation after 15 seconds if no key is pressed.

### TEMPERATURE ADJUSTMENT LOCKOUT SETTING:

When the LED displays "F-1" and flashes, press SET key and the unit enters the temperature adjustment lockout status. At this moment, the LED displays the preset value. If "000" is set, this means the unit has no temperature lock.

Press 5 or 6 key to change temperature adjustment lockout value. The temperature adjustment lockout is number "100". Once the number is entered, press SET key again to finish setting.

The user can now continue to set other parameters.

### TEMPERATURE CORRECTION SETTING:

When the LED displays "F-2" and flashes, press SET key to enter Temperature Correction Mode. At this moment, the LED displays preset correction value.

#### A: Centigrade temperature correction +99°C ~-99°C

Press 5 or 6 key to change the temperature correction amount. If the temperature on the display is more than the temperature of the tip, input a positive figure. For example If the current display set temperature is 200°C, the actual temperature of the tip is only 190°C, and the temperature offset is 00, enter +10°C.

If there is already a temperature offset, then increment the temperature offset by +10°C. That is, if the offset temperature is already 5°C, then the new temperature offset will be 15°C

If the temperature on the display is less than the temperature of the tip, enter a negative figure by pressing the 6 key until the desired amount is displayed.

The first digit will display "—" (minus).

#### B: Fahrenheit temperature correction value +210°F ~-210°F

Fahrenheit temperature correction is the same as above, except that the adjustment can be up to 3 digits, and the negative symbol will not display.

### FAHRENHEIT AND CENTIGRADE (CELSIUS) TEMPERATURE SELECTION:

When the display shows "F-3" and is flashing, press the SET button. The display will show the current setting - for Celsius °C: or Fahrenheit: °F. To change the temperature selection setting, press 5 or 6 key. To save the setting, press SET key.

### RECOMMENDED SOLDERING WORKING TEMPERATURES:

A low iron temperature will slow the flow of solder. A high temperature will burn the flux in the solder, which in

## MICRON

turn will emit a heavy white smoke, resulting in a dry joint or damage to the PCB. When the tip working temperature is within the correct parameters suited to the particular solder being used, a good joint is assured.

The most common solder alloy used in the electronics industry is 60% tin, 40% lead (60/40). The tip working temperature of solder is detailed below and can vary slightly from manufacturer to manufacturer.

Melting point .....215°C (419°F)

Normal operation .....320°C (608°F)

Production line operation .....380°C (716°F)

Desoldering operation for small joint .....320°C (608°F)

Desoldering operation for larger joint .....400°C (752°F)

To meet RoHS (European requirement for lead free solder), the 60/40 solder alloys are not allowed in the production process. The RoHS lead free solder alloys require a working temperature of about 30°C (54°F) higher than typical 60/40 lead/tin soldering.

The lead free solder working temperature is detailed below and can vary from manufacturer to manufacturer.

Melting point .....220°C (428°F)

Normal operation.....300-360°C (572-680°F)

Production line operation.....360-410°C (680-770°F)

**IMPORTANT:** The temperature above 410°C (770°F) is not recommended for normal soldering functions, but can be used for short periods of time when high temperatures are required. **Please note** that the lead free solder alloys require a higher soldering temperature which shortens tip life.

### COMMON CAUSES OF TIP UNWETTING: (solder not taking)

1. Tip temperature higher than 410°C (770°F).
2. The tip working surfaces are not well tinned while the iron is idling.
3. Lack of flux in soldering, wicking, repairing, and touch-up, etc operation.
4. Wiping tip on a high sulphur content sponge, dirty or dry sponge, and/or rag.
5. Contact with organic materials such as plastic resins, silicone grease and other chemicals.
6. Impurities in solder and low tin content.

### TIP REPLACEMENT AND CARE OF TIPS:

**Caution:** The soldering iron can be very hot. Be sure to turn the unit off prior to carrying out any maintenance or trouble shooting steps listed below.

**IMPORTANT:** Remove and clean the tip daily. Tips can be changed or replaced simply by unscrewing the knurled nut barrel assembly. The station must be switched off and allowed to cool before this operation as damage may result if the system is left on without the tip inserted.

If a new tip is installed, or to maintain the current tip, remove any loose build up in the barrel assembly, otherwise the tip may fuse to the heating element or retaining barrel. After removing the tip, blow out any oxide dust that may have formed in the tip retaining area of the barrel. Be careful to avoid getting dust in your eyes. Replace the tip and screw back the knurled nut barrel assembly using only firm hand pressure to tighten. Pliers